

Operating Instructions Dehumidifier



Model No. **F-YVB38H**

This product is for indoor use only

Contents

< Page >

Safety precautions	2~4	Preparing for use
Parts name	5	
Control panel / Combination Key	6	
Note	7	

Operation mode	8	Operation
To set humidity manually	9	
Quiet Dry / Quick Dry / Airflow selection	10	
To use shoe dryer mode	11	
nanoe®X bacteriostasis and deodorization ...	12	
Air direction selection	13	
Timer / Sound / Key lock / Brightness settings	14	
Handling of louver falling off / Handling of full water tank	15	
How to drain continuously	16	
Maintenance	17~18	
● About Laundry mode	18	

Troubleshooting	19~20	Trouble shooting
Emergency measures	21	
Specifications	22	

Correct use will help you save electricity

Warranty card included Separately

Thank you for purchasing this Panasonic product.

- Please read these operating instructions carefully, in order to use the product correctly and in a safe manner.
- Please read the "Safety precautions" section (page 2~4) carefully before use.
- Make sure that the correct information is written on the warranty card, including the date of purchase and the name of the distributor. Send the warranty card back within ten days of purchase. Keep the warranty documentation in a safe place along with the operating instructions for future reference.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Please disconnect the power plug and empty the tank before doing any maintenance work.

Safety precautions

Always pay attention to these precautions

To prevent users and others bodily harm or property losses, please follow safety precautions below.

■ Ignoring precaution symbols may lead to incorrect operation, causing harm or damage which can be categorized into 2 types.

 **WARNING** This symbol indicates the "Possibility of death or serious injury".

 **CAUTION** This symbol indicates the "Possibility of injury or damage to property".

■ Meanings of symbols are categorized as shown below.



This symbol indicates an action that "requires caution".



This symbol indicates a "never do this" action.



This symbol indicates an "always do this" action.

WARNING

■ Do not do anything that may damage the power cord or power plug.



Do not damage, modify, bend strongly, pull, place heavy objects on top or binding with nylon yarn or wire on power plug. Using damaged power cord may result in electric shock, short circuit, causing fire.

● If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

■ Do not unplug the power plug with wet hands.




Electric shocks may occur.

■ Avoid using the power cord if it is damaged or modified




Damage from heavy objects placed on top, heating, or pulling could cause fire or electric shock.

■ Do not overload the rated current of the power outlet and wiring equipment.

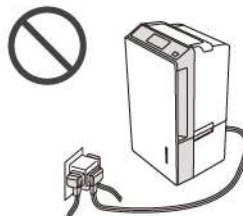

Using too many circuits may overload the rated current of the power outlet, cause fire by overheating.

■ Do not use a damaged power cord

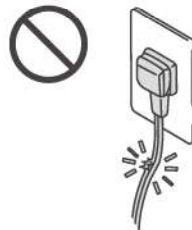


Using damaged power cord, electric shocks or fire may occur. Please consult an authorized dealer, agent or service centre for repair.

■ Do not start or stop the unit by plugging or unplugging the power plug.



It may cause fire or electric shocks by overheating.

■ Insert the power plug completely

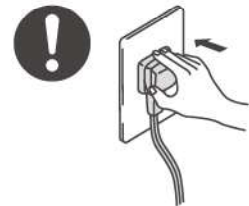

If the power plug is not inserted securely, fire may occur due to overheating.

● Do not use damaged power plugs or loose wall sockets.

■ Do not use the voltage other than as specified for unit.



It may cause fire or electric shocks by overheating.


⚠️ WARNING

- Do not insert fingers or other objects into the air inlet or outlet.



The rotating fan operating in high speed inside the unit could cause injury.

- Do not place the unit near a heater.

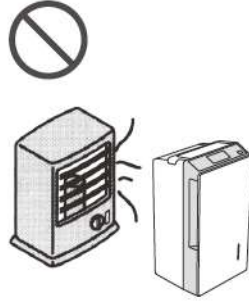

Plastic parts may melt and cause fire.

- Never try to repair the unit by yourself.



Fire or electric shock may occur.

- Please contact an authorized dealer, agent or service station for repair.

- Switch off and then unplug the power plug when error occurs (smoke etc.)

- Incorrect On/Off operations.
- Electric leakage or frequent blown fuse from switch.
- Power cord or power plug heats up abnormally.
- Burning smell or abnormal noise during operation.
- Water leakage from the unit.
- Other abnormal faulty condition.

It may cause fire or electric shock by overheating.

- Please contact an authorized dealer, agent or service station for repair.

- Do not unplug with force.



Unplugging with force may damage the power cord, cause electric shock or fire due to short circuit.


- Periodically clean the dust and dirt on the power plug.



If dust accumulates on the power plug, humidity may cause damage to insulation and may result in fire.


- Unplug the power plug and wipe it with a dry cloth.
- If not using the unit, unplug the power plug.

- Do not stretch the power cord.

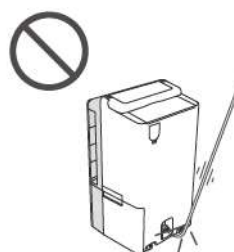

It may cause short circuit or damage to wiring, potentially causing fire and electric shock.

- Do not pull the power cord when carrying or storing the unit.

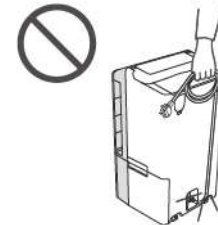

It may cause short circuit or damage to wiring, potentially causing fire and electric shock.

⚠️ CAUTION

- Monitor indoor temperature during prolonged operation.



During operation, heat from the unit may cause indoor temperature to rise. Operating in closed room may cause discomfort.


- Pay particular attention if infants or the elderly are present.

- Do not operate in areas where water may be easily splashed onto the unit.



Fire or electric shock may occur

- Place the unit on a stable and sturdy floor.

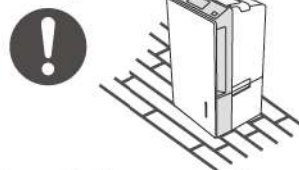

If the unit tilts, water will splash onto your property potentially causing fire or electric shock.

- Do not use the unit near flammable gas.



Fire may occur if flammable gases permeate the surrounding space.

- Do not use in confined spaces such as closets.



If there is insufficient ventilation, overheating and fire may occur.

- Do not use in places exposed to direct sunlight, wind or rain.




Fire or electric shock may occur due to heat.

Safety precautions

⚠ CAUTION

- Do not use in place where artworks or academic documents are present.

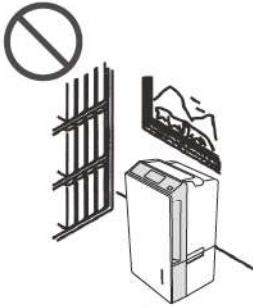

Deterioration of stored articles may occur.

- Do not place flower vases or other water container on top of the unit.



Water may spill into the unit and fire or electric shock may occur.

- Do not wash the dehumidifier directly with water.



Water leakage may cause electric shock.

- Do not clean your product by spraying insecticides to it or wiping it with benzene or thinner.



Fire, electric shock, damage to household items caused by water leakage may occur.

- Do not place any heat or flame producing instrument in air outlet of the unit.




Incomplete combustion may cause carbon monoxide poisoning.

- Do not cover the air inlet or air outlet with cloths or towels.




Air circulation will decrease and overheating or fire may occur.

- Do not sit or climb on the unit.

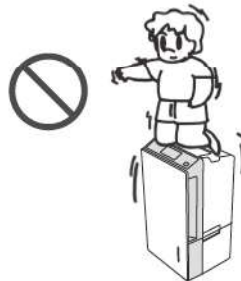

You may fall over, and may be injured.

- Do not move or transport the unit by holding the louvers.

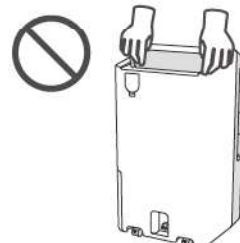


The unit may fall down and injury may occur.

- When moving the dehumidifier, turn off the unit and empty the water in the water tank.




Water leakage may damage the household items or property causing accidents. (People may be injured and may cause fire or electric shock.)

- When the unit is to be cleaned, switch off and unplug.

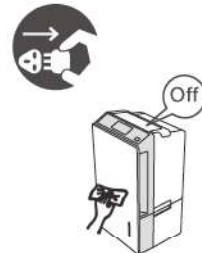

The rotating fan operating in high speed inside the unit may cause injury.

- If the unit is unused for a long period, unplug the power plug for safety reasons.

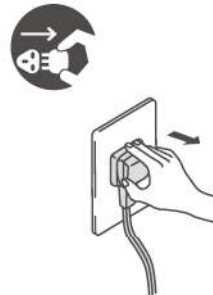

Accumulation of dust and foreign objects may lead to heat and fire may occur.

- After prolonged use, inspect the unit periodically.



Particularly the air filter and drains should be checked routinely to avoid overheating and leakage, resulting in house fires and wet property.

Parts name

Front

Control panel

(Please peel off the protective)

Front panel

Indicator Light

Air Filter
(P.18)

Please do not block
air inlet to avoid
poor ventilation

Note

Remove the front panel:
Please put your hands on the
protrusions on both sides under the
front panel, and pull it up.



Accessories



Hose assembly

(Maximum length after extension
is about 60 cm.)



Shoe dryer
accessory



Cabinet dryer
accessory

Note

- When removing the shoe drying accessories,
please do not hold the hose part, as this may
cause an accident. If the hose part is accidentally
rotated open, please reinstall it according to the
thread direction.



CAUTION

- Do not move the unit with
force on the floor or carpet,
also when tank is filled with
water. (May cause the unit
to fall or spill water
potentially causing accident
or property damage.)



Where to use

- At least 20 cm distance from
the wall. (Walls and furniture
near unit, may be stained by
electrostatic.)
- At least 1 m distance from
any TV, radio (To prevent
screen interference, noise)

Note

Casters without brakes
(2 at the bottom/front of the main body)
Casters with brakes
(2 at the bottom/rear of the main body)

Water outlet

Float (Inside the
water tank)

Tank cover

Tank handle

Water tank

Handle

Louver

Air outlet

Shoe dryer accessory
installation hole

Power plug

※Remove bandage
before use.

Brake wheel

The water tank may contain water
residue at time of purchase.
This is from final product testing at
the factory and is not due to a
defect.

Control panel

Indicators: ECONAVI indicator (P.8), Intelligent dryness monitoring system (P.8), Auto stop indicator (P.8), nanoeX indicator (P.8), Shoe dryer indicator (P.11), Full Tank indicator (P.15).
Buttons: Quick dry button (P.10), Shoe dryer button (P.11), Quiet dry button (P.10), Air volume button (P.10), Louver button (P.13), Humidity button (P.9), Power Off/On button (P.8~P.11), Key lock (P.14), Timer button (P.14), Function selection button (P.8).

LCD indicator

Unpowered: The LCD display shows 'Airflow' and 'Louver' icons, and a percentage sign (%). The right side shows 'Keep Dry', 'Laundry', 'Auto', 'Mild', 'Cont.', and 'Fan' options.

Power on: The LCD display shows 'Now 50%' and '12 Hour Off'. The right side shows 'Keep Dry', 'Laundry', 'Auto', 'Mild', 'Cont.', and 'Fan' options.

Full Tank (water display flashing): The LCD display shows 'Airflow' and 'Louver' icons, and a percentage sign (%). The right side shows 'Keep Dry', 'Laundry', 'Auto', 'Mild', 'Cont.', and 'Fan' options.




When the power is on, press any button to select function. The selected function will be enclosed in frame and displayed. The LCD backlight lights up, and the backlight will automatically go off after 15 seconds.

The LCD indicator turns orange for 15 seconds then goes off. The water indicator keeps on flashing. If the water full alert is ON, the buzzer beeps for 6 seconds together with the orange indicator.

How to use combination key

On standby	Default setting	Press the "Shoe Dryer 烘鞋/衣櫃" + "Humidity 溫度設定 Key lock (Press 3 sec)" keys for about 7 seconds.
	Security lock setting	Press the "Humidity 溫度設定 Key lock (Press 3 sec)" key for about 3 seconds.
When operating	Sound setting	Press the "Louver 搖擺方向 Sound Off/On (Press 3 sec)" key for about 3 seconds.
	LED light brightness setting	Press the "Quiet Dry 靜音抽濕" key for about 3 seconds.
	Key lock setting	Press the "Humidity 溫度設定 Key lock (Press 3 sec)" key for about 3 seconds.
	nanoe [®] X setting	Press the "Shoe Dryer 烘鞋/衣櫃" key for about 3 seconds.

Note

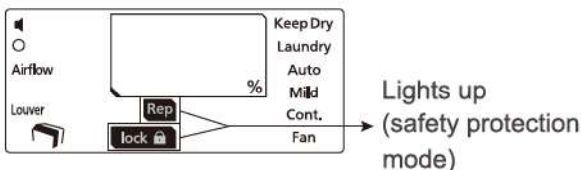Display of humidity	<p>"Hi" will be displayed if the humidity is higher than 85% and "Lo" will be displayed if the humidity is less than 24%.</p>	
Repair	<p>* When the "Rep" indicator flashes and error code "11" prompts, check the following:</p> <ul style="list-style-type: none"> ● When unit is tipped over. <ol style="list-style-type: none"> ① Unplug the power plug. ② Set the unit back upright (wipe away any spilled water). ③ Let the unit stand for half a day or more without using it. (To dry the unit inside completely in case any water has spilled inside) ④ Insert the power plug again and restart the unit. ● Does the unit tilt? <ul style="list-style-type: none"> → Unplug the power plug and then reconnect it. ● Is there a magnet or metal placed above the machine body? <ul style="list-style-type: none"> → Please remove the magnet or metal, unplug the power plug and then reconnect it. 	<p>* It indicates unit failure when the "Rep" indicator do not flashing (For example)</p>  <p>There are more error codes.</p> <p>* If the "Rep" indicator keeps flashing, the buzzer beeps constantly and error code "17" occurs, unplug the power plug immediately and consult an authorized dealer, agent or service station for repair.</p> <ul style="list-style-type: none"> ● Please unplug the power plug immediately, consult an authorized dealer, agent or service station for repair.
Full	<p>* When the "Full" indicator unit is flashing, it indicates that the tank is full of water. All functions won't be able to work if the tank remains full.</p>	
Defrost	<p>* When the "Def" indicator is flashing, the unit is defrosting. → Only the "Power On/Off" key works. Other buttons will be disabled.</p>	
Mildew prevention	<p>* Power Off mildew prevention:</p> <ul style="list-style-type: none"> * The product may continue to run 3 minutes in fan mode after operation stops (manually or by timer settings.) to dry its inner cavity for mildew prevention. Press "Power On/Off" key when in this mode to cancel this function. * This function may not be enabled depending on compressor operation time. 	
Protection	<ul style="list-style-type: none"> ● To prevent users from forgetting to switch off the unit, operation will stop automatically if not operated for 24 hours. ● If room temperature is higher than 32 °C, the airflow will increase automatically in order to protect the unit. Manual selection of airflow and air direction will be disabled. ● The unit should be operated within an indoor temperature range of 7 ~ 40 °C. Operation out of this range may cause some undesired problem. ● The unit will stop operation when power failure occurs, and return to standby mode after power recovery. To ensure compressor life, do not operate within 3 minutes after switching off the unit. 	
Safety protection	<ul style="list-style-type: none"> ● In case there is foreign matter, water, or dust inside the product, or one or more keys are pressed and held for more than 17 seconds, the safety protection mode is activated. The unit will maintain in its previous settings. No other key, except the "Power On/Off" key, functions in this mode. * The safety protection mode may run up to 10 hours and then auto power off (or by pressing "Power On/Off" key). * Once "lock" and "Rep" indicator light up, remove any foreign matter, water, and dirt or your hand from the product to exit this mode. 	
Comfort	<ul style="list-style-type: none"> ● The dehumidifier is used for daily life, such as the removal of unpleasant humidity and laundry drying. However, if ambient humidity is under 50%, the unit cannot help maintain a comfortable humid environment. 	
Default settings	<ul style="list-style-type: none"> ● Standby Press "Shoe Dryer" key and "Humidity" key simultaneously for about 7 seconds to activate. If "00" is displayed in Humidity section on LCD, the unit is reset to the default settings. * After resetting to the default settings, all operating modes will be restored to default. 	
Memory function	<ul style="list-style-type: none"> ● When you stop and start the unit, it will return to the previous mode. ● If you disconnect and connect the plug again, the unit will return to the previous mode. (Except for "Timed Settings" and abnormal shutdown.) 	

Operation mode



1 Insert the power plug Turn on the unit



- The default settings of the dehumidifier is "Cont." and the airflow is "Auto".

2 Press to select



- When the "Laundry" is started, the airflow display is forced to be "Auto". At this time, the unit will beep three times if you try to press "Airflow" key.

3 Airflow selection → P.10



4 Select the Air direction → P.13



To stop operation



- The product may continue to run 3 minutes in fan mode after operation stops to dry its inner cavity. (Power off mildew prevention P.7)
- Please unplug the power plug at least 3 minutes after stopping the operation.

To use timed power on standby mode (P.14)




To use timed power off during operation (P.14)




- When in "Laundry" mode, the ECONAVI Indicator, Auto stop Indicator intelligent dryness monitoring system will turn off in this mode.

When the Full Tank indicator is flashing (P.15)

- Operation will stop automatically → Please empty the tank.

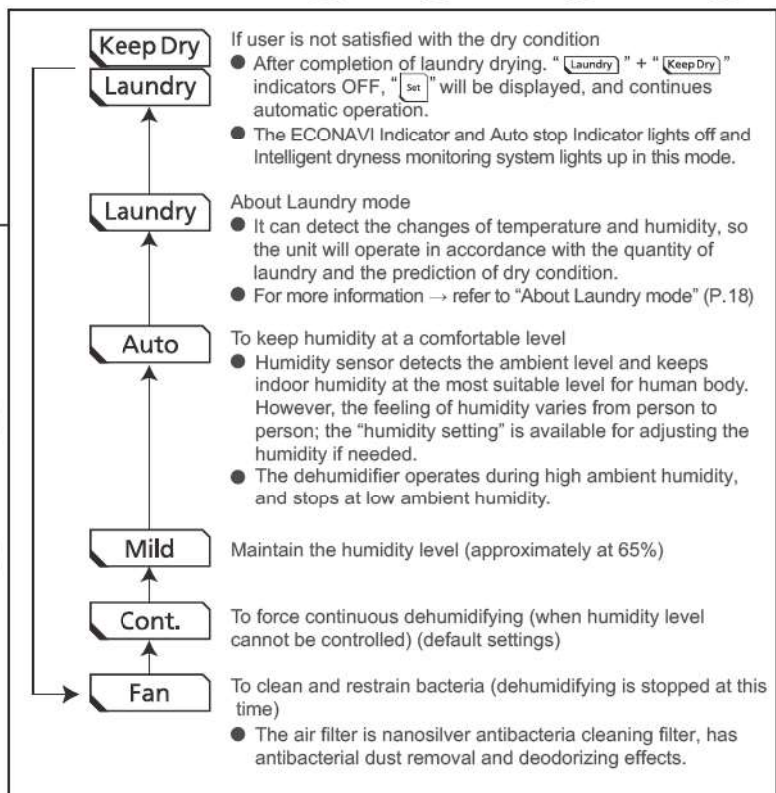

Intelligent dryness monitoring system ()

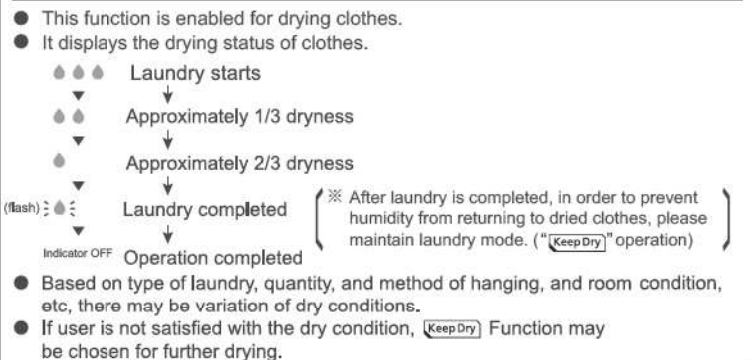

nanoeX indicator

- To refresh clothes with deodorization and sterilization, nanoeX function will be enabled automatically by system in laundry mode. nanoeX LED indicator lights up and cannot be turned off manually. The system beeps if you try to press the "Shoe Dryer" key for about 3 seconds and press "Shoe Dryer" key again.

To set humidity manually



1 Insert the power plug
Turn on the unit



 
2 Humidity 湿度設定
Key lock (Press 3 sec)
Press to select



3 Airflow selection → P.10



4 Select the Air direction → P.13



When setting the desired humidity manually (Default humidity set at 40%)

- The word "Set" and your set humidity will be displayed for around 3 seconds when you set your desired humidity by pressing the "Humidity" button, then it will display the current humidity with the word "Now" and "Set".
- Humidity sensor detects the ambient level and keeps indoor humidity at the set humidity.
- The unit operates during high ambient humidity, and stops at low ambient humidity.

■ When the Full Tank indicator is flashing (P.15)

- Operation will stop automatically. → Please empty the tank.

■ To stop operation



- The product may run 3 minutes in fan mode after operation stopped to dry its inner cavity. (Power off mildew prevention P.7)
- Please unplug the power plug at least 3 minutes after stopping the operation.

■ To use timed power on standby mode (P.14)



■ To use timed power off during operation (P.14)



Quiet Dry / Quick Dry / Airflow selection



1 Insert the power plug
Turn on the unit



2 Quick Dry or Quiet Dry Press to select



When "Quick Dry" or "Quiet Dry" is started, the airflow display is forced to be "Auto". At this time, system sound beeps if you try to press "Airflow" key.

Quick Dry When you want to dehumidify quickly. (The airflow cannot be changed)
When the humidity is high, can quickly reduce the humidity.

Quiet Dry When you want to dehumidify quietly. (The airflow cannot be changed)
Reduces noise during dehumidification and operates in an environment suitable for the human body.

3 Select the Air direction → P.13



To stop operation



- The product may continue to run 3 minutes in fan mode after operation stops to dry its inner cavity. (Power off mildew prevention P.7)
- Please unplug the power plug at least 3 minutes after stopping the operation.

To use timed power on standby mode (P.14)



To use timed power off during operation (P.14)




Airflow selection ("Mode"/"Humidity" Mode)

Select airflow after setting the operating mode as on P.8~9

To change airflow

- The airflow can only be selected in the "Mode" and "Humidity" modes. (When "Laundry" or "Keep Dry" mode is selected, airflow setting is disabled.)

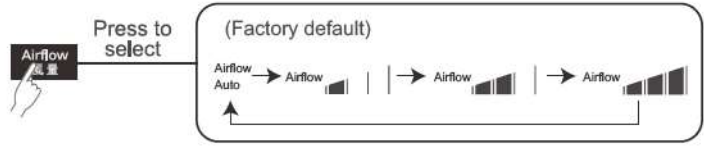

- If room temperature is above 32°C, protection mode may be activated and air direction settings will be disabled. (The unit will beep two times if you press airflow and louver keys)

To use shoe dryer



Power Off / On button

- 1 Insert the power plug
Turn on the unit



- 2 **Shoe Dryer**
烘鞋/衣櫃

- When the "Shoe Dryer" mode is started, the airflow display is forced to be "Auto" and the louver will be closed. At this time, the unit will beep three times if you try to press "Airflow" or "Louver" key.

To stop operation



- The product may continue to run 3 minutes in fan mode after operation stops to dry its inner cavity. (Power off mildew prevention P.7)
- Please unplug the power plug at least 3 minutes after stopping the operation.

To use timed power on standby mode (P.14)




To use timed power off during operation (P.14)




- ※ When the mode selection "Shoe Dryer", the airflow and air direction cannot be set manually.


1. Please open the shoe dryer accessory installation hole cover on the back of the product upwards.

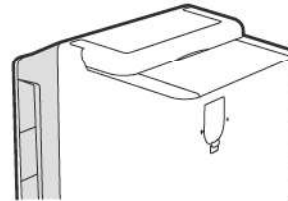


2. Align the hose assembly with the arrow on the mounting hole and insert it.

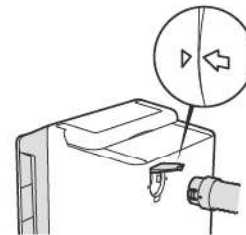

3. Please install shoe dryer accessory or cabinet dryer accessory into the hose assembly.

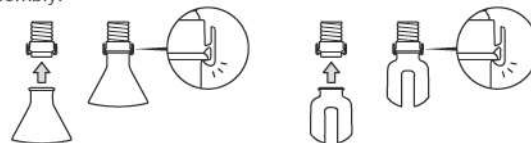

4. Please extend the hose assembly and place the accessory on the items which you want to dry to perform this function.

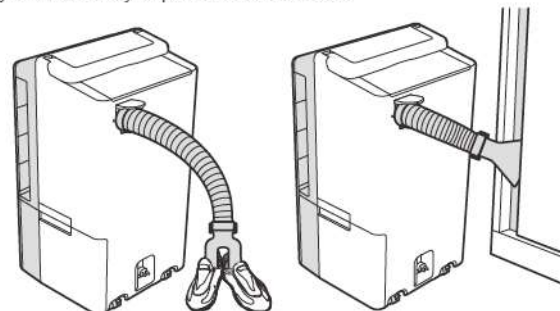

CAUTION

- When removing the dehumidifier, please do not hold the hose part, the unit may tilt and accidents may occur.
- When starting this function, please open the shoe dryer accessory installation hole cover and use the accessories to avoid danger.
- When this function is used for a long time, the operation may stop to protect the product.


nanoe[®]X bacteriostasis and deodorization

nanoe[®]X settings

- Press the "Shoe Dryer 烘鞋/衣櫃" key for 3 seconds when the power is on. When the nanoe[®]X LED flashes once, press "Shoe Dryer 烘鞋/衣櫃" key again to choose nanoe[®]X off/on. (The default setting of nanoe[®]X is on.)

nanoe[®]X Laundry/Mode/Humidity/Quick dry/Quiet dry/Shoe dryer

- To clean and deodorize during operation

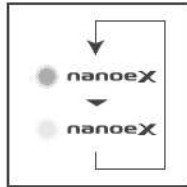

- During "Laundry"

To refresh clothes with deodorization and sterilization function, nanoe[®]X will be enabled automatically. The LED indicator lights up and nanoe[®]X cannot be turned off manually. The unit beeps if you try to operate the nanoe[®]X function. If sound set OFF, there is no beep. (The default setting of sound is off.)

- In Mode/Humidity/Quick dry/Quick dry/Quiet dry/Shoe dryer mode
The nanoe[®]X function may be switched on/off as desired.

About nanoe[®]X

The product equipped with 「nanoe[®]X」, which generates 100 times more hydroxyl (OH) radicals than the 「nanoe[®]」.

Environment conditions for generation

- The nanoe[®] is generated from indoor air which may fail to run successfully due to various temperature and humidity conditions.
- Generation conditions
Indoor temperature: 5 °C ~ 35 °C with dew temperature above 2 °C. Relative humidity: 30 % ~ 85 %

Little amount of ozone

- The generation of nanoe[®] may be accompanied with little amount of ozone. It's far less than ozone level existing in natural forest and bears virtually no impact on human body.
- In case of odor of ozone, disable the nanoe[®] function.

nanoe[®]

nanoe[®] nano water ion (nanoe[®] ion hereafter) is a charged clean water ion by separating water molecules with high voltage. The nanoe[®] ion technology features sterilization, allergens inhibition, fungi elimination and deodorization for skin healthy space. Deodorization effects vary with ambient environment (temperature, humidity), operation hours, deodorization, type of fabrics.

- Standalone test and practical use effectiveness may differ from each other due to conditions and use method.
- This device is not a medical equipment.

● About effect of nanoe[®]X (Anti-bacterial • Anti-allergy)

Effect	Testing organisation	Test method • result
Inhibit the growth of bacteria floating in the air and attached to furniture such as curtains.	Kitasato Research Center for Environmental Science	The test space of 25 m ³ , inhibit the growth of airborne bacteria (one type) more than 99 % after 4 hours.
	The Japan Food Research Laboratories	The test space of 23 m ³ , inhibit the growth of adhered bacteria (one type) more than 99 % after 8 hours.
Inhibit the growth of mold bacteria attached to furniture such as curtains and which in the air.	Kitasato Research Center for Environmental Science	The test space of 25 m ³ , effectively inhibit the growth of airborne mold (one type) after 6 hours.
	KAKEN TEST CENTER	The test space of 30 m ³ , effectively inhibit the growth of adhered mold (one type) after 2 hours.
Inhibit the activity of pollen and other allergens.	Panasonic Corporation Analysis Center	The test space of 23 m ³ with ELISA method, 99% pollen (one type) can be inhibited in the space after 3 hours.
		Verified pollen allergens (13 type) by using the electrophoresis method in an approximately 23 m ³ -sized test chamber. Inhibitory effect was confirmed in 24 hours.


Air direction selection

Operations of the air direction selection (Laundry/Mode/Humidity)

The swing can be set to match the height of the place where you would like the air to reach.

To swing louver

Running →  (Press to select)
Louver 搖擺方向
Sound Off/On
(Press 3 sec)

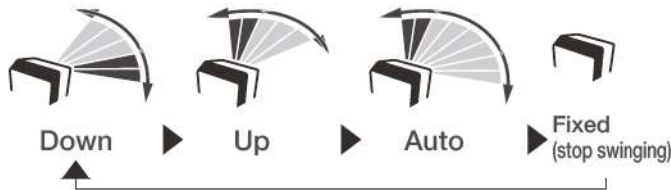

To fix the louver

Select "Auto" to enable louver swing.

When it reaches the desired location,

press the "" key again.

- The louver direction indicator lights off and the louver stops swinging and starts blowing in one direction.





Note




- Do not move the louver while swinging operation is in progress. (The swing range will change.)
- In this case, reset the air direction in accordance with the operations of the air direction selection or restart the unit. The angle will become normal.

Air direction setting example

Tips for drying effectively

- 1 Place the dehumidifier at a place that all clothes can be reached evenly.
- 2 Leave space between each item of clothing so that air can circulate freely.
- 3 Leave a distance of 40 cm or more between the dehumidifier and the clothes, depending on the amount of clothes.

Laundry	Dry clothes at lower part	Down	
	Dry clothes at upper part	Up	
	Dry clothes at both upper and lower part	Auto	
	Dry clothes of small quantity	Auto * 1	

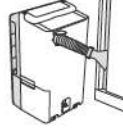Dehumidification	Ceilings and walls, etc.	Up	
	Shoes, etc.		
Shoe dryer	Wardrobe and shoe cabinet, etc.	* 2	

* 1 : Choose either "Up" or "Down" depending on how high the clothes are hanging and how high the closet is.

- Based on type of laundry, quantity, and method of hanging, and room condition, etc, there may be variation of dry conditions.


CAUTION

- Leather items such as shoes cannot be dried with a dehumidifier. (They will become warped or damaged.)

* 2 : According to actual needs, adjust the hose assembly to the appropriate position so that the wind can blow to the area that needs dehumidification.

Timer / Sound / Key lock / Brightness settings

To use timed power on in the standby mode

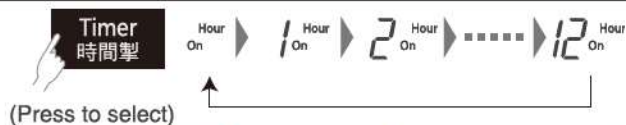

- When the "Timer" key is pressed during standby mode (the "timed power on" cannot be set during operation), the LCD display will go on ^{*1}. After settings is completed, press the "Power On/Off" key to finish the "timed power on" settings. If you want to cancel the timed settings, press the "Power On/Off" key again.
- If you do not set any settings in the "timed power on settings" mode, the settings on the display and the LCD backlight will turn off after 15 seconds and return to the previous state.
- When "timed power on" is setting, all the keys will be disabled. (Except "Power On/Off", "Timer" and key lock.)
- The timer displays the remaining time once it is set. For example, if the timer is set to "9 hours" and with 8 hours to go, it displays "8 hours".

*1 : Enter the "timed power on settings" mode. The settings will either be the default settings or the previous settings.

To use timed power off during operation



- Press the "Timer" key when the power is on.
- The timer displays the remaining time once it is set. For example, if the timer is set to "9 hours" and with 8 hours to go, it displays "8 hours".
- The time will keep counting down once the timed power off is set, even if the unit stops due to the full water tank.
- If you set the timed power off in the laundry mode, the ECONAVI Indicator, Auto stop Indicator and Intelligent dryness monitoring system will not display.

Sound settings



- Activate sound settings
When running, press the louver button for about 3 seconds, and the text in the LCD sound area begins to flash; press the louver button again during the flashing to select the setting.
- Exit sound settings
The setting will be exited if there is no operation after the text in the LCD sound area flashes for about 5 seconds, or another function button is pressed.

Key lock setting

- Key lock on
During standby or operation, please press "Humidity 濕度設定 Key lock (Press 3 sec)" key for 3 seconds to activate the Key lock.
When the LCD "lock" lights up, all functions are not available. (The backlight will light up by pressing any button when locked)
 - Key lock off
During standby or operation, please press "Humidity 濕度設定 Key lock (Press 3 sec)" key for 3 seconds to unlock.
When the LCD "lock" goes off, All functions are available.
- ★ Key lock will be automatically released when power failure occurs. The Key lock must be reset.
★ When the tank is full, Key lock cannot be cancelled by pressing the button if the tank is not emptied.

LED light brightness setting



- Brightness setting (default setting is bright)
When the Quiet Dry key is pressed for about 3 seconds when running, the operation panel LED and indicator light can be adjusted. When the brightness is set to slightly, the indicator light is turned off and the operation panel LED remains at slightly.
- ★ Press and hold the "Quiet Dry" key for 3 seconds to enter the brightness control, and changes can be made only when running.
- ★ The brightness control is to control the brightness of the ECONAVI, nanoe[®]X, Full Tank, shoe dryer and indicator light.


Handling of louver falling off / Handling of full water tank

Handling of louver falling off

Louver fall off

■ Installation of louver

- 1 Point and insert hole to the left to the thud at left side of your product.
- 2 The louver is flat and slightly bent at its center part.
- 3 Insert right hand side of it to machine body.

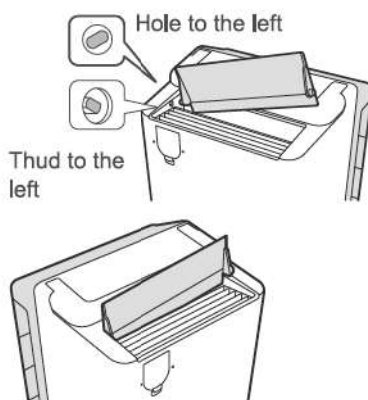


Handling of full water tank


- The product stops operation automatically when water tank is full. The indicator light will continue to light up in red, and the “ ” light keeps on flashing. (If the sound is on, the buzzer beeps for 6 seconds together with the red indicator.)
- Please empty water tank as described below

- 1 Press the machine with your thumb and take out the water tank by holding the handle.

- Without hitting each other (may cause failure)

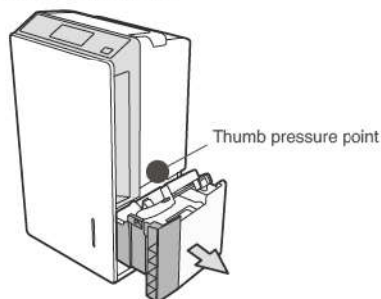


- 2 Carry the center part of water tank handle to drainage position. (To avoid water spilled lead to accident, please hold it gently while moving.)

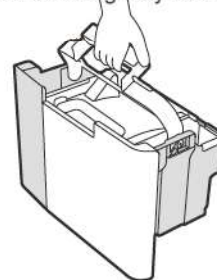


- 3 Press the water tank cover while pulling up the drainage opening.



- 4 Carry the center part of water tank handle and hold the bottom part to drainage position.

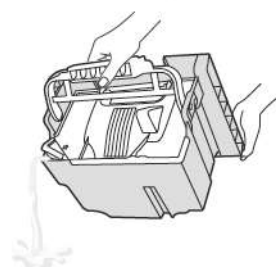

water display flash and the indicator light in red

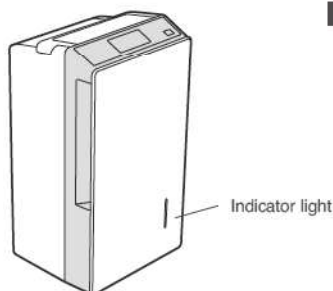

■ Water tank installation

Close the drainage opening, insert water tank into place

- Close both water tank cover and drainage opening for installation. (or the water tank may fail to install in place and may lead to water leakage)
- Push water tank in place. In case of damaged or poorly installed water tank, the Full Tank indicator may fail to flash and system operation may fail to start. Please remove the water tank and install again.

How to drain continuously

- You may connect a hose to this product for continuous drainage if applicable.
(Consult an authorized dealer, agent or service centre for continuous drainage installation or removal).

CAUTION


- Secure drainage hose firmly.
- Keep temperature around the drainage hose above zero degree Celsius.



Keep drainage hose from bending and elevation difference for smooth drainage. Poor drainage may lead to water leakage and wet floor.



Or water in drainage hose may get frozen. This may block the hose from drainage and lead to water leakage and wet floor.

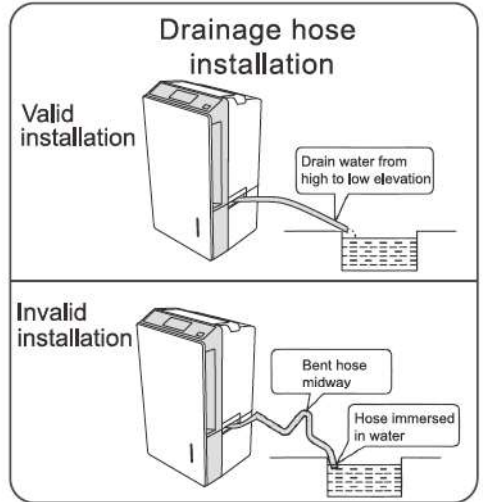


Required accessories

- Commercially available plastic water hose
- Length: 30 cm longer than distance from dehumidifier to drainage opening
- Inner diameter: 15 mm


Note

Temperature difference in between water in drainage hose and environment may lead to water condensed on surface of drainage hose. Take insulation measures if necessary.


1 Remove power plug and water tank

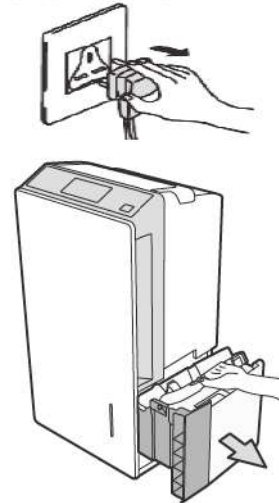


2 Water blocker

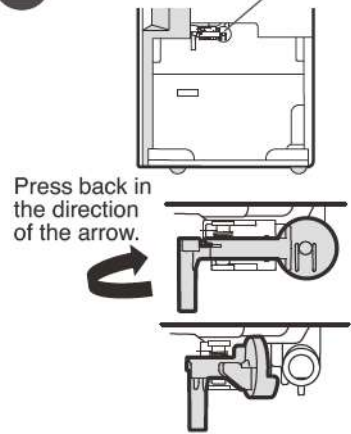


3 Install drainage hose

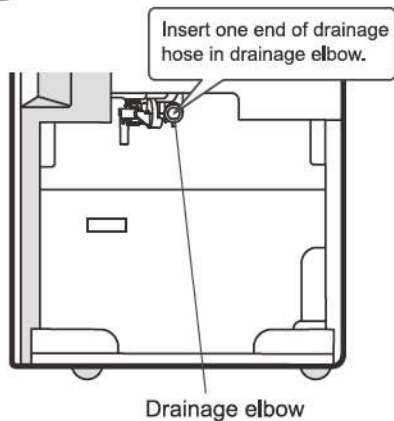

4 Install water tank

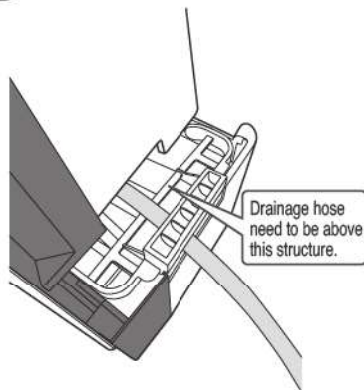

5

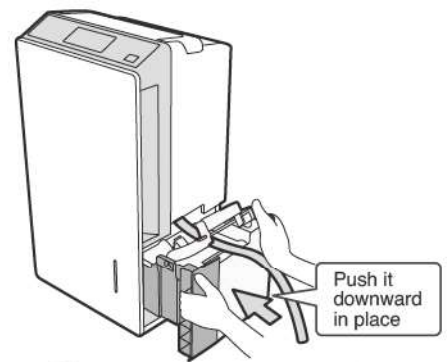

- Invalid installation may lead to operation failure
- The drain hose needs to pass between the tank handle and the water tank.

Note: Please consult an authorized dealer, agent or service centre to uninstall it as invalid installation may lead to water leak out of water tank.

Maintenance



Empty the water tank before doing any maintenance work!

- Please disconnect the power plug and empty the tank. (see P.15 for how to empty the tank)




- Cleaning agents such as those shown on the left should not be used.
- If using a chemically-treated cloth, be sure to read the instructions of the cloth.


Water tank: clean once per month

- Wash the water tank and tank cover with clean water 2 - 3 times.
- You don't need to remove the float, just clean it with water.


To remove the tank cover

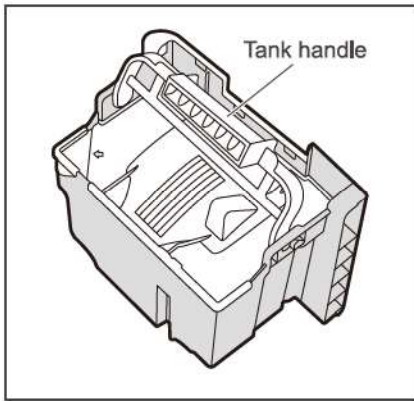


- ① Turn the tank handle up.

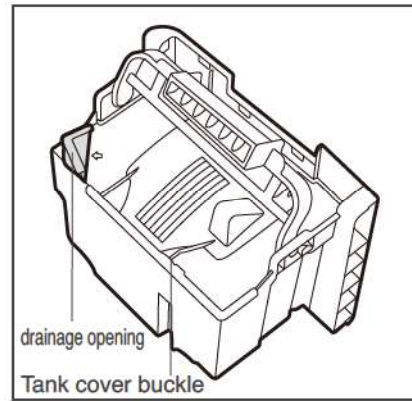

- ② Open the drainage opening and the buckle on the back of water tank cover.
 - Do not pull the drainage opening with force.

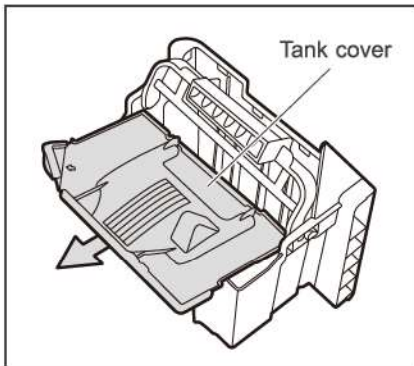

- ③ Pull the water tank cover upwards

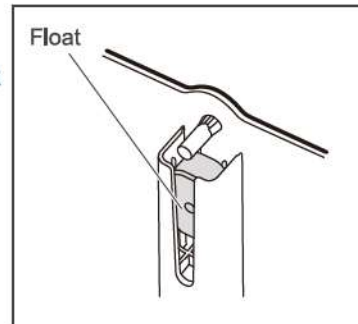


- Float
 - Clean dirt around shaft with water (to prevent float from malfunctions)
 - Do not remove float (invalid installation of it may lead to operation failure and water leakage)

- Remove sticky dirt with thinned neutral detergent.
- Inner wall of tank may get black (due to dirt in air which dissolved in water)

For machine not to be used for a long time.



- ① Select "Fan" function and set it to run for 1 hours and power off automatically afterwards.
 - ② Remove power plug, leave it for one day, empty the water tank afterwards (P.15).
 - ③ Clean body, water tank, and filter.
 - ④ Cover body with plastic bag.
 - ⑤ Store dehumidifier in place of low humidity, good ventilation, and flat surface. (leave it tilted may lead to failure and water leakage)
- **Wipe machine body with a wrung cloth and wipe with a dry cloth again.**
- Do not leave the body widthwise (this may lead to water leakage)
 - Remove sticky dirt with thinned neutral detergent. Place it in the shade and dry it completely.

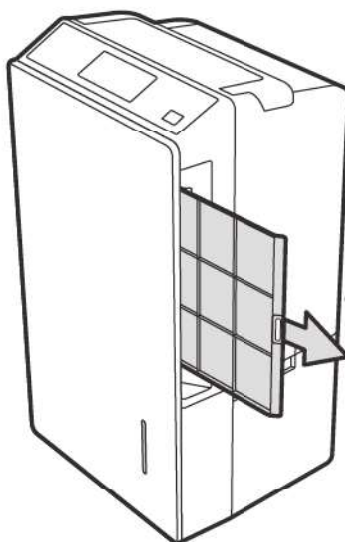


Air Filter (clean it biweekly)

Remove dirt with vacuum cleaner




- Do not wash with water.

■ Remove the air filter

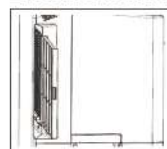

- Pull the filter out from the side.

■ Install the air filter

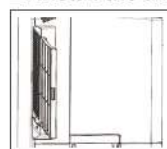

- Align the side chute (one at the top and one at the bottom), push it inward, and connect it to the body.
- Replace in case of any damage.
- Regular maintenance (dehumidification capacity may drop, power bill may rise, and more failures may follow due to dirt and clogged filter)

About Laundry mode

■ About ECONAVI

When "Laundry" mode is selected, airflow is automatically set as "Auto". The ECONAVI indicator, auto stop indicator, and Intelligent dryness monitoring system are on during drying and off afterwards.

The unit detects changes in temperature, humidity; run and auto stop operation according to amount of clothes and estimated drying status.

- Reference operation hours before auto stop (Unit: Hour).

Model No.	F-YVB38H
Volume of clothes	Laundry operation time (hours)
2 kg - 4 kg roughly	3.0~4.2
4 kg - 6 kg roughly	4.2~6.2



 

Test conditions: temperature at 20 °C;
humidity at 80 %, room size at 20 square meters. (results as tested by this company)

- Actual operation time, power consumption, dehumidification level may vary with conditions of environment, type, amount, hanging pattern of cloths, room size.
- To dry clothes with dehumidifier, it is recommended to operate in small (smaller than 20 square meters) and well-closed space for less energy wastage.
- Operation stops after about 10 hours.

Troubleshooting

Please check the following first.

If the problem persists after taken all these steps, disconnect power plug and consult an authorized dealer, agent or service centre.

Error	Please ensure its contents
① Key do not function.	<ul style="list-style-type: none"> ● Is the “” indicator flashing (P.15), or is “Rep” indicator flashing? (P.7), Key lock Set? (P.14) Safety protection? (P.7)
② The Full Tank indicator is flashing even though the tank is not full.	<ul style="list-style-type: none"> ● Are the tank and float correctly installed inside the unit? (P.15, P.17) ● Was the tank banged against the unit during insertion? (P.17) → Remove the tank and then reinstall it gently.
③ Water is leaking.	<ul style="list-style-type: none"> ● Has the unit been tilted or knocked over? ● Was the unit moved while there was still water in the tank? (P.4) ● Has the float come off? (P.17)
④ The tank does not fill up with water. (The unit is not dehumidifying very well.)	<ul style="list-style-type: none"> ● Is the filter clogged (P.18), or is something blocking the air inlet or air outlet? (P.4) ● Are the room temperature and humidity low? (The unit dehumidifies less as the room temperature and humidity become lower.) ● Is the unit set to operate in “Quiet Dry” or “Mild” mode? ● If the temperature is outside the range of 7 °C ~ 40 °C , dehumidifier operation will stop and become “” operation. (P.7)
⑤ No water remains inside the unit.	<ul style="list-style-type: none"> ● Is the “” mode set? → No dehumidifying function in “” mode.
⑥ It takes a long time to dry clothes.	<ul style="list-style-type: none"> ● Is wet, cold air entering the room? → Keep doors and windows closed as much as possible while drying clothes.
⑦ Clothes do not dry completely.	<ul style="list-style-type: none"> ● Did prior clothes drying cycle complete? ● Is wet, cold air entering the room? → Avoid open doors and windows as much as possible while drying clothes. ● Is there a heater in use near the unit? (If the surrounding temperature is too high, the sensor will be unable to accurately judge the drying time.) ● Is the air blowing onto the all clothes? ● Are the clothes hung too closely together or in layers?
⑧ The humidity does not go down.	<ul style="list-style-type: none"> ● Is wet, cold air entering the room? → Avoid opening doors and windows while laundry. ● Is there other steam release equipment exists indoor?
⑨ Condensation forms all the time, even during dehumidifying.	<ul style="list-style-type: none"> ● It may not be possible for dehumidifying to be fully effective if you place the dehumidifier in some places such as near windows, or behind furniture where air circulation is poor.
⑩ The Repair indicator flashes with error code [11] displayed.	<ul style="list-style-type: none"> ● Is machine body tilting? →1. Disconnect the plug, lift machine body up straight and wipe waters leaked 2. leave the machine idle for more than half a day (to dry the unit inside completely in case any water has spilled inside) 3. connect the plug, run dehumidification again ● Is machine body tilted too much? → Unplug the power plug and then reconnect it. ● Is there a magnet or metal placed above the machine body?
⑪ Error action	<ul style="list-style-type: none"> ● Is there any foreign matter, water or dust on the control panel? (P.7)
⑫ There is hiss, squeak, or water flow sound heard	<ul style="list-style-type: none"> ● This is the sound of the refrigerant flowing within dehumidifier or nanoe™ ion generation. It's not a failure.
⑬ Wind noise is produced when using shoe dryer.	<ul style="list-style-type: none"> ● Are the handles positioned correctly? The handle is not placed properly, causing wind to escape into the gap in the handle, causing wind noise.

Troubleshooting

Please check the following first.

If the problem persists after all these steps are taken, disconnect the power plug and consult an authorized dealer, agent or service centre.

Error	Please ensure its contents
⑭ Low air volume	<ul style="list-style-type: none"> ● Is the air filter dirty? (P.18)
⑮ The air outlet temperature or the air outlet of the accessory temperature are higher than the indoor temperature.	<ul style="list-style-type: none"> ● When the compressor starts operating, there is air heat exchange, and thus temperature of the air outlet will increase. It is normal.
⑯ The compressor stops running when using shoe dryer.	<ul style="list-style-type: none"> ● To protect the product, when this function is used for a long time, compressor may stop operating. ● There may be foreign matter blocking the air outlet of the accessory. To protect the product, compressor may stop operating. Please check whether there is any foreign matter blocking the air outlet .

In case of the following, disconnect the power plug and consult an authorized dealer, agent or service centre.

Error	Please ensure its contents
⑰ The Repair indicator lights (without flashing) and prompts error code (P.7 - Repair)	<ul style="list-style-type: none"> ● Machine failure, please note down the error code and call service center or dealer.

Emergency measures

In case of the following situations, remove power cord and consult an authorized dealer, agent or service centre immediately.

- Incorrect On/Off operations.
- Electric leakage or frequent blown fuse from switch.
- Power cord and plug over heated.
- Odor or noise during operation.
- Water leakage from unit.
- Other error or failure.

Please follow the rule

Please have your power cord replaced by equipment manufacturer, service center, or qualified technician for your own safety.

Check the dehumidifiers after prolonged use!


Does the machine have these problems?

- Not running after power-on or a sudden stop when running.
- The power cord was moved, and sometimes the power is turned on but sometimes not.
- The blade has an abnormal sound or vibration during rotation.
- The main body abnormally heats up, and there is a scorching smell.
- Other abnormalities or malfunctions

When you have these problems, please turn off the power to prevent accidents. When the dehumidifier stops running, the power consumption is about 1.1W. Unplug the power plug (when the power plug is inserted) and contact the service center or dealer.

★ For electrical appliances that have been used for many years, please take the initiative to contact the vendor for an overhaul and maintenance to improve the product's safety.

Specifications

Model No.		F-YVB38H	
Power supply		220 V~ 50 Hz	
Power plug shape			
Operating condition	Temperature	26.7 °C	30 °C
	Relative humidity	60 %	80 %
Dehumidification capacity (L/Day)		24	38
Power consumption (W)		357	440
Water tank capacity (L)		The unit automatically stops at around 5.5 litres	
Weight (kg)		20.5	
Dimensions (W X H X D) (mm)		380 X 680 X 320	

● Power consumption by dehumidifier at standby mode: 1.1W. (with power plug connected)

Customer's record

For model name and production number of this product, please refer to the back side of machine.
Please record them in the space provided and keep for future reference.

Model No.	SERIAL NO.
DATE OF PURCHASE	DEALER'S NAME
DEALER'S ADDRESS	
TELEPHONE NUMBER	

Panasonic Corporation

Web Site : <http://www.panasonic.com/>

© Panasonic Ecology Systems Co., Ltd. 2024.

C8041-4220
2024.10

操作說明書 抽濕機



型號 **F-YV B38H**

本產品只可在室內使用

目錄

<頁號>

安全注意事項	24~26	使用前準備
各部位名稱 / 電源線使用方法	27	
操作面板 / 複合按鍵使用方法	28	
提醒	29	

功能選擇模式運轉時	30	使用方法
自行設定濕度抽濕時	31	
靜音抽濕及快速抽濕時 / 風量選擇	32	
烘鞋 / 衣櫃模式下運轉時	33	
nanoe®X 抑菌除臭	34	
風向的選擇	35	
時間掣的設定 / 聲音設定 / 安全鎖設定 / 亮度設定	36	
風向板脫落時的處理 / 水箱滿水的處理	37	
連續排水的使用方法	38	
維護保養的方法	39~40	
關於衣物乾燥模式	40	

故障! ?	41~42	遇到困難時
緊急處理方法	43	
規格	44	

正確的使用，將幫助您更省電

另附保用證

- 多謝閣下選購本**Panasonic**產品。
- 請仔細閱讀本操作說明書，以便正確安全地使用產品。
 - 使用前，請緊記閱讀「安全注意事項」章節（P.24~26）。
 - 請確定在保用證上正確寫明「購買日期」和「購買商戶」等資料。然後於購買十日內寄回，並將保用證存根連同操作說明書一起妥善保管，以備日後參考。



此機不適合傷殘人士、知覺障礙人士、智力障礙人士或缺乏機械操作經驗及知識之人士（包括兒童）自行操作。如有安全負責人在場監督及提供指導下協助操作此機，則屬例外。請勿讓兒童擅自操作此抽濕機。如果機器的電源線損壞了，必須聯絡該機器的廠商，維修服務中心或合資格技術人員替您更換以防危險發生。維護保養前，請務必拔下電源插頭，將水箱水排走。

安全注意事項




請務必遵守


為了事先防止使用者及他人人身受到傷害或財產受到損失，下面就必須遵守的事項予以說明。






■ 當忽視標記內容而進行錯誤操作時，根據其發生危害或損害程度，分下述兩種予以說明。

 警告	該欄內容表示“有可能導致死亡或重傷的嚴重後果”。
 注意	該欄內容表示“有可能導致傷害或物質損失的後果”。

■ 將需要遵守的內容，下圖所示標記區分並予以說明。

	該圖標記的內容為“需要注意”事項。
	該圖標記的內容為“禁止”事項。
	該圖標記的內容為必須實施的“強制”事項。

 **警告**
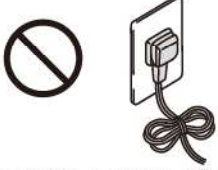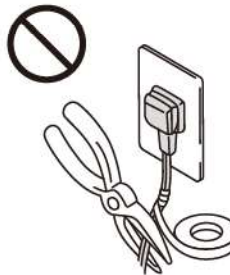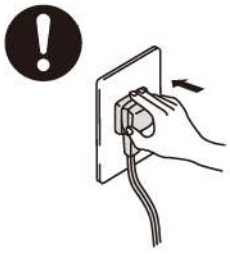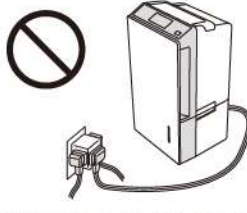
<p>■ 請不要損壞電源線 · 電源插頭</p>  <p>請不要割傷、加工、強力彎曲、拉扯、上壓重物或用尼龍綁帶及鐵絲捆綁。損壞後繼續使用有可能導致短路、火災或觸電。</p> <p>● 如果機器的電源線損壞了，必須聯絡該機器的廠商，維修服務中心或合資格技術人員替您更換以防危險發生。</p>	<p>■ 避免電源線破損或加工</p>  <p>放置重物、加熱、拉扯所產生的破損，可能導致火災或觸電。</p>	<p>■ 請勿使用損壞的電源線</p>  <p>使用損壞的電源線可能導致短路、火災或觸電。請聯絡原購買的經銷商或服務中心。</p>	<p>■ 請確保插好電源插頭</p>  <p>電源插頭如果插得不牢固，有可能由於發熱導致火災或觸電。</p> <p>● 請不要使用損壞的電源插頭或插口鬆弛的插座。</p>
<p>■ 手潮濕時請勿拔取插頭</p>  <p>可能導致觸電。</p>	<p>■ 使用時不要超出電源插座及配線器具的額定電流</p>  <p>如果使用過多分支線會超過額定電流，有可能由於發熱導致火災或觸電。</p>	<p>■ 請不要用插入或拔下電源插頭的方式來開機或關機</p>  <p>有可能由於發熱導致火災或觸電。</p>	<p>■ 勿使用規定之外的電壓</p>  <p>有可能由於發熱導致火災或觸電。</p>


警告

■ 請不要將手指或棒類等異物放入出風口



由於裡面的風扇高速旋轉，可能導致傷害或觸電。

■ 請不要放在發熱器具附近

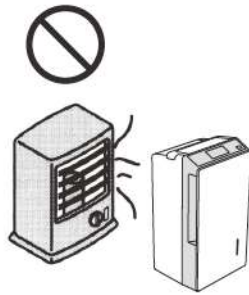

有可能使樹脂溶化引起火災。

■ 請不要自行修理



有可能導致火災或觸電。

● 須修理時，請向原購買的經銷商或服務中心查詢。

■ 異常時（有下述症狀）請停機後將電源插頭拔下

- 開關操作不正確。
- 漏電開關或保險絲時常熔斷。
- 電源線及電源插頭異常發熱。
- 運行時間到燒焦氣味或發出異常聲音。
- 從主機有水漏出。
- 其它異常故障。

上述等原因可能導致火災或觸電。

● 請向原購買的經銷商或服務中心查詢。

■ 拔下電源插頭時請勿強拉電線



拉扯電源線有可能損壞電源線導致短路、火災或觸電。

■ 定期清理電源插頭上的塵埃和污垢



電源插頭上的塵埃會累積濕氣，導致電源插頭的絕緣層失去效用，可能導致火災或觸電。

● 拔出電源插頭並用乾布拭抹。當不需使用抽濕機時，緊記拔出電源插頭。

■ 請勿拉緊電源線



這樣可能會造成短路或損傷電線內部的導線，並可能導致火災或觸電。

■ 在移動或收起抽濕機時，請勿拉扯電源線



這樣可能會造成短路或損傷電線內部的導線，並可能導致火災或觸電。

注意


■ 長時間運轉時，請注意室內溫度



運轉過程中，抽濕機發熱會導致室內溫度上升，如在封閉的房間內使用，有可能使身體感到不適。

● 嬰兒或老年人應尤其注意。

■ 請放在平穩且堅固的地板上使用

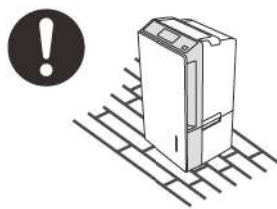


如果倒下，水或會溢出弄濕屋內財物，導致火災或觸電。

■ 請不要在衣櫃等狹窄的空間使用



由於通風不良有可能導致發熱或火災。

■ 請不要在容易被水濺到的地方使用

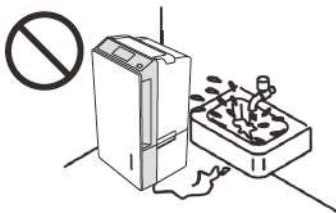

有可能導致火災或觸電。

■ 請不要在可能有可燃性氣體洩漏的地方使用



如果易燃氣體洩漏充斥周圍空間，有可能導致火災。

■ 請不要在有陽光直射、風吹雨淋的地方使用



由於受熱可能導致火災或觸電。

安全注意事項

⚠ 注意

■ 請不要用於保存美術品及學術資料處



有可能導致保存品品質變劣。

■ 請不要在上面擺放花瓶等裝有水的容器



如果有水溢出流進機內，有可能導致火災或觸電。

■ 請不要用水直接清洗抽濕機



有可能漏電導致火災或觸電。

■ 請不要噴灑殺蟲劑或用揮發油及稀釋劑擦拭機體




可能因破損導致傷害及漏水弄濕屋內財物，或由於短路導致火災或觸電。

■ 請不要在抽濕機出風口的地方使用燃燒器具



由於燃燒器具不完全燃燒可能導致一氧化碳中毒。

■ 請不要將出入風口用布或被子蓋住

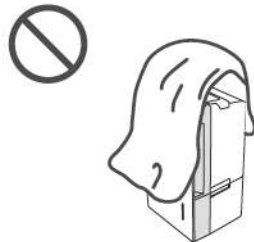

由於通風不良有可能導致發熱或火災。

■ 請不要坐在或爬到機器上面



有可能由於滑落、跌倒導致傷害。

■ 請不要以手持風向板的方式移動或搬運機器




有可能落下導致傷害。

■ 搬動抽濕機前請停機並將水箱裡的水先倒掉



有可能水溢出弄濕屋內地板或財物，導致意外發生（人員受傷或火災或觸電）。

■ 清潔時要停機並且將電源插頭拔下

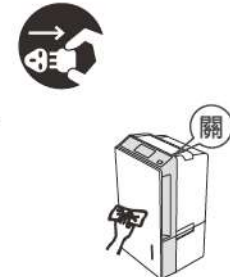

由於裡面的風扇高速旋轉，可能導致傷害。

■ 當長時間不用本機器時，為安全起見請將電源插頭拔下



如果電源插頭附有灰塵及異物，有可能導致發熱或火災。


■ 長時間持續使用時須做好定期檢查工作




特別是空氣過濾網及排水管等更需做好定期檢查工作，否則易造成過熱及漏水，可能導致火災或弄濕屋內財物。

各部位名稱






前面

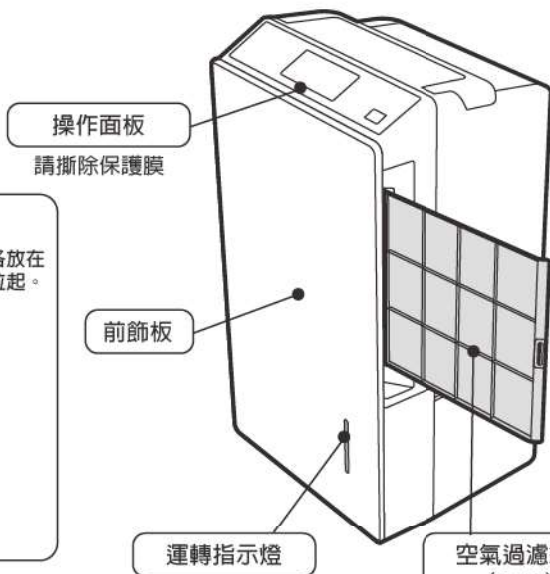

配件

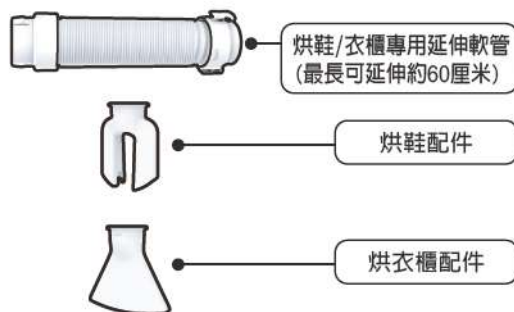

背面

 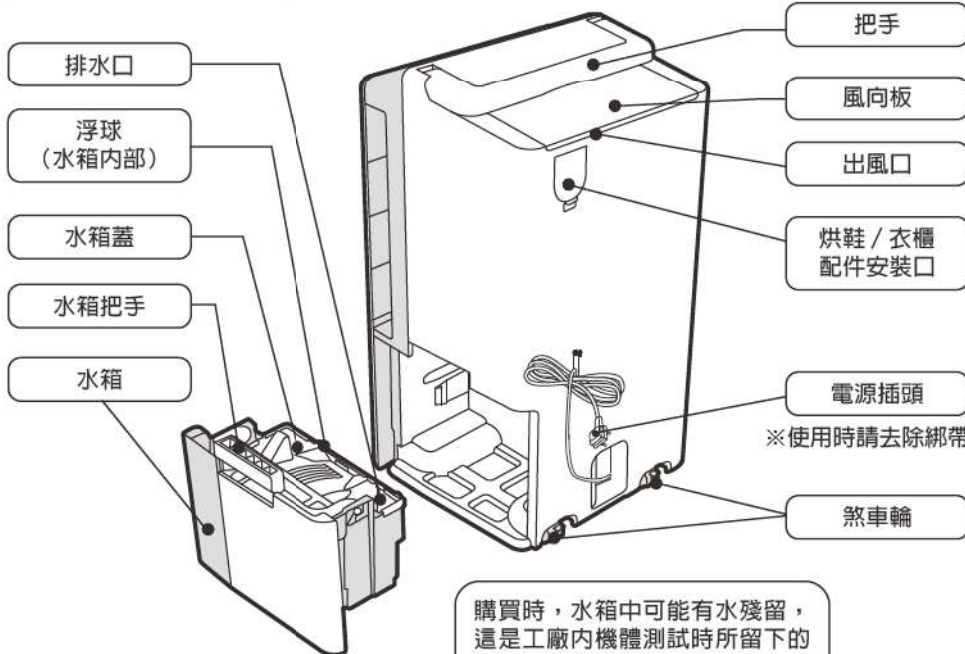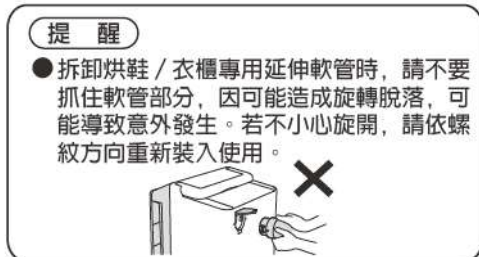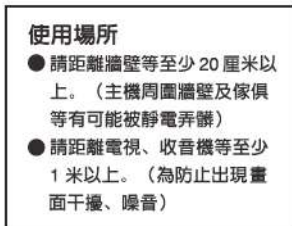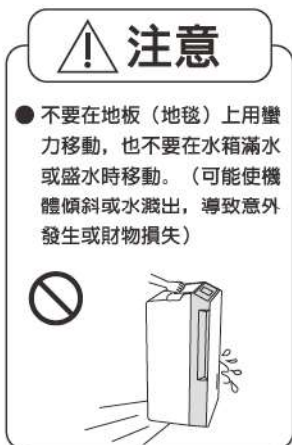

購買時，水箱中可能有水殘留，這是工廠內機體測試時所留下的，並非異常。

操作面板

ECONAVI指示燈(P.30)
自動停止指示燈 (P.30)
乾燥指示燈 (P.30)
nanoe[®]X指示燈(P.30)
烘鞋 / 衣櫃指示燈(P.33)
滿水指示燈(P.37)

快速抽濕按鍵(P.32)
風量按鍵 (P.32)
靜音抽濕按鍵 (P.32)
烘鞋 / 衣櫃按鍵(P.33)

時間掣 (P.36)
功能選擇按鍵 (P.30)

搖擺方向 / 聲音控制按鍵 (P.35, P.36)
電源關 / 開按鍵 (P.30~P.33)
濕度設定按鍵(P.31)
安全鎖按鍵(P.29)

LCD顯示

未通電
 LCD顯示內容：Airflow, Louver, Keep Dry, Laundry, Auto, Mild, Cont., Fan, %

通電中
 LCD顯示內容：Now 50%, 12 Hour, Off, Keep Dry, Laundry, Auto, Mild, Cont., Fan, %

滿水 (左側LED滿水燈亮)
 LCD顯示內容：Airflow, Louver, Keep Dry, Laundry, Auto, Mild, Cont., Fan, %

未通電

通電中操作按鍵時，被選擇之功能會框起或顯示狀態，同時LCD背光會亮起，在停止操作後約15秒背光會自動熄滅。

滿水時，LCD會顯示約15秒橙色光後熄滅，「」指示燈則持續點滅，且運轉指示燈會持續亮紅色光，直到解除滿水狀態。(當設定滿水提示音為開時，則在橙色光顯示同時，會有約6秒嗶... 嗶... 提示音)。

複合按鍵使用方法

待機中	機體出廠設定	按壓 + 按鍵持續7秒
	安全鎖設定	按壓 按鍵持續3秒
運轉中	聲音設定	按壓 按鍵持續3秒
	LED燈亮度設定	按壓 按鍵持續3秒
	安全鎖設定	按壓 按鍵持續3秒
	(nanoe [®] X)設定	按壓 按鍵持續3秒

提醒

濕度顯示

* 若濕度超過約85 %時會顯示「Hi」，低於約24 %時，會顯示「Lo」。

Hi % Lo %

檢 查

* 「Rep」指示燈閃爍並出現故障代碼「11」時，請確認以下內容：

- 本體傾倒時
 - ① 拔下電源插頭。
 - ② 將本體扶起（擦拭溢出的水）。
 - ③ 本體放置半天以上不要使用。
(由於溢出的水有可能浸濕本體內部，需要讓內部水份完全乾燥才可再次運轉)
 - ④ 再次插入電源插頭，運轉抽濕。
- 本體是否傾斜角度過大？
→ 拔下電源插頭，重新插入。
- 是否有磁鐵或金屬放置於本體的上方？
→ 請去除磁鐵或金屬，並拔下電源插頭，重新插入。

* 「Rep」指示燈保持顯示（不閃爍）時，為故障顯示（如下例）

故障顯示

例 Rep

+

02 %


01, 02, 99

可表現多種不同故障代碼


* 「Rep」指示燈閃爍、嗶..嗶..嗶..持續「警示音」，並出現故障代碼「17」時，請立即拔下插頭並向原購買的經銷商或服務中心查詢。

● 請立即停止運轉，拔下電源插頭並向原購買的經銷商或服務中心查詢。

滿 水

 

* LCD橙色背光、「」指示燈點滅及運轉指示燈持續亮紅色光時，代表水箱內積水到達滿水狀況，若水箱的水無處理（倒掉時），所有功能選擇將無法執行。

除 霜

* 當「Def」指示燈閃爍時，代表機體正在除霜。
→ 僅「」按鍵可操作，其他按鍵操作無效。

防 霉




※ 關機防霉：


- * 當運轉停止後（手動操作關機或定時關機），為了降低機器內部水氣以防止發霉，機器會再送風運轉約3分鐘，此時LCD背光會亮起白色光並持續閃爍，同時「」框也會亮起，如不需要此功能可於進入此功能後按「」鍵取消。
- * 此功能視乎壓縮機運轉時間，有時並不會進入此功能。

保 護

- 為了防止忘記關機，24小時以上沒有任何操作，運轉將停止。
- 室溫約32 °C以上時為了保護機器會自動提高風量，風向板會改變風向，此時風量與風向無法設定。
- 可以運行的室內溫度為7 °C ~ 40 °C。如果在超出該溫度範圍的房間內使用，可能導致機器不能正常運轉。
- 停電發生時，抽濕機將停止運轉，恢復供電後將進入待機狀態。停機後3分鐘內請不要運轉，以確保壓縮機使用壽命。

安全保護



- 當有異物、水滴或灰塵等或持續按壓一個或多個按鍵累計達約17秒，就會啟動安全保護，抽濕機將維持原使用狀態（安全保護狀態僅「」鍵可操作，其它按鍵操作無效）。
 - * 若安全保護狀態運轉超過10小時，則在10小時後自動關機（「」鍵除外）
 - * 當「」+「Rep」亮起時，請將異物取下、水滴或灰塵擦拭乾淨或將手移開即可解除安全保護狀態。

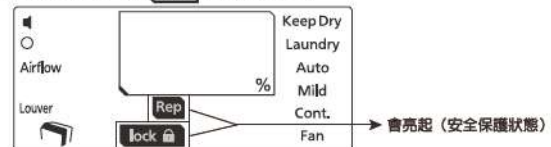

舒 適

● 本抽濕機適用於日常生活中，如去除令人感到不快的濕氣及幫助乾燥洗滌物等，但在濕度約50 % 以下時，無法維持舒適之濕度環境。

 出廠設定

- 待機中
「」鍵和「」鍵同時按壓約7秒鐘啟動濕度設定顯示「00」，表示恢復至原廠預設值。
 - * 恢復原廠設定後，所有操作模式將復原為初始值。

記憶功能

- 當運轉停止後，再次啟動運轉時，機體會恢復到上一次使用的運轉模式。
- 當電源插頭拔掉後再次接上電源並啟動運轉時，機體會恢復到上一次使用的運轉模式。
(定時設定及異常斷電除外)

功能選擇模式運轉時



1 插入電源插頭 運轉開始



- 初始使用抽濕功能預設值為「Cont.」, 風量預設值為「Auto」。

2 Mode 功能選擇

- 當衣物乾燥啟動時, 風量顯示強制在「Auto」, 此時若操作「Airflow」鍵, 將發出嗶一嗶一提示音。

3 風量選擇 → P.32



4 風向選擇 → P.35



想停止運轉時



- 運轉停止後為了本體內部乾燥, 會有約3分鐘送風運轉。(關機防霉 P.29)
- 電源插頭於停止操作後3分鐘以上再拔下。

待機中想使用定時開機時 (P.36)




運轉中想使用定時關機時 (P.36)



- 衣物乾燥設定時, ECONAVI指示燈、自動停止指示燈及乾燥指示燈將不會亮起。


滿水指示燈點滅時 (P.37)

- 自動停止運轉→請將水箱水排除。

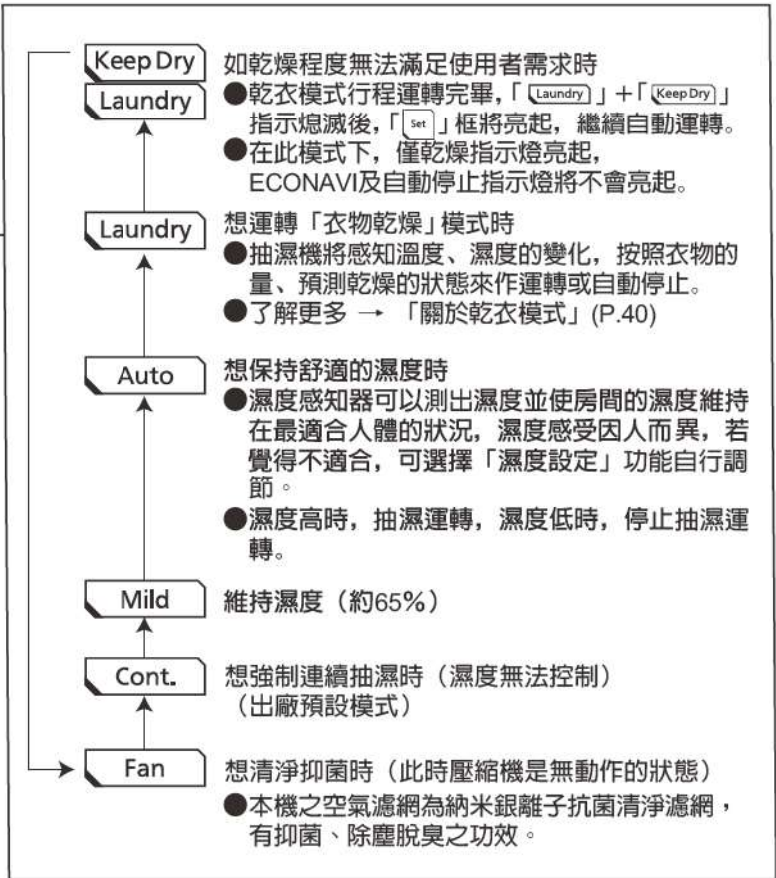

乾燥指示燈 ()

- 衣物乾燥時才有此機能。
- 通知衣物乾燥的狀態。

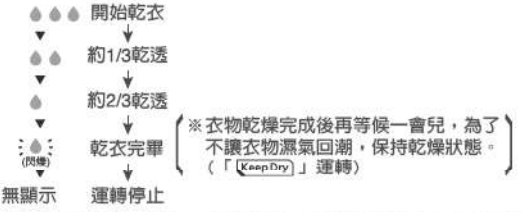

- 根據衣物的種類、數量、懸掛的方式、房間的環境等, 會有實際的乾燥狀態差異的可能。
- 若乾燥程度無法滿足使用者需求時, 可選擇含有「Keep Dry」的機能。

nanoe[®]X 指示燈

- 當衣物乾燥啟動時, 為保持衣物清新將進行脫臭、除菌, nanoe[®]X 功能將強制啟動, nanoe[®]X 指示燈亮起。(無法以手動解除, 此時若長按「Shoe Dryer」鍵3秒, 且再次按壓烘鞋/衣櫃按鍵時, 將發出嗶一提示音。

自行設定濕度抽濕時



1 插入電源插頭 運轉開始



 
2 按壓選擇



3 風量選擇 → P.32



4 風向選擇 → P.35



想自行設定需求的濕度抽濕時（出廠預設值為40%）

- 按「濕度設定」鍵設定需求的环境濕度值後，會顯示設定的濕度值及「Set」字樣約3秒後，回復顯示目前的濕度值及「Set」、「Now」字樣。
- 濕度感知器可以感知測出濕度並使房間的濕度維持在自行設定的濕度。
- 濕度高時，抽濕運轉，濕度低時，停止抽濕運轉。

■ 滿水指示燈閃爍時（P.37）

- 自動停止運轉→請將水箱水排除。

■ 想停止運轉時



- 運轉停止後為了本體內部乾燥，會有約3分鐘送風運轉。（關機防霉 P.29）
- 電源插頭於停止操作後3分鐘以上再拔下。

■ 待機中想使用定時開機時（P.36）



■ 運轉中想使用定時關機時（P.36）



靜音抽濕 / 快速抽濕 / 風量選擇



1 插入電源插頭 運轉開始



2 按壓選擇



- 當靜音或快速抽濕啟動時，風量顯示強制在「Auto」，此時若操作「Airflow 風量」按鍵，將發出嗶一嗶一提示音。

Quick Dry 想快速抽濕時（風量無法控制）
濕度高時，快速運轉，可快速降低濕度。

Quiet Dry 想降低噪音抽濕時（風量無法控制）
睡眠時，可降低噪音，在最適合人體的環境下運轉。

3 風向選擇 → P.35



想停止運轉時



- 運轉停止後為了本體內部乾燥，會有約3分鐘送風運轉。（關機防霉 P.29）
- 電源插頭於停止操作後3分鐘以上再拔下。

待機中想使用定時開機時 (P.36)



運轉中想使用定時關機時 (P.36)



風量選擇（功能選擇 / 濕度設定）

（請於 P30~P31 選擇運轉模式後設定）

■ 想作風量變化時

- 風量選擇只有「功能選擇」模式、「濕度設定」下可進行設定。（「Laundry」、「Keep Dry」模式下，風量無法變更）。



- 若室溫超過32°C時，機體進入保護，風量及搖擺方向將不接受調整。（此時若操作風量及搖擺方向按鍵，將發出嗶一嗶一提示音）

烘鞋 / 衣櫃模式運轉時



運轉 關/開 鍵

1

2

1 插入電源插頭 運轉開始



2 Shoe Dryer 烘鞋/衣櫃



- 當烘鞋/衣櫃啟動時，風量顯示強制在「Auto」模式且風向板強制關閉，此時若操作「Airflow 風量」、「Louver 搖擺方向 (Press 3 sec)」按鍵，將發出嗶一嗶一提示音。

想停止運轉時



- 運轉停止後為了本體內部乾燥，會有約3分鐘送風運轉。(關機防霉 P.29)
- 電源插頭於停止操作後3分鐘以上再拔下。

待機中想使用定時開機時 (P.36)




運轉中想使用定時關機時 (P.36)




※當在烘鞋/衣櫃模式下時，風向及風速不可改變。


1. 請將產品背面的烘鞋/衣櫃配件安裝口的蓋向上打開。

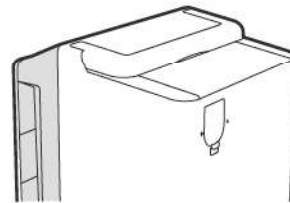


2. 對準卡勾，並插入烘鞋/衣櫃專用延伸軟管後，對準箭頭插入固定。

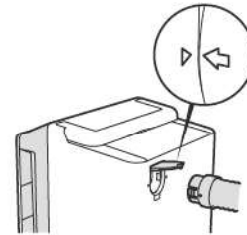

3. 請將延伸軟管跟烘鞋、烘衣櫃之專用配件連接。

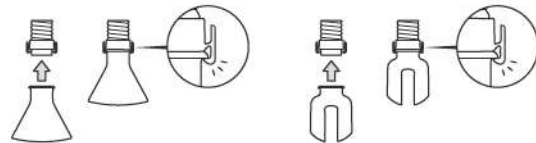

4. 請拉長延伸軟管，並將配件對準想烘乾的物品後，進行烘鞋/衣櫃功能。

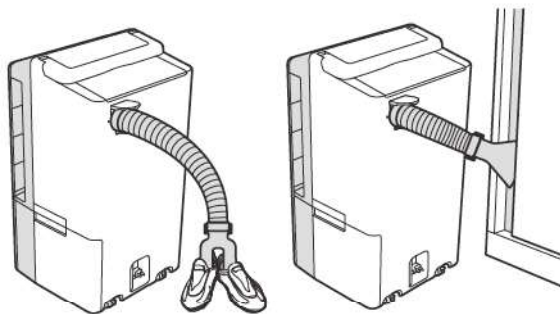

⚠ 注意

- 請不要抓住延伸軟管來移動抽濕機，可能翻倒導致傷害。
- 啟動烘鞋/衣櫃模式時，務必打開配件安裝口蓋及配合配件使用，以免造成危險。
- 長時間使用「烘鞋/衣櫃」乾燥模式時，為保護產品，可能停止運轉。

nanoe[®]X 抑菌除臭

nanoe[®]X 設定

- nanoe[®]X 設定（出廠預設值為開，當運轉中按壓「」鍵持續3秒鐘nanoe[®]X LED閃爍一下，再次按壓「」按鍵即可選擇設定關閉或開啟。

nanoe[®]X（衣物乾燥/保持乾燥/功能選擇/濕度設定/靜音/快速抽濕/烘鞋/衣櫃）

■ 想作脫臭時運轉中



■ 在「衣物乾燥/保持乾燥」時

為保持衣物清新將進行脫臭、除菌，nanoe[®]X 功能將強制啟動，nanoe[®]X 指示燈亮起（無法以手動解除，此時若操作 nanoe[®]X 複合按鍵，將發出嗶—嗶—提示音），如聲音設定被關閉，將無法聽見嗶—嗶—提示音（出廠預設的聲音設定為關閉）

■ 在「功能選擇」、「濕度設定」、「靜音/快速抽濕」、「烘鞋/衣櫃」模式時

此時 nanoe[®]X 功能可依個人需求選擇開、關操作。

關於 nanoe[®]X（納米離子）

本製品搭載「nanoe[®]X」，其生成的OH氫氧離子為「nanoe[®]」的100倍。

產生的環境條件

- nanoe[®]（納米離子）利用室內空氣產生，根據溫度和濕度的不同，有時可能無法穩定生成。
- 產生條件
室內溫度：約5 °C~35 °C（露點溫度：2 °C以上）
相對濕度：約30 %~約85 %

發生少量臭氧

- 產生nanoe[®]（納米離子）的同時，也會產生微量臭氧。但其產生量遠遠不及自然森林存在的臭氧量，對人體沒有甚麼影響。
- 如果有感覺臭氧的味道時，請取消「抑菌、除臭」功能。

■ nanoe[®]「納米離子」

所謂nanoe[®]（納米離子），是通過施加高電壓來分離水分子而產生的帶電淨水粒子。依靠nanoe[®]（納米離子）技術，能有效除菌、抑制過敏物質、殺滅真菌、去除附著性氣味等，從而打造出美膚空間。除臭效果會根據周圍環境（溫度、濕度）、運行時間、臭氣、纖維的種類的不同而有所不同。

- 單體測試與實際使用效果會因房間狀況與使用方法的不同而有所不同。
- 本設備不屬於醫療器材。

● 關於 nanoe[®]X 的效果（除菌·抗敏）

效 果	試驗機構	試驗方法·效果（非實地使用空間的實驗結果）
抑制在空氣中浮游和附著在窗簾等家具上的細菌繁殖	（一財）北里環境科學中心	在 25 m ³ 的試驗室中經過 4 小時後進行檢證，確認浮游菌（1種類）的繁殖有 99% 以上被抑制。
	（一財）日本食品分析中心	在 23 m ³ 的試驗室中經過 8 小時後進行檢證，確認附著菌（1種類）的繁殖有 99% 以上被抑制。
抑制在空氣中浮游和附著在窗簾等家具上面的黴菌繁殖、成長	（一財）北里環境科學中心	在 25 m ³ 的試驗室中經過 6 小時後進行檢證，確認浮游黴菌（1種類）的繁殖有 99% 以上被抑制。
	（一財）化檢檢驗機構	在 30 m ³ 的試驗室中經過 2 小時後進行檢證，確認附著黴菌（1種類）的成長可被抑制。
抑制花粉等過敏原的活動（不活化）	Panasonic(株) 解析中心	根據ELISA法進行試驗。在 23 m ³ 的試驗室中以單一種類的花粉進行檢驗。確認單一種類花粉的活動在 3 小時後可被抑制達到99%。
		根據電氣泳動法進行試驗。在 23 m ³ 的試驗室中以 13 種的花粉過敏原進行檢證。確認過敏原在 24 小時後可被抑制。

風向的選擇

風向的選擇操作方法（衣物乾燥 / 保持乾燥 / 功能選擇 / 濕度設定）



按照想把風送達場所的高度範圍調節風向。

想選擇風向時

運轉中 ⇨  (按下選擇)



不作風向擺動，只想變更風向

⇨ 「」選擇「廣角」，到達需要的位置時，再次按下「」鍵。

- 「Louver」顯示熄滅，風向板固定在自行設定的位置。




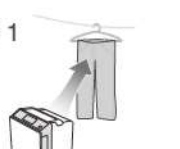
提醒

- 風向擺動時，請勿用手去移動風向板。（擺動範圍會被改變）
- 若有上述情況發生時，請依風向選擇操作方法，重新設定風向或重新開機，角度就會恢復正常。

風向的設定例

快速乾衣的秘訣

- 1 抽濕機吹出的風直接吹向衣物。
- 2 衣物間要留間隙，以便讓空氣流通。
- 3 抽濕機和衣物間距離40厘米以上。




衣物乾燥	衣物掛於下方時	下方向	
	衣物掛於上方時	上方向	
	衣物上 / 下二層時	廣角	
	少量衣物時	廣角 * 1	

* 1：視衣物懸掛的高度及衣櫃等的高度而定，作「上方向」或「下方向」的切換。

- 根據衣物的種類、數量、懸掛的方式、房間的環境等，會有實際的乾燥狀態差異的可能。

注意


- 皮鞋等的皮革製品不可使用抽濕機乾燥。（否則可能造成變形或變質）

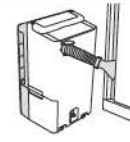抽濕模式	天花板 / 牆壁等	上方向	
	鞋子等		
烘鞋 / 衣櫃	衣櫃 / 鞋櫃等	* 2	

* 2：依實際需要之情況，調整烘鞋 / 衣櫃專用延伸軟管至適當位置，使風能夠吹向需要抽濕的地方。

時間掣的設定/聲音設定/安全鎖設定/亮度設定

待機中想使用定時開機時

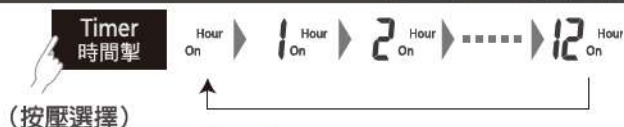

- 在待機中按壓「**Timer 時間掣**」鍵時，(運轉中無法設定“定時開”) LCD畫面點亮*1，設定完成後，需按壓一次「**Power On 開/關**」鍵完成“定時開機”設定完成；若要取消則再次按壓「**Power On 開/關**」鍵即可取消定時設定。
- 在“定時開機”設定模式下，若無任何設定動作，則畫面的設定及LCD背光約15秒後離開此次設定，畫面顯示上一次設定的狀態。

 
- 當“定時開機”設定後，操作其它按鍵皆無效。(「**Power On 開/關**」鍵、「**Timer 時間掣**」鍵、安全鎖除外)
 - 定時開機時間設定後，會計算顯示剩餘的時間，例如：設定「9小時」，當剩餘8小時時，會顯示「8小時」，其他以此類推
- *1：進入“定時開設定”模式下，以預設值表示，或上一次的設定狀態。

運轉中想使用定時關機時



- 在開機模式下按壓「**Timer 時間掣**」鍵。
- 定時關機時間設定後，會計算顯示剩餘的時間，例如：設定「9小時」，當剩餘8小時時，會顯示「8小時」，其他以此類推。
- 定時關機設定完成後，即使水箱滿水運轉停止，仍繼續時間的計算。
- 衣物乾燥的模式下，作定時關機的設定，ECONAVI指示燈、自動停止指示燈及乾燥指示燈不會顯示。

聲音設定



- 聲音設定啟動
當運轉中按壓風向按鍵持續約3秒，LCD聲音區字樣開始閃爍，閃爍中再次按壓「**Louver 搖擺方向 Sound Off/On (Press 3 sec)**」鍵即可選擇設定。
- 離開聲音設定
LCD聲音區字樣閃爍約5秒後無操作，或按壓其他功能鍵，則離開設定。

安□鎖設定

- 安□鎖啟動
當待機中或運轉中按壓「**Humidity 濕度設定 Key Lock (Press 3 sec)**」鍵持續約3秒時安□鎖啟動，LCD「**lock**」顯示亮起，此時操作其它按鍵皆無效(鎖定時，按壓任一鍵，背光將會亮起)。
- 安□鎖解除
當待機中或運轉中按壓「**Humidity 濕度設定 Key Lock (Press 3 sec)**」鍵持續約3秒時安□鎖解除，LCD「**lock**」顯示熄滅，此時可操作任何按鍵。
★當斷電時安□鎖會自動解除，若需啟動安□鎖時，必須重新設定。
★當水箱為滿水狀況時，需先排除滿水(倒掉)後，安□鎖才會接受解鎖操作。

LED 燈亮度設定



- 亮度設定(出廠預設值為亮)
當運轉中按壓「靜音抽濕」鍵持續3秒，可同步調整操作板LED、水箱指示燈亮度。當亮度設定微亮時，運轉指示燈關閉，操作板LED維持微亮。
★長壓「靜音抽濕」鍵3秒鐘進入亮度控制，只有在運轉中方可改變亮度設定。
★亮度控制為控制ECONAVI、nanoe®X、滿水、烘鞋/衣櫃、運轉指示燈的亮度。


風向板脫落時的處理/水箱滿水的處理

風向板脫落時的處理


風向板脫落時

■ 風向板安裝的方法

- 1 左側的孔向本體左側突起物插入
- 2 風向板中央部分稍作彎曲
- 3 右側插入本體

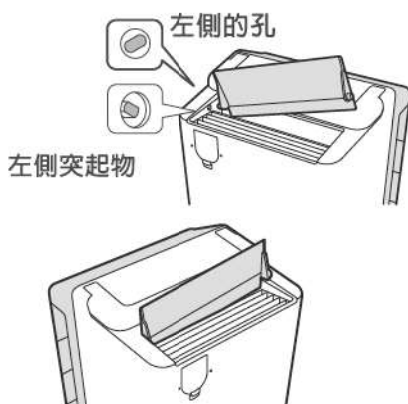


水箱滿水的處理方法


- 當水箱的水位達到滿水線時自動停止運轉。此時運轉指示燈持續亮紅色光，「」指示燈持續點滅（當設定滿水提示音為開時，則在紅色光顯示同時，會有約 6 秒嗶·嗶·嗶·提示音）。
- 請依下列步驟排水

- 1 以拇指按住機體後，手握把手順勢取出水箱

- 不要與本體內部發生碰撞（有可能導致故障）

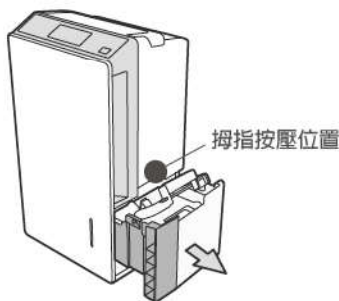


- 2 手持水箱把手正中央部位至排水處（移動時避免大力搖晃，否則可能使水溢出，導致意外發生）

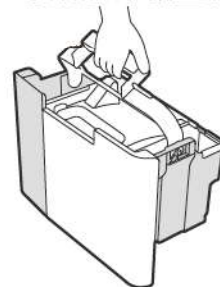



- 3 押住水箱蓋打開排水口



 - 4 手持水箱把手正中央部位及托住底部排水

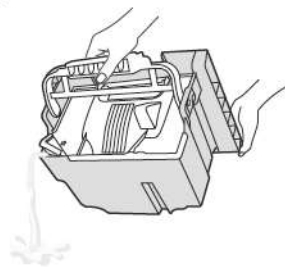


點滅時
及
運轉指示燈亮
紅色光

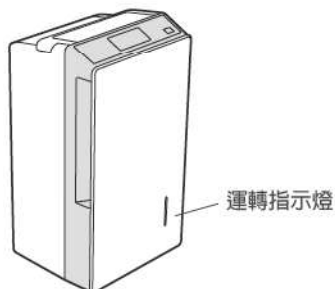

■ 水箱的安裝方法

排水口關閉，水箱放入指定位置

- 水箱蓋和排水口必須確保完全關閉才可安裝。（否則可能造成水箱無法完全裝入或產生漏水）
- 推入水箱時請推至底，安裝時如果水箱受到碰撞或沒有安裝牢固，有可能滿水指示燈點滅無法運轉，請再次取出，重新安裝。

連續排水的使用方法

■ 若附近有排水處，可連接水管使用連續排水功能。

(若要安裝連續排水功能或想要恢復原來狀態時，請向原購買的經銷商或服務中心查詢。)

⚠ 注意

■ 排水管要安裝牢固



請注意避免排水管彎曲及落差等現象，確保做好排水工作。如排水不暢順，可能導致漏水弄濕屋內財物。


■ 注意不要使排水管周圍溫度低於攝氏零度




可能使排水管內的水結冰，不能排水導致漏水弄濕屋內財物。

安裝排水管時

正確例

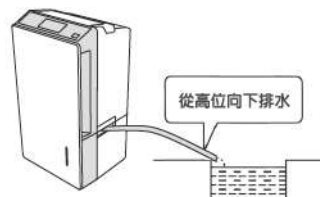

錯誤例

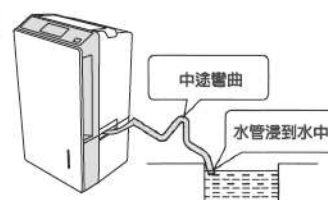


須購置的物品

- 市售塑膠水管
長度：比抽濕機到排水位距離多出30厘米
內徑：15毫米

提醒


請注意當排水管內水溫和周圍溫度存在溫差時有可能在排水管表面結露，請根據具體情況採取保溫措施。

1 拔下電源插頭取出水箱

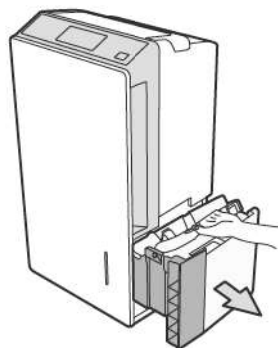


2

止水閥

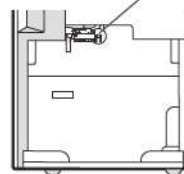


依箭頭方向
往後按壓

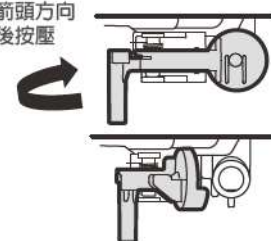

3 裝上排水管

將排水管的一端確實插入排水彎頭

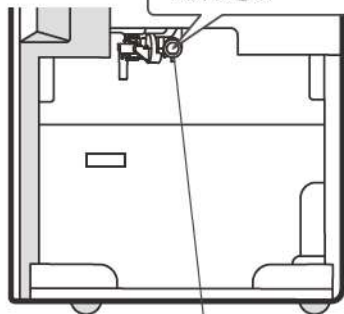


排水彎頭

4 裝上水箱

排水管需於此結構上方



5

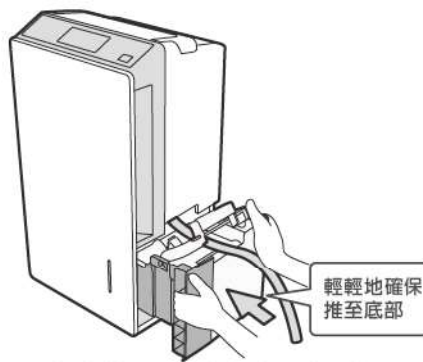

輕輕地確保
推至底部

- 安裝不正確會導致無法運轉。
- 排水管需穿過把手與水箱。

註：1. 還原正常排水模式時，不當安裝將造成水箱內積水溢出，請向原購買的經銷商或服務中心查詢。

維護保養的方法



維護保養前務必
將水箱水排除！

- 請務必拔下電源插頭，將水箱水排除。
(排水的方法P.37)




- 請勿使用左列洗劑。
(有可能造成塑膠部
品變質、變色或破
損)
- 化學抹布使用時，請
務必詳讀注意說明後
使用。


保養水箱 (建議每月一回)

- 水箱、水箱蓋用水沖洗2~3回。
- 不用拆下浮球，用水即可清除污漬。


水箱蓋拆下方法

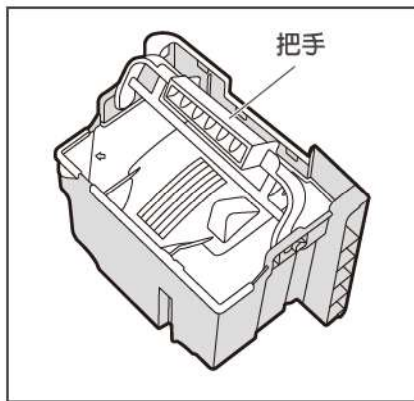


① 將水箱把手轉起

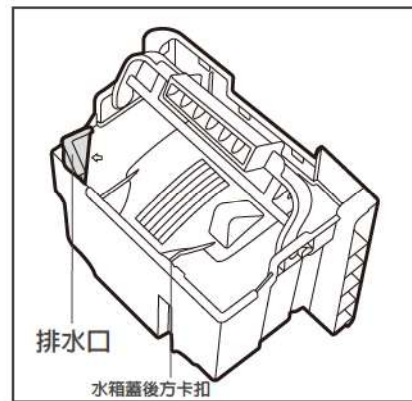

- ② 將排水口及
水箱蓋後方
卡扣打開
- 請勿強拉排水蓋
及卡扣

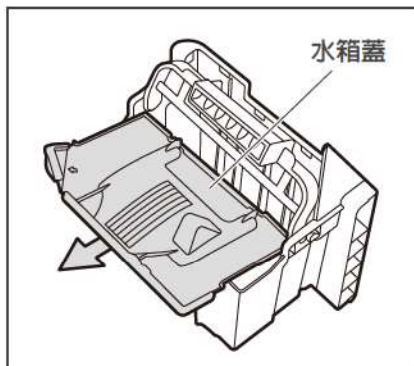

③ 水箱蓋向外拉起

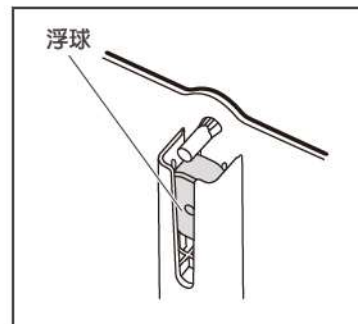

- 浮球
- 周邊的污漬，用水清
除。(可防止浮球的
誤觸)
- 不要拆下浮球
(沒有正確的安裝時
，有可能造成無法運
轉、漏水的原因)。

- 不易清除的污漬，請使用稀釋過的
廚房中性洗劑。
- 依據房間的狀況，水箱內側有可能
有發黑情形。(因為空氣中的髒污
溶入抽濕水所致)


長時間不使用時



- ① 為了讓內部的殘留水份乾燥，減少霉菌的繁殖，請選擇「Fan」運轉並設定定時約1小時後關機。
- ② 拔下電源插頭，放置1天後排除水箱水 (P.37)
- ③ 清潔本體，水箱及濾網。
- ④ 用塑膠袋把本體蓋好。
- ⑤ 把抽濕機放置於濕氣少通風、水平及地面平坦的地方，存放保管。
(如傾斜擺放，可能導致故障及漏水)

■ 本體，使用擰乾的布擦拭，再用乾布擦拭。

- 請勿把本體橫放。(有可能導致漏水)
- 不易清除的污漬，請使用稀釋過的廚房中性洗劑。

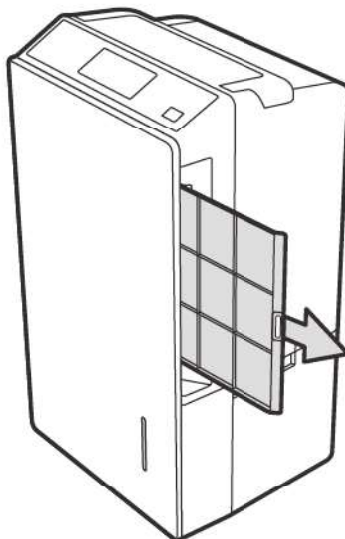


濾網 (建議每兩週一回)

用吸塵器吸去污垢




- 勿使用水洗，請使用吸塵器清潔濾網

■ 拆下方法

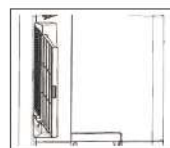

- 側邊向後拉出

■ 安裝方法

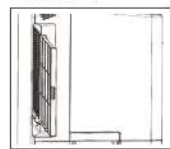

- 對準側邊滑槽(上下各一處)，向前推入，嵌入本體

- 如有破損請更換。
- 定期的維護保養。
(如髒污、濾網堵塞時，抽濕能力會下降，增加電費，且有可能導致故障)

關於衣服乾燥模式

■ 關於ECONAVI

選擇「Laundry」時，風量強制在「Auto」模式ECONAVI指示燈、乾燥指示燈同時顯示、「衣物乾燥」模式結束後亦同時熄滅。抽濕機透過感知溫度、濕度的變化，按照衣物的量、預測乾燥的狀態運轉或自動停止。

- 自動停止前的運轉時間參考 (單位：小時)

型號	F-YVB38H
衣物的量	「乾衣」運轉時間 (小時)
約2kg~4kg	3.0~4.2
約4kg~6kg	4.2~6.2

試驗條件：溫度約20°C
濕度約80%
房間的大小約20平方米。
(本公司試驗結果)

- 實際使用的運轉時間及消耗電功率，根據使用的環境、衣物的種類、數量、懸掛的方式及房間的大小會有實際的乾燥狀態差異的可能。
- 建議若使用抽濕機來乾衣時，其空間越小越好 (建議不要超過20平方米)，且密閉性越佳越好，會減少不必要能源浪費。
- 最長約10小時後停止運轉。

故障!?

首先，請作以下的確認。

如經以下處理方法，異常仍無法解決時，請拔下電源插頭並向原購買的經銷商或服務中心查詢。

問題點	請確認內容
① 按鍵無法操作	<ul style="list-style-type: none"> ● 滿水指示燈點滅？(P.37), 檢查指示燈閃爍？(P.29), 安全鎖設定？(P.36), 安全保護？(P.29)
② 未滿水但滿水指示燈在閃爍	<ul style="list-style-type: none"> ● 水箱或浮球正確的安裝嗎？(P.37, P.39) ● 水箱安裝時是否曾遭撞擊？(P.39) → 拿出水箱蓋然後重新安裝。
③ 漏水	<ul style="list-style-type: none"> ● 本體是否有傾斜或傾倒？ ● 移動本體時水箱是否有水？(P.26) ● 浮球是否脫落？或是沒有正確安裝？(P.39)
④ 水箱儲水不易 (抽濕量少)	<ul style="list-style-type: none"> ● 濾網是否堵塞？(P.40) 出風口或入風口是否有堵塞？(P.26) ● 室內的溫度或濕度是否太低？(溫度或濕度變低時，抽濕量也會變少) ● 是否使用「靜音抽濕」或「<input type="checkbox"/> Mild」模式？ ● 溫度約7°C~40°C以外的場合，抽濕運轉停止，變成「<input type="checkbox"/> Fan」運轉。(P.29)
⑤ 水箱沒有存積水	<ul style="list-style-type: none"> ● 是否設定「<input type="checkbox"/> Fan」模式？ → 「<input type="checkbox"/> Fan」模式不會存積水。
⑥ 衣物乾燥時間長	<ul style="list-style-type: none"> ● 濕冷的空氣是否進入室內？ → 儘可能在房間關閉狀態下使用。
⑦ 衣物乾燥不佳	<ul style="list-style-type: none"> ● 是否脫水不完全下乾燥？ ● 濕冷的空氣是否進入室內？ → 儘可能在房間關閉狀態下使用。 ● 是否在電暖器附近使用？ (內部感知器的周邊溫度上升，乾燥時間無法作適切的判斷。) ● 風是否吹向衣物全體？ ● 衣服是否重疊、間隔不足下乾衣？
⑧ 濕度無法降低	<ul style="list-style-type: none"> ● 濕冷的空氣是否進入室內？ → 儘可能在房間關閉狀態下使用。 ● 室內是否有其他釋放水蒸氣的設備？
⑨ 持續抽濕但一直結露	<ul style="list-style-type: none"> ● 靠近外側的窗戶或傢俱的內側等通風性差的場所，抽濕效果無法充分發揮。
⑩ 檢查指示燈閃爍，並出現故障代碼「11」	<ul style="list-style-type: none"> ● 本體是否傾斜？ → 1. 拔下電源插頭，將本體扶起（擦拭溢出的水） 2. 本體放置半天以上不要使用。（內部有水侵入時，為了讓它完全乾燥） 3. 再次插入電源插頭，運轉抽濕。 ● 本體的傾斜角度是否過大？ → 拔下電源插頭，重新插入。 ● 本體的上方，是否有放置磁鐵或金屬？
⑪ 誤觸	<ul style="list-style-type: none"> ● 操作面板上是否有異物、水滴或灰塵？(P.29)
⑫ 產生吱-吱音或嘶-嘶音或流水聲	<ul style="list-style-type: none"> ● 此為抽濕機內部冷媒之流動音或為 nanoe[®]X 納米離子產生時的聲音，並非故障。
⑬ 在「烘鞋/衣櫃」模式下產生咻咻風切音	<ul style="list-style-type: none"> ● 是否將把手放置於正確位置？(把手未放置於正確位置，導致風跑到把手縫隙，產生風切音。)
⑭ 出風量少	<ul style="list-style-type: none"> ● 濾網是否髒污？(P.40)

故障!?

首先，請作以下處理。

如經以下處理方法，異常仍無法解決時，請拔下電源插頭並向原購買的經銷商或服務中心查詢。

問題點	請確認內容
⑮ 出風口溫度及烘鞋衣櫃配件出風口比室內溫度高	● 壓縮機起動時，室內空氣冷熱交換，出風口的溫度會提高，屬正常現象。
⑯ 使用「烘鞋/衣櫃」模式時，壓縮機停止運轉	● 如長時間使用，有可能停止運轉以保護本產品。 ● 可能有異物堵住配件出風口，為了保護產品，會停止運轉，請檢查是否有異物堵住。

如為以下的情形，請務必拔下電源插頭，向原購買的經銷商或服務中心查詢。

問題點	請確認內容
⑰ 「檢查」指示燈保持顯示（不閃爍）時，並出現故障代碼（P.29檢查）	● 本體故障，請記下故障代碼，並向原購買的經銷商或服務中心查詢。

緊急處理方法

出現下述症狀時立即停止運轉，拔下電源插頭並向原購買的經銷商或服務中心查詢。

- 開關操作不正確。
- 漏電開關或保險絲時常熔斷。
- 電源線及電源插頭異常發熱。
- 運行時間到燒焦氣味或發出異常聲音。
- 從主機有水漏出。
- 其它異常故障。

敬請遵守

如果電源軟線損壞，為了避免危險，必須由該機器的廠商，維修服務中心或合資格技術人員更換。

長時間使用的抽濕機點檢！


是否有此症狀？

- 通電後無法運轉或運轉中突然停止。
- 移動電源線，有時通電有時不通電。
- 扇葉在回轉中，有異常的聲音或振動產生。
- 本體異常發熱，有燒焦味產生。
- 其他的異常或故障。

有此症狀時，為防上事故發生，請關閉電源，抽濕機停止運轉時耗電量約 1.1W。(電源插頭插入時) 拔下電源插頭，洽詢服務站或經銷商。

★使用多年之電器，應主動聯繫相關業者進行檢修及保養，以提高商品使用的安全性。

規格

型號	F-YVB38H		
電源	220 V~ 50 Hz		
電源插頭形			
操作環境	溫度	26.7 °C	30 °C
	相對濕度	60 %	80 %
抽濕能力 (升/日)	24	38	
消耗電能 (瓦)	357	440	
水箱容量 (公升)	約5.5公升時自動停止運轉抽濕		
重量 (公斤)	20.5		
外形尺寸 (寬X高X深) (毫米)	380X680X320		

● 抽濕機停止運轉時耗電量約為1.1W。(電源插頭插入時)

顧客購買記錄

此機產品型號及批號標示請見機身後方
請把相關資料填入下表，並保留以作將來參考用。

型號	批號 / SERIAL No.
購買日期	經銷商名稱批號
經銷商地址	
電話號碼	

Panasonic Corporation

Web Site : <http://www.panasonic.com/>

© Panasonic Ecology Systems Co., Ltd. 2024.

C8041-4220
2024.10