

Operating & Installation Instructions

Washer Dryer (Household Use)

Model No. NA-S106FR2





It is essential to read these instructions.

ΕN

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

2
7
8
10
12
14
16
18
20
22
28
29
33
34
40
42
43
45
47
48



Safety Precautions

/ WARNING

May cause serious injury or death

Children must not use it alone.




 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


• Children should be supervised to ensure that they do not play with the appliance.

Setting the Child Lock. (P. 28)




May cause fire or electric shock

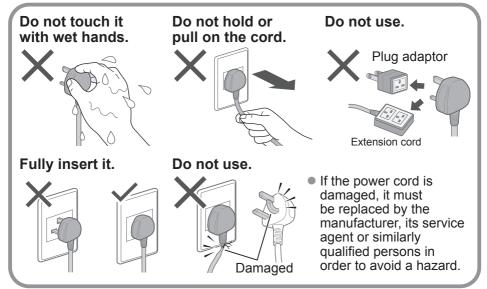

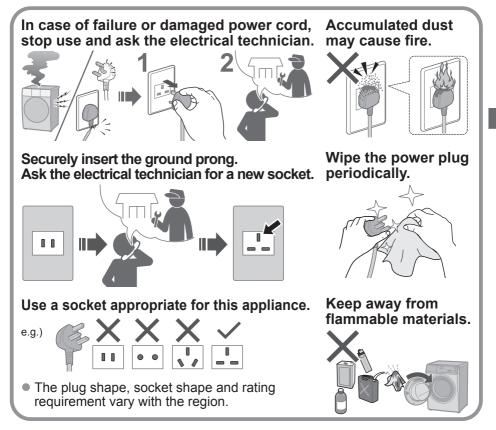

May cause failure

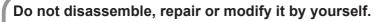



Safety Precautions (continued)

/ WARNING


May cause fire (For safety use of the dryer)

Do not dry items soiled with flammable materials.



 Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and cosmetic oils must not be dried in the appliance even after having been washed.

Empty all pockets.

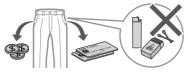

• Make sure that no objects are left in any of the pockets. Pay particular attention to cigarette lighters and matches. They may cause fire.

Do not dry items made of rubber, etc.



 Items such as foam rubber (latex foam), shower caps, waterproof textiles, airtight fabrics, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance. Such materials may be destroyed and thereby damage the appliance.

• Do not dry unwashed items in the appliance.

The lint must not be allowed to accumulate around the appliance.



Observe the following.


- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.



May cause water leakage




May cause injury

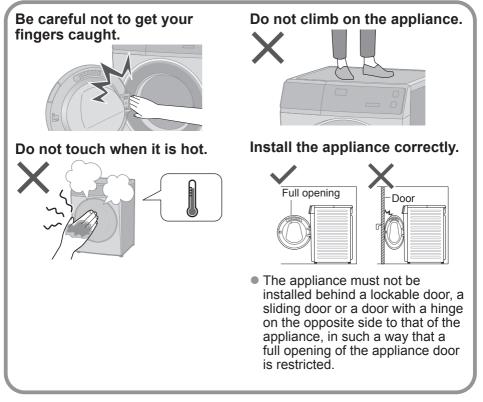

■ For maximum mass of dry cloth and pressure of tap water, see P. 48.


Safety Precautions (continued)

May cause failure

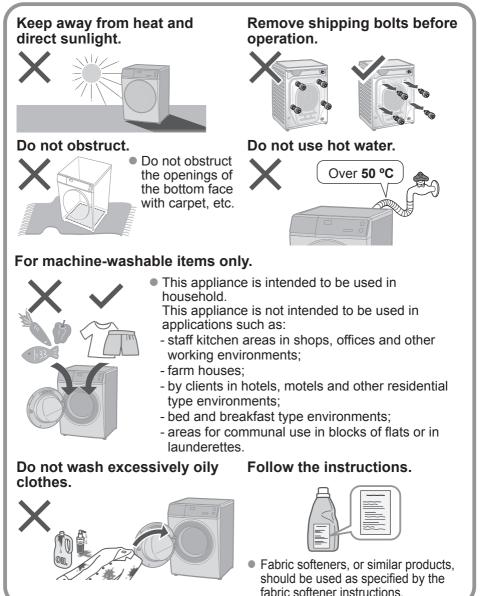

Checking Your Appliance

Part names

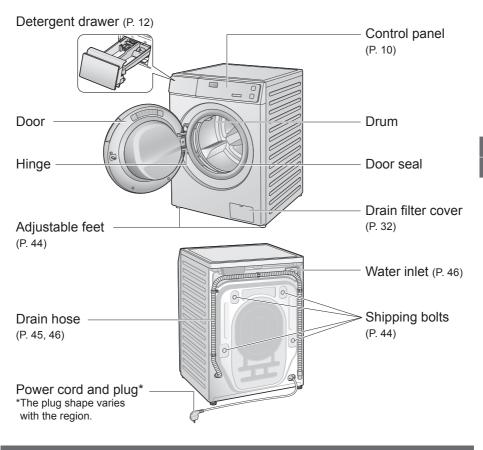

Accessories

Hose hanger (1) (P. 46)



□ Water supply hose (1) (P. 45, 46)



Cover cap (4) (P. 44)



□ Bottom cover (1) / Screw (1) (P. 43)




Before Washing

Preparing laundry

Before put clothes in drum

Remove foreign objects.

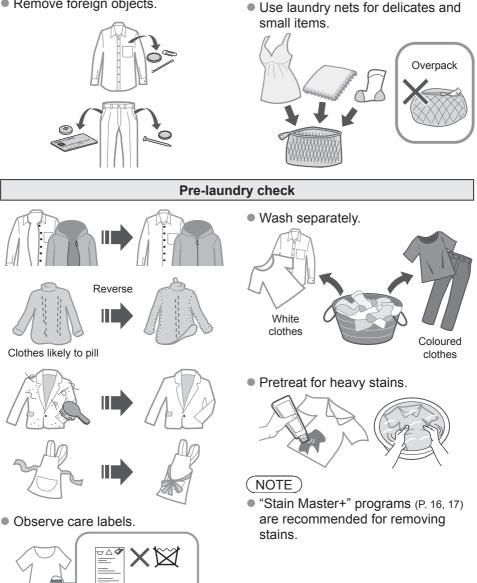




(NOTE)


 May cause clothing deformation, damage and harm or malfunction to the appliance.

Control Panel

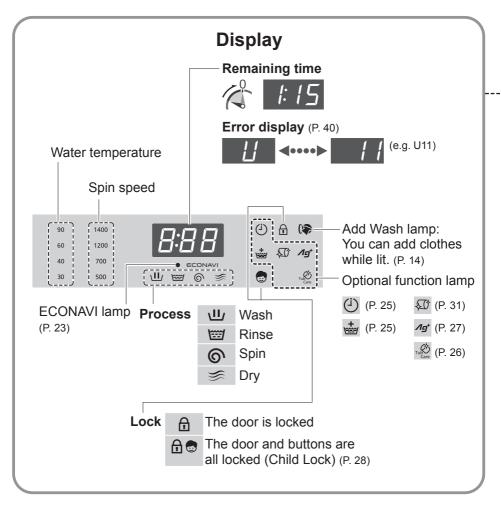

Control buttons

Power button

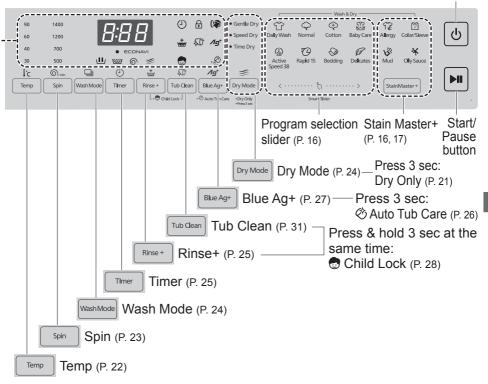

Touch operation

 If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



NOTE

Turn off is back on



- No operation auto power off (Not pressed ■) Auto Power off 10 min.
- In case of a power failure
 - When the power recovers, operation resumes from where it stopped. (Auto Restart)


Detergent


• Follow the instructions on each package.

Detergent

Use a low foam detergent.

 To prevent powder detergent from remaining in the detergent drawer:

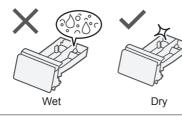

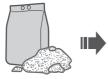






Powder


Lumps

U Detergent Powder detergent Liquid detergent Bleach Detergent Detergent Liquid detergent

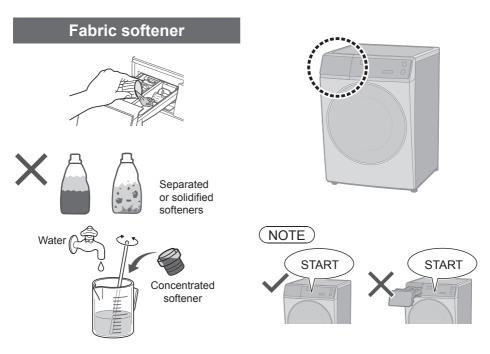

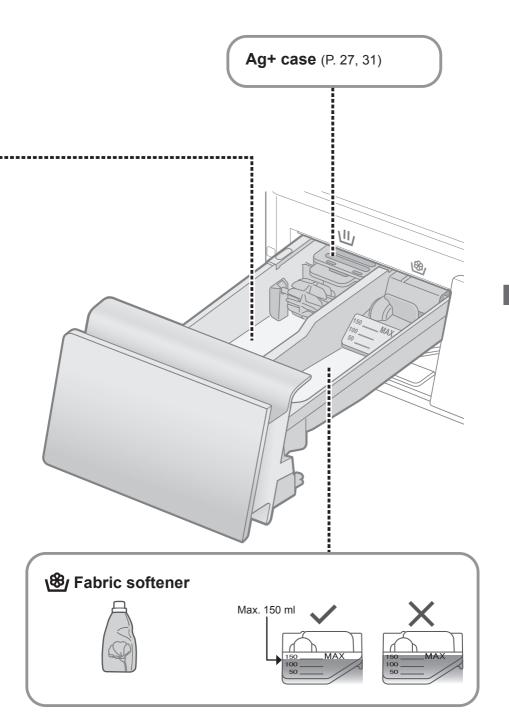

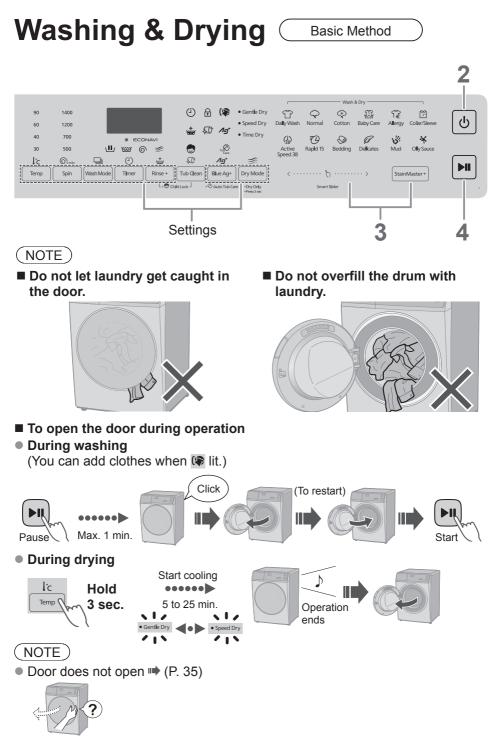

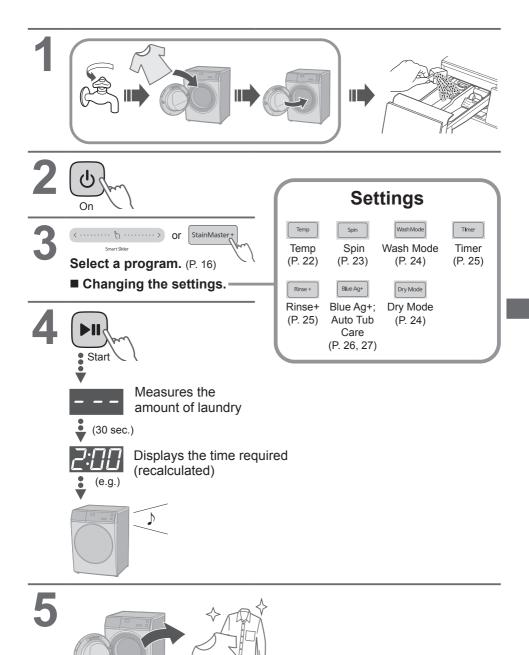

Program List

WASH & DRY / WASH

		Max lo	ad (kg)	Total time		
Program	Description	Wash	Dry	WASH	WASH & DRY	
ි Daily Wa	sh • Everyday clothes (Quicker than "Normal" program)	10.0	6.0	1:30	4:53 - 7:25	
♀ Normal	• Everyday clothes	10.0	6.0	2:54	6:10 - 8:50	
(‡) Cotton	Gentle wash with extra time	10.0	6.0	3:00	6:18 - 8:18	
述 Baby Ca	 Clothes for babies & sensitive skin Rinsing thoroughly Clothes for babies & sensitive skin Rinsing thoroughly 	5.0		2:20	5:45 - 7:35	
∢∬ Tub Clea	Cleaning the drum.	None		3:45	4:25	
StainMaster+	For the following stains	For the following stains				
רביים אוופ וייבי Alle	• For mites and pollen	10.0	6.0	3:15	5:53 - 9:13	
Coll		10.0	6.0	3:10	6:35 - 8:30	

WASH

Program	Description	Max load (kg)	Total time
(j) Active Speed 38			0:38
	 Small loads of lightly soiled 	2.0	0:15
lang Bedding	Large items	3.0	1:30
	Washing gently	2.0	0:50
StainMaster +	For the following stains		
لاً 🖗 Mud	A A A A A A A A A A A A A A A A A A A	10.0	3:30
✤ Oily Sauce	J & C	10.0	3:00

DRY

Program	Description	Max load (kg)	Total time
Dry Only Dry Mode Hold 3 sec.	Used to dry clothes.	6.0	1:54 - 6:00

• **Total time is approximate** (When the standard water supply rate is 15 L / min). For each program's default water temperature.

Details of Programs

	Settings	ttings Auto setting		ting	
Program		Temp (°C)	Spin (r/min)	Dry	Temp (°C)
	① Daily Wash	40	1200	Gentle	Cold, 30, 40, 60
	♀ Normal	40	1200	Gentle	Cold, 30, 40, 60
	< Cotton	40	1400	Gentle	Cold, 30, 40, 60
WASH & DRY	Baby Care	40	1400	Gentle	Cold, 30, 40, 60
	רא אוlergy	90	1200	Gentle	60, 90
	Collar/Sleeve	40	1200	Gentle	40
	<section-header> Tub Clean</section-header>	40	1200	Speed	40
	📅 Daily Wash	40	1200	_	Cold, 30, 40, 60
	\bigcirc Normal	40	1200	-	Cold, 30, 40, 60
	< Cotton	40	1400	_	Cold, 30, 40, 60
	Baby Care	40	1400	_	Cold, 30, 40, 60
	רא אוlergy אוlergy	90	1200	-	60, 90
	Collar/Sleeve	40	1200	_	40
WASH	<section-header> Tub Clean</section-header>	40	1200	_	40
	(j ₃₈) Active Speed 38	40	1200	_	Cold, 30, 40
	The Rapid 15	Cold	1200	_	Cold
	√ Bedding	Cold	700	-	Cold, 30
	G Delicates	30	500	_	Cold, 30, 40
	₩ Mud	40	1200	_	40
	🔆 Oily Sauce	40	1200	_	40
DRY	Dry Only	_	✓ *1	Gentle	_

(NOTE)

 For normally soiled laundry at the rated capacity, we recommend using the "Cotton, 60 °C, 1400 r/min" which is tested in accordance with IEC 60456 for the energy and water efficiency aspects.

• Actual water temperature may differ from the declared cycle temperature.

• These results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.


Setting range			Or	otional	functio	ons _	
Spin (r/min)	Dry Mode	Wash Mode	Dry Mode		Rinse+	Blue Ag+	Auto Tub Care
1200, 1400	Gentle, Speed, Time	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
1200, 1400	Gentle, Speed, Time	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
1200, 1400	Gentle, Speed, Time	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
1200, 1400	Gentle, Speed, Time	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
1200	Gentle, Speed, Time	_	\checkmark	\checkmark	\checkmark	_	\checkmark
1200, 1400	Gentle, Speed, Time	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
1200	Speed	_	\checkmark	_	_	_	_
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
Ø, 500, 700, 1200	_	-	_	\checkmark	\checkmark	_	\checkmark
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
1200	_	_	_	_	_	_	_
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	_	\checkmark	\checkmark
Ø, 500, 700, 1200	_	_	_	\checkmark	_	_	_
Ø, 500, 700	_	\checkmark	_	\checkmark	\checkmark	\checkmark	_
Ø, 500	_	\checkmark	_	_	\checkmark	\checkmark	_
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
Ø, 500, 700, 1200, 1400	_	\checkmark	_	\checkmark	\checkmark	\checkmark	\checkmark
_	Gentle, Speed, Time	_	\checkmark	_	_	_	_


Ø : Drain only (No spin)

- Setting time for Time Dry: 30, 60, 90, 120, 180, 210 min.
- *1 In case of "Gentle Dry" or "Speed Dry" mode, If the weight of clothes is heavy, spin is performed: 1200 If the weight of clothes is light, spin is not performed: ø


Washing & Drying Tips


Bedding

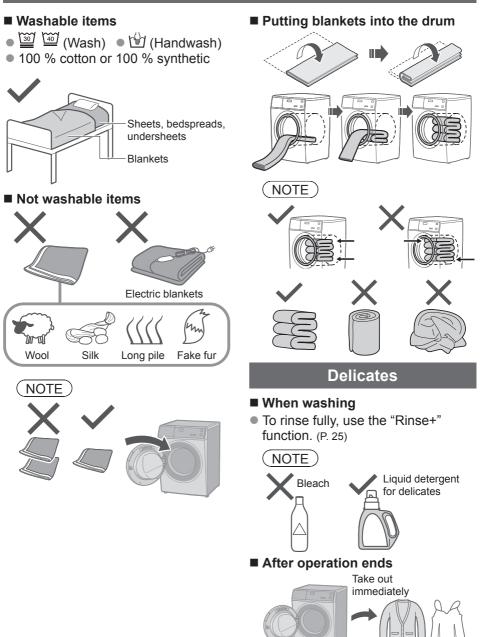


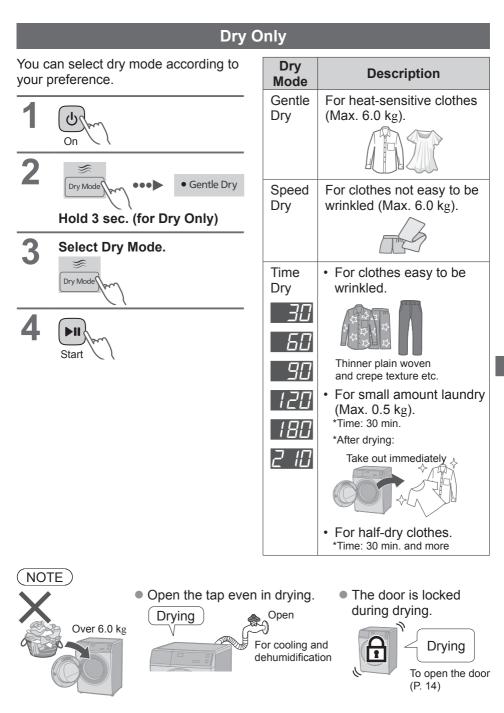


Changing Program Settings

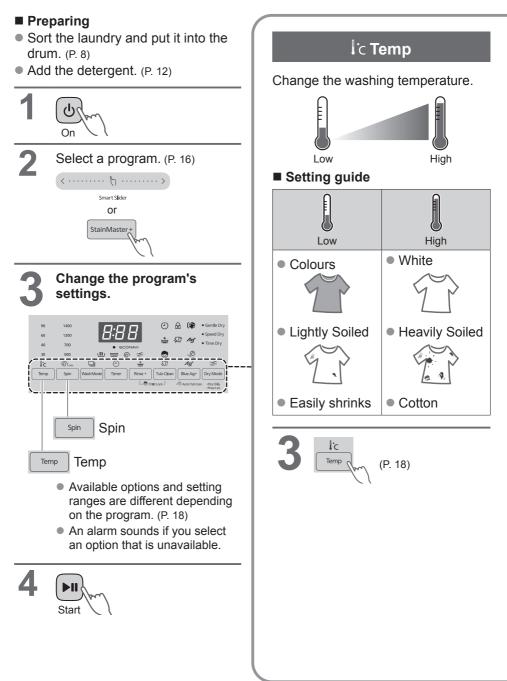


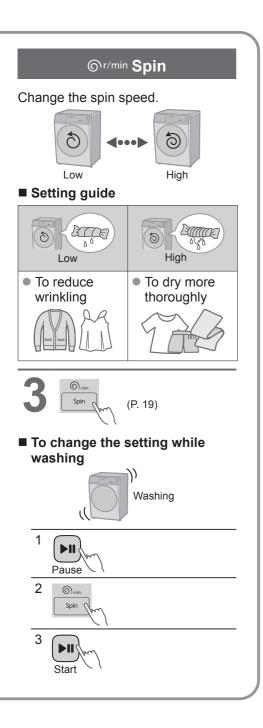

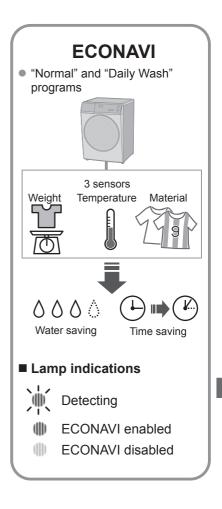



Changing Program Settings (continued)

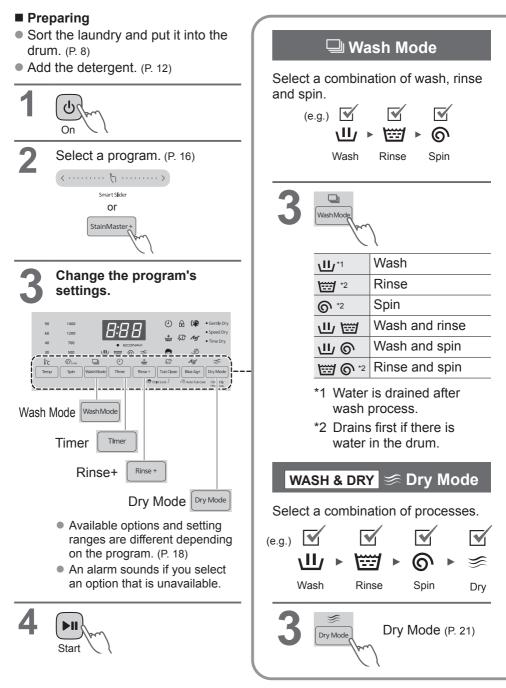

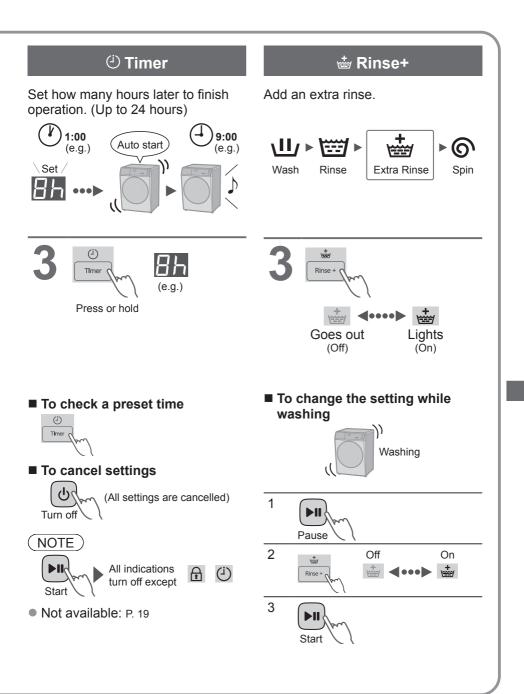


Changing Program Settings (continued)

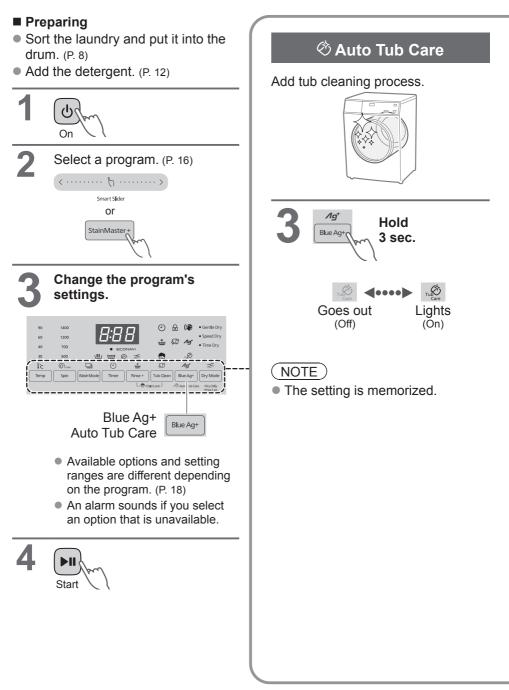

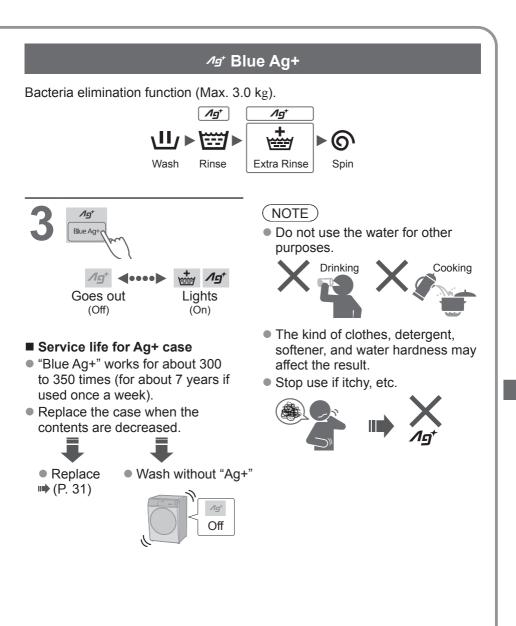


Changing Appliance Settings

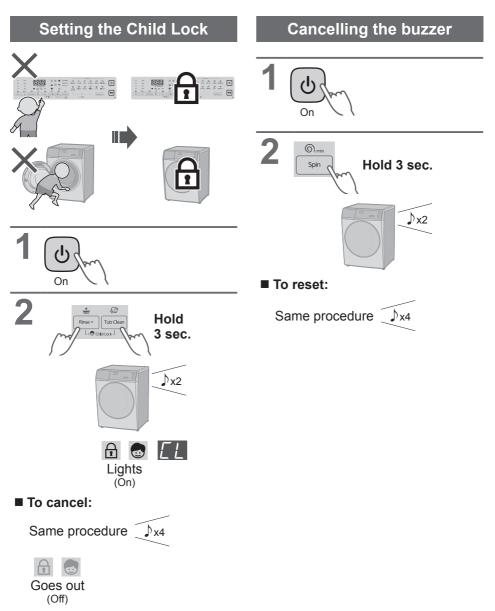


Maintenance


Water supply filter

If water does not flow smoothly

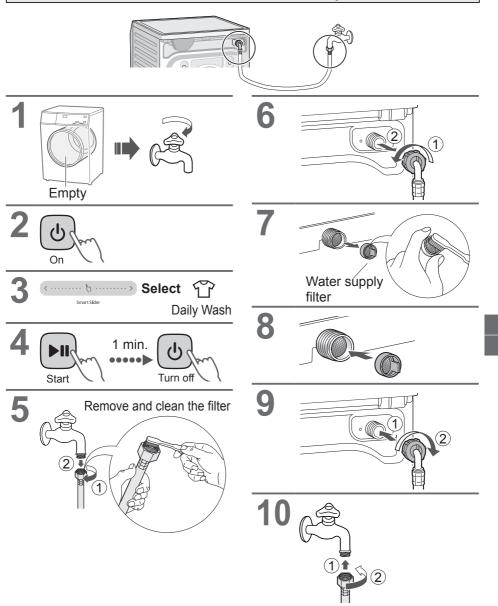


Maintenance (continued)

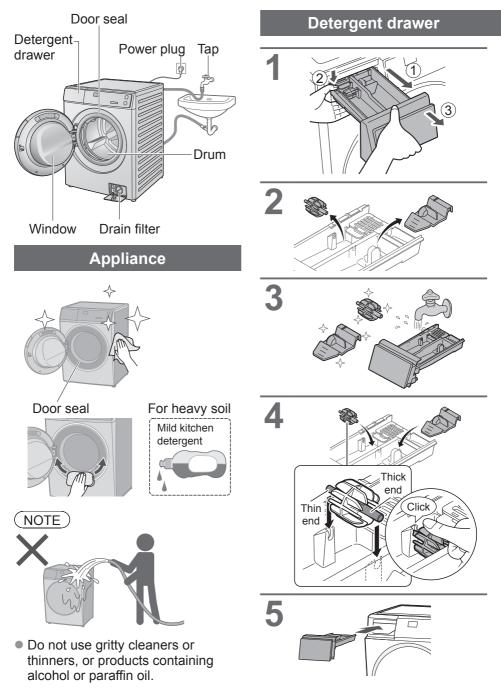

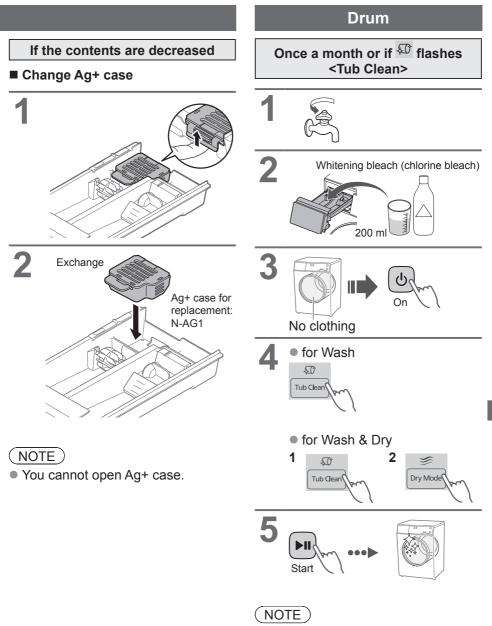


 If the "Tub Clean" program is not run, the indicator goes off when other program is run 3 times.


Maintenance (continued)

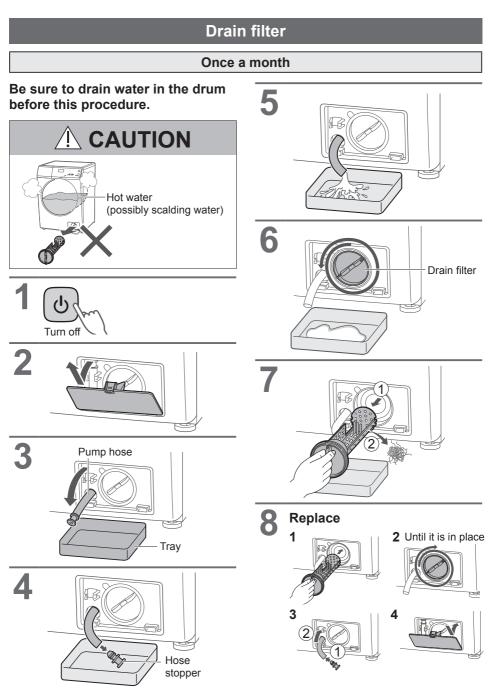


For Better Results

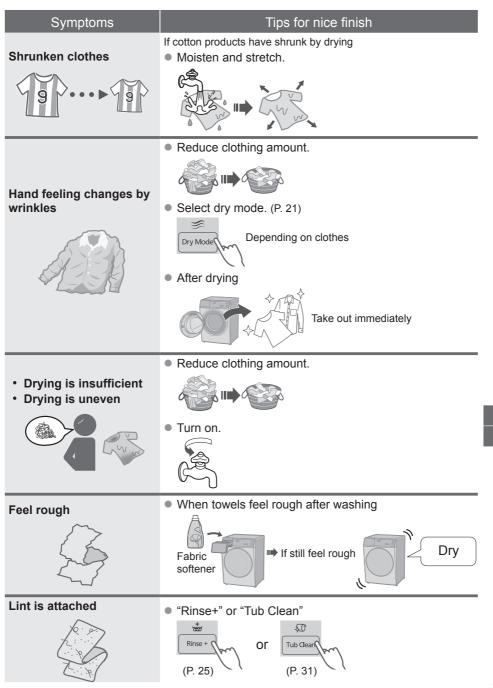



Troubleshooting

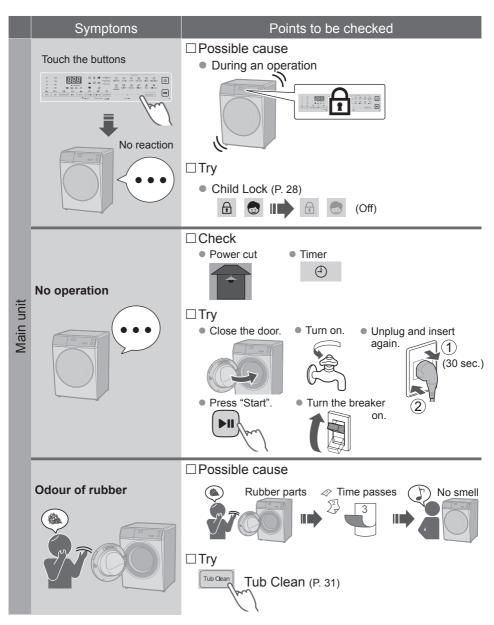

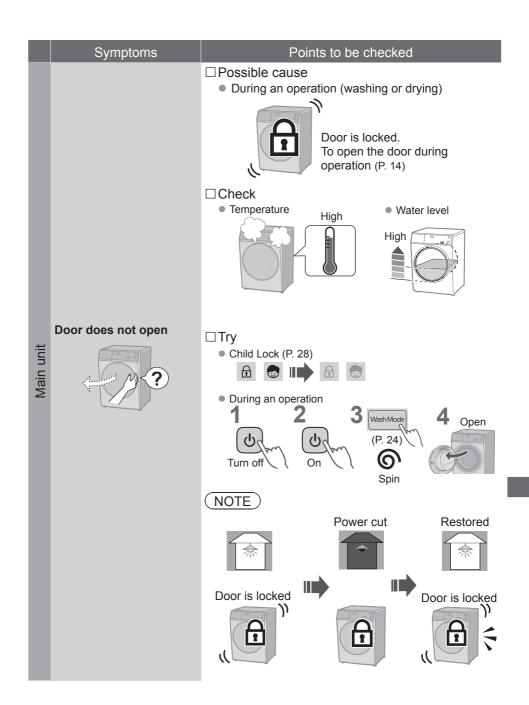


Troubleshooting (continued)

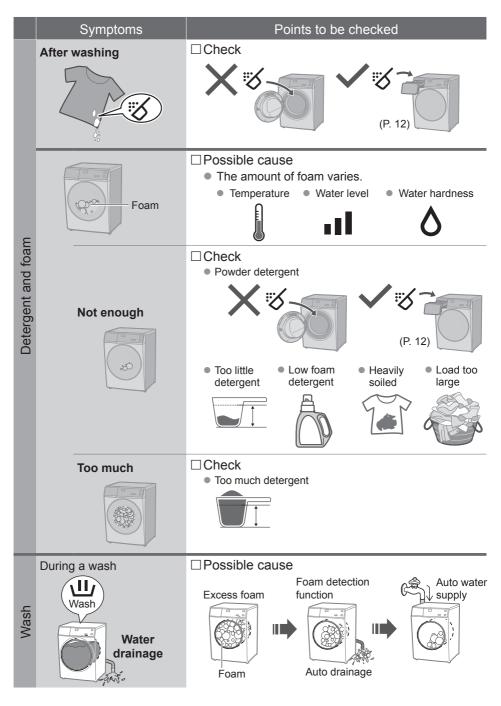

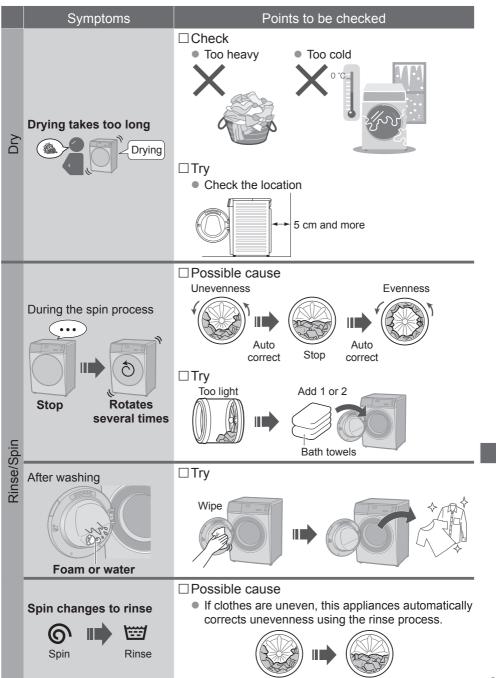



Troubleshooting (continued)

	Symptoms	Points to be checked		
Laundry	If the laundry yellows	□ Try		
Time	During a wash Displayed time Displayed time Displayed time Displayed time Displayed time Displayed time Displayed time Displayed time Displayed time	 Possible cause Remaining time is corrected during operation. If the settings changed If the settings changed If clothes are uneven The remaining time may increase. 		
	Remaining time Does not decrease Does not decrease Or Suddenly decrease Discrete Construction Suddenly decrease	□ Possible cause The displayed time is a guideline.		
Noise	During water drainage	 Possible cause This is normal. The drain pump is working. 		

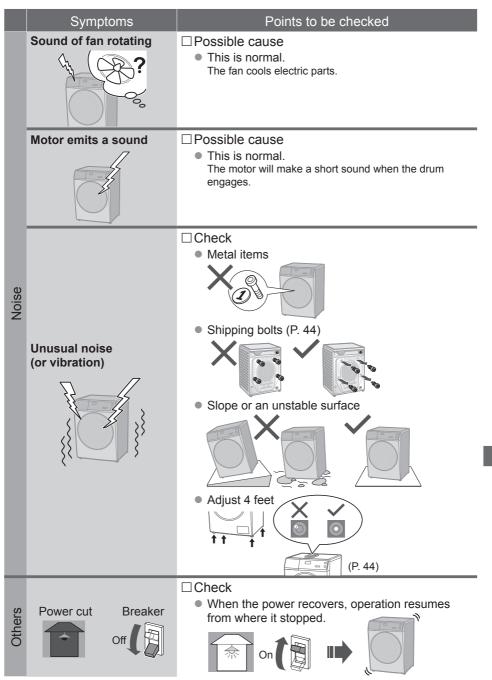


Error Display

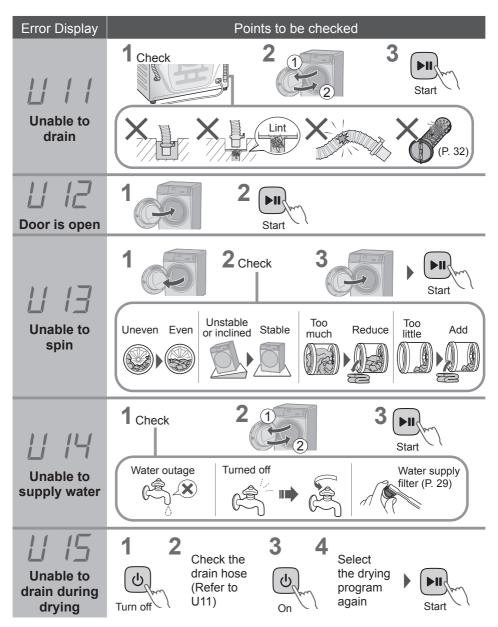

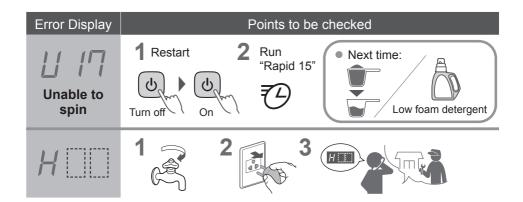

Information

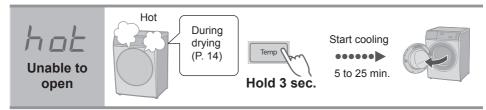


Installation Choosing the Right Location



Make sure to ask a service person for installation.

- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.

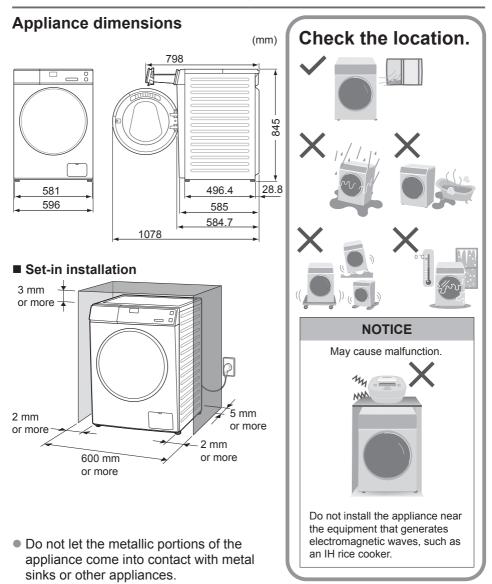

Installation Moving and Installing

Carrying the appliance


Do not do it alone.






Installation of bottom cover




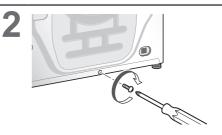

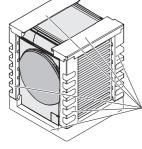

Remove all packing cusions before starting to use the appliance.


Installation Moving and Installing (continued)

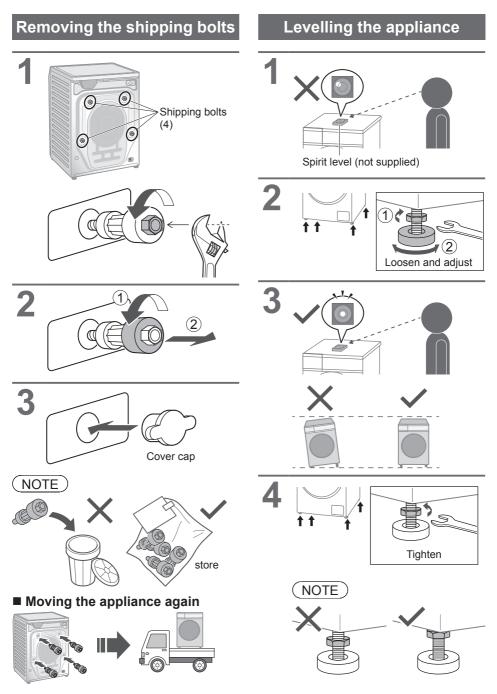


Installation Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord

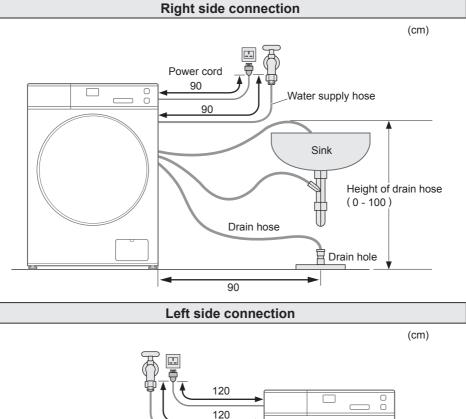

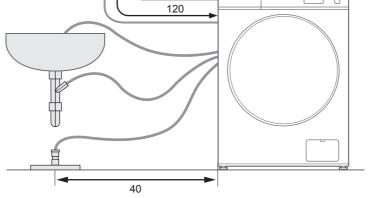


Installation Connecting the Hoses (continued)


Drain hose

Water supply hose

Connecting the water supply hose

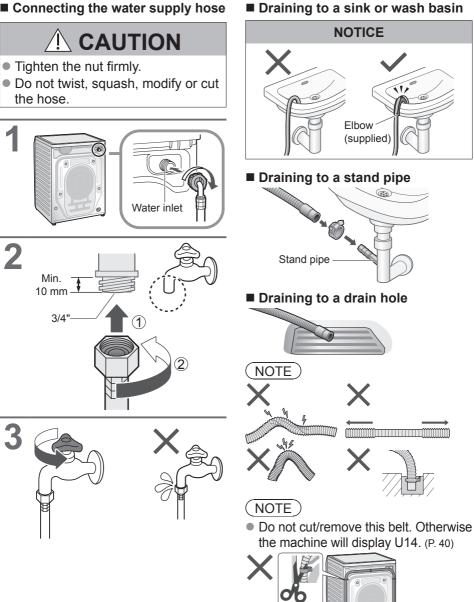

Installation Test Run

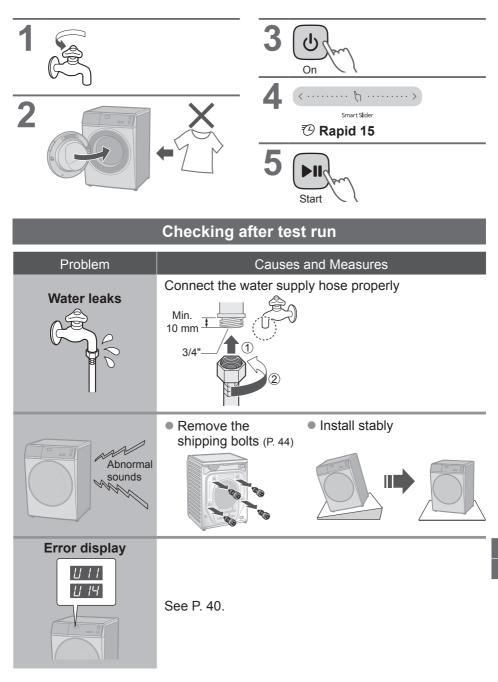

Specifications

		NA-S106FR2
Rated voltage (V)		220 - 240
Rated frequency (Hz)		50
Maximum energy rated power	input (W)	1600 - 1900
Heating energy rates power	For washing	1445 - 1710
input (W)	For drying	905 - 1090
Maximum spin speed (r/min)		1400
Product dimensions (W x D x H	H) (mm)	596 × 585 × 845
Product weight (kg)		70
Maximum mass of dry cloth (W	/ash) (kg)	10.0
Maximum mass of dry cloth (D	ry) (kg)	6.0
Pressure of tap water (MPa)		0.01 - 1.0