Panasonic

Operating & Installation Instructions

Washer Dryer (Household Use)

Model No. NA-S106FR2





It is essential to read these instructions.

EN

Thank you for purchasing this product.

- Read these instructions carefully for optimum performance and safety before use.
- Keep this manual for future reference.

Contents

Checking Your Appliance	7 8
	Q
Before Washing	O
Control Panel 1	0
Detergent 1	2
Washing & Drying	4
Program List	6
Details of Programs	8
Washing & Drying Tips 2	0
Changing Program Settings 2	2
Changing Appliance Settings 2	8
Maintenance 2	9
For Better Results 3	3
Troubleshooting 3	4
Error Display 4	0
Choosing the Right Location 4	2
Moving and Installing 4	3
Moving and Installing Connecting the Hoses 4 Connecting the Hoses	5
E Test Run 4	7
Specifications 4	8



Safety Precautions

! WARNING

May cause serious injury or death

Children must not use it alone.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


Setting the Child Lock. (P. 28)




May cause fire or electric shock

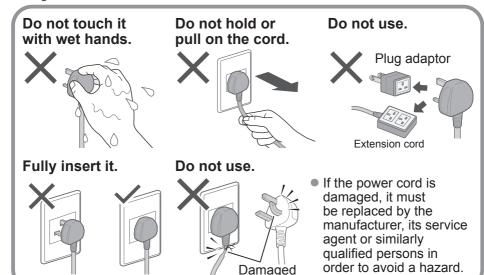

 In case of failure or damaged power cord, stop use and ask the electrical technician.



Accumulated dust may cause fire.

 

Securely insert the ground prong. Ask the electrical technician for a new socket, periodically.



Wipe the power plug



Use a socket appropriate for this appliance.









 The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.



May cause failure

Do not disassemble, repair or modify it by yourself.



Safety Precautions (continued)

WARNING

May cause fire (For safety use of the dryer)

Do not dry items soiled with flammable materials.



 Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and cosmetic oils must not be dried in the appliance even after having been washed.

Empty all pockets.



 Make sure that no objects are left in any of the pockets. Pay particular attention to cigarette lighters and matches. They may cause fire.

Do not dry items made of rubber, etc.



- Items such as foam rubber (latex foam), shower caps, waterproof textiles, airtight fabrics, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance. Such materials may be destroyed and thereby damage the appliance.
- Do not dry unwashed items in the appliance.

The lint must not be allowed to accumulate around the appliance.



Observe the following.


- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

CAUTION

May cause water leakage

Turn off the water faucet. Use new hose-sets. New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

May cause injury

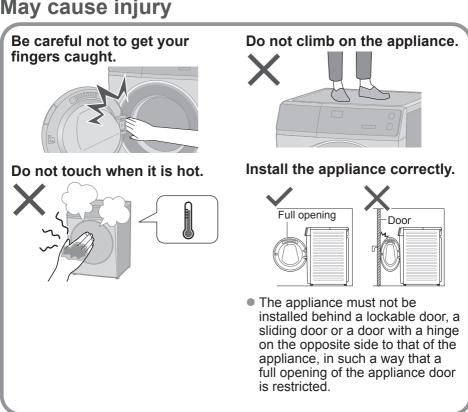

■ For maximum mass of dry cloth and pressure of tap water, see P. 48.

Safety Precautions (continued)

CAUTION

May cause failure

Keep away from heat and direct sunlight.



Do not obstruct.

 


Do not obstruct the openings of the bottom face with carpet, etc.


Remove shipping bolts before operation.



Do not use hot water.



For machine-washable items only.

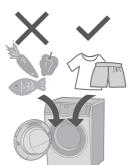

 This appliance is intended to be used in household.

This appliance is not intended to be used in applications such as:

- staff kitchen areas in shops, offices and other working environments:
- farm houses:
- by clients in hotels, motels and other residential type environments:
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes

Do not wash excessively oily Follow the instructions. clothes.






 Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Checking Your Appliance

Part names

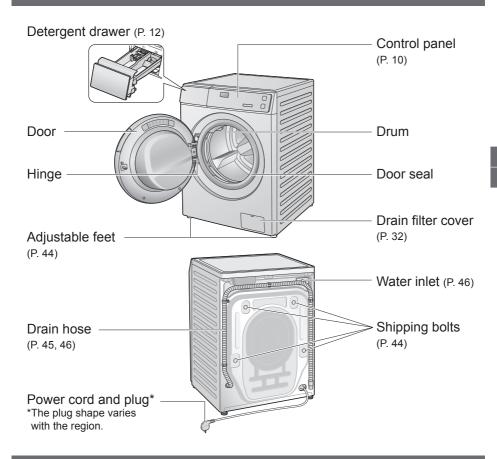

Accessories

 \square Hose hanger (1) (P. 46)



☐ Water supply hose (1) (P. 45, 46)



☐ Cover cap (4) (P. 44)



☐ Bottom cover (1) / Screw (1) (P. 43)



Before Washing


Preparing laundry

Before put clothes in drum

Remove foreign objects.





Use laundry nets for delicates and small items.

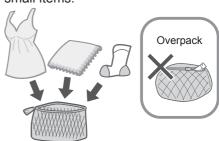


Pre-laundry check



 

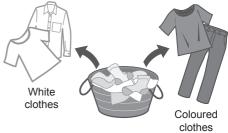

Clothes likely to pill

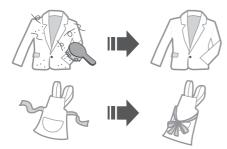

Pretreat for heavy stains.



Observe care labels.



NOTE

• "Stain Master+" programs (P. 16, 17) are recommended for removing stains.

Cannot wash or dry

Cannot wash or dry



Leather / fur



Silk, rayon and cupro (Blended fabric)



Commercially available washing aids



Cap with hard core materials



Cushion, Pillow, etc.



Urethane / rubber backed or thick mats



Paper diapers

Others ...

- Wrinkled and embossed articles
- Crepe fabric
- Deformable clothing (blazers, ties, dresses, etc.)
- Velvet

Cannot dry



Any of the above marks



Woollen clothing



Tights or pantyhose



Mats and other items with hair of pets attached



Quilts



Starched clothing




Clothing with laces or embroidery, new synthetic fibres, etc.


NOTE

 May cause clothing deformation, damage and harm or malfunction to the appliance.

Control Panel

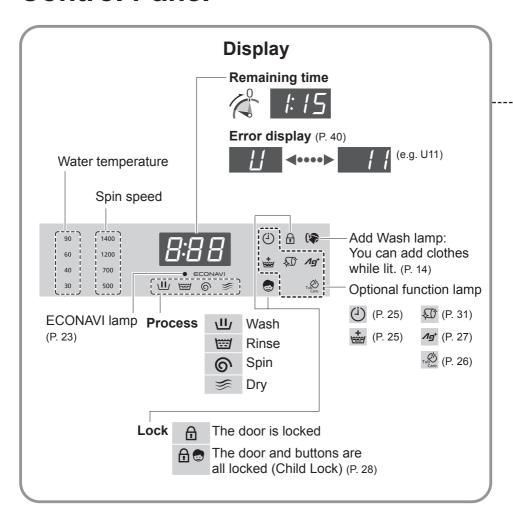

Control buttons

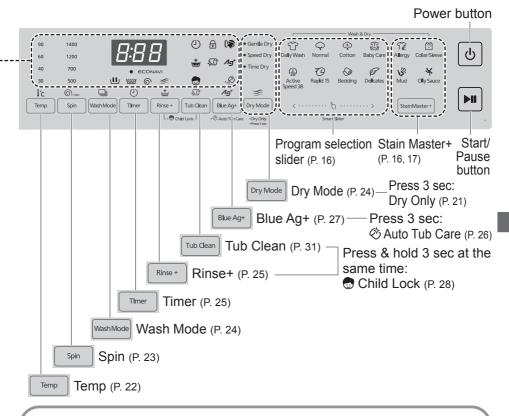

Touch operation

 If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



NOTE

- Turn off ⇒ back on

 No operation ⇒ auto power off

 (Not pressed ►□) Auto
 Power off

 10 min.
- In case of a power failure
 - When the power recovers, operation resumes from where it stopped. (Auto Restart)

 
Detergent

 
Follow the instructions on each package.


Detergent

Use a low foam detergent.


 To prevent powder detergent from remaining in the detergent drawer:





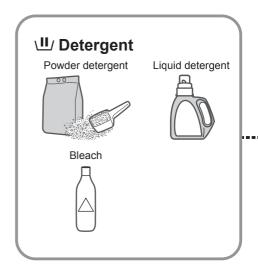


Fabric softener

 







Separated or solidified softeners

 




 

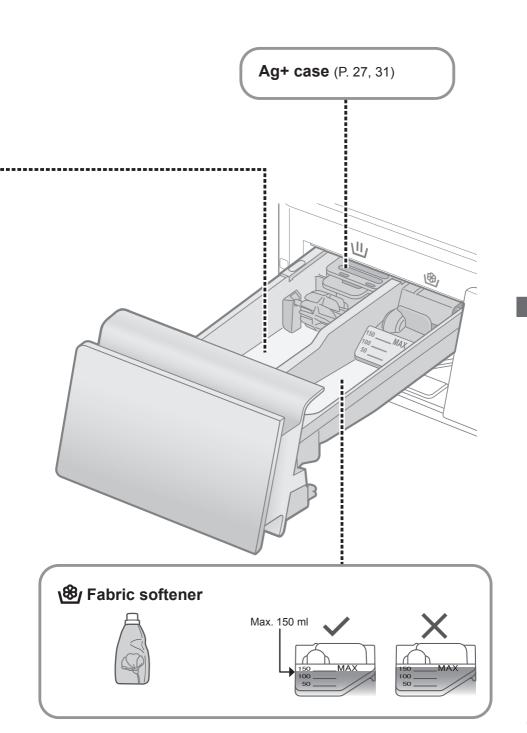

Washing & Drying

Basic Method

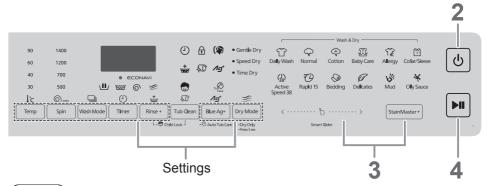

NOTE

■ Do not let laundry get caught in the door.



 
■ Do not overfill the drum with laundry.



- To open the door during operation
- During washing (You can add clothes when lit.)



During drying





(NOTE)

Door does not open

 (P. 35)



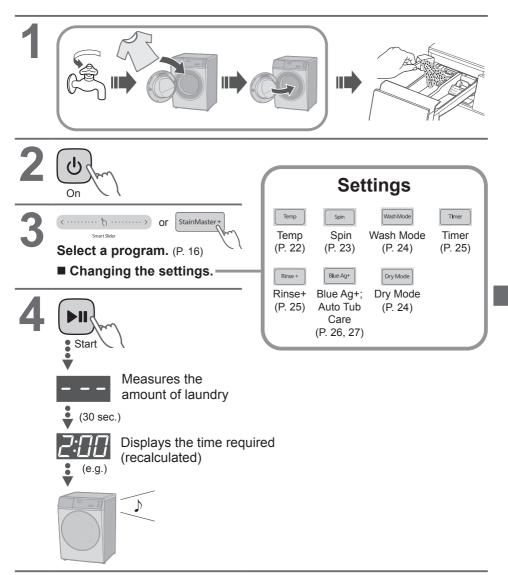



Program List

WASH & DRY / WASH

		Max lo			al time	
Program	am Description		Dry	WASH	WASH & DRY	
பி Daily Wash	Everyday clothes (Quicker than "Normal" program)		6.0	1:30	4:53 - 7:25	
○ Normal	Everyday clothes	10.0	6.0	2:54	6:10 - 8:50	
Cotton	Gentle wash with extra time	10.0	6.0	3:00	6:18 - 8:18	
Baby Care	Clothes for babies & sensitive skin Rinsing thoroughly Baby Care		5.0		5:45 - 7:35	
₹ Tub Clean	Cleaning the drum.		None		4:25	
StainMaster+	StainMaster+ For the following stains					
1 Allergy	• For mites and pollen	10.0	6.0	3:15	5:53 - 9:13	
Collar/ Sleeve		10.0	6.0	3:10	6:35 - 8:30	

WASH

Program	Description	Max load (kg)	Total time	
Active Speed 38	• Small loads	5.0	0:38	
Rapid 15	Small loads of lightly soiled	2.0	0:15	
⊘ Bedding	• Large items	3.0	1:30	
	Washing gently	2.0	0:50	
StainMaster+ For the following stains				
₩ Mud		10.0	3:30	
→ Oily Sauce	5	10.0	3:00	

DRY

Program	Description	Max load (kg)	Total time
Dry Only	Used to dry clothes.		
Hold 3 sec.		6.0	1:54 - 6:00

Total time is approximate (When the standard water supply rate is 15 L / min).
 For each program's default water temperature.

Details of Programs

Program						
Daily Wash 40 1200 Gentle Cold, 30, 40, 60	Settings			\uto set	ting	
Normal 40 1200 Gentle Cold, 30, 40, 60 Cotton 40 1400 Gentle Cold, 30, 40, 60 Cotton 40 1400 Gentle Cold, 30, 40, 60 Allergy 90 1200 Gentle 60, 90 Collar/Sleeve 40 1200 Gentle 40 Tub Clean 40 1200 Speed 40 Normal 40 1200 Cold, 30, 40, 60 Normal 40 1200 Cold, 30, 40, 60 Cotton 40 1400 Cold, 30, 40, 60 Baby Care 40 1400 Cold, 30, 40, 60 Allergy 90 1200 Gentle 40 Cotton 40 1400 Cold, 30, 40, 60 Cotton 40 1400 Cold, 30, 40, 60 Collar/Sleeve 40 1200 Gentle 40 Allergy 90 1200 Cold, 30, 40, 60 Collar/Sleeve 40 1200 Cold, 30, 40 Collar/Sleeve 40 1200 Cold, 30, 40 Cold Cold Cold Cold Cold, 30, 40 Cold Cold Cold Cold, 30, 40 Cold Cold Cold, 30, 40 Cold Cold Cold, 30, 40 Cold Cold, 30, 40 Cold	Program				Dry	Temp (°C)
WASH & DRY Cotton 40 1400 Gentle Cold, 30, 40, 60 WASH & DRY Baby Care 40 1400 Gentle Cold, 30, 40, 60 Allergy 90 1200 Gentle 60, 90 Collar/Sleeve 40 1200 Gentle 40 Daily Wash 40 1200 Cold, 30, 40, 60 Normal 40 1200 Cold, 30, 40, 60 Baby Care 40 1400 Cold, 30, 40, 60 Baby Care 40 1400 Cold, 30, 40, 60 Baby Care 40 1200 60, 90 Collar/Sleeve 40 1200 40 WASH Tub Clean 40 1200 40 WASH Tub Clean 40 1200 Cold, 30, 40 Papid 15 Cold 1200 Cold, 30, 40 Bedding Cold 700 Cold, 30, 40 Delicates 30 500 Cold, 30, 40		Daily Wash	40	1200	Gentle	Cold, 30, 40, 60
WASH & DRY Baby Care 40 1400 Gentle Cold, 30, 40, 60 Allergy 90 1200 Gentle 60, 90 Collar/Sleeve 40 1200 Gentle 40 Daily Wash 40 1200 — Cold, 30, 40, 60 Normal 40 1200 — Cold, 30, 40, 60 Baby Care 40 1400 — Cold, 30, 40, 60 Baby Care 40 1400 — Cold, 30, 40, 60 Allergy 90 1200 — 60, 90 Collar/Sleeve 40 1200 — 40 Tub Clean 40 1200 — 40 Active Speed 38 40 1200 — Cold, 30, 40 Active Speed 38 40 1200 — Cold, 30, 40 Active Speed 38 40 1200 — Cold, 30, 40 Bedding Cold 700 — Cold, 30 Delicates 30 500		Normal	40	1200	Gentle	Cold, 30, 40, 60
Allergy 90 1200 Gentle 60, 90 Collar/Sleeve 40 1200 Gentle 40 Tub Clean 40 1200 Speed 40 Daily Wash 40 1200 − Cold, 30, 40, 60 Cotton 40 1400 − Cold, 30, 40, 60 Gentle 40 Cotton 40 1200 − Cold, 30, 40, 60 Gentle 40 Gentle 40 Cold, 30, 40 Gentle 40 Gentle 40 Cold, 30, 40 Gentle 40 Gentle		Cotton	40	1400	Gentle	Cold, 30, 40, 60
Collar/Sleeve 40 1200 Gentle 40	WASH & DRY	Baby Care	40	1400	Gentle	Cold, 30, 40, 60
Tub Clean 40 1200 Speed 40 □ Daily Wash 40 1200 - Cold, 30, 40, 60 □ Normal 40 1200 - Cold, 30, 40, 60 □ Cotton 40 1400 - Cold, 30, 40, 60 □ Baby Care 40 1400 - Cold, 30, 40, 60 □ Allergy 90 1200 - 60, 90 □ Collar/Sleeve 40 1200 - 40 □ Tub Clean 40 1200 - 40 □ Rapid 15 Cold 1200 - Cold, 30, 40 □ Bedding Cold, 30, 40 □ Cold, 30 □ Cold, 30, 40		Allergy	90	1200	Gentle	60, 90
Daily Wash 40 1200 - Cold, 30, 40, 60		Collar/Sleeve	40	1200	Gentle	40
Normal 40 1200 − Cold, 30, 40, 60 Cotton 40 1400 − Cold, 30, 40, 60 Baby Care 40 1400 − Cold, 30, 40, 60 Allergy 90 1200 − 60, 90 Collar/Sleeve 40 1200 − 40 Tub Clean 40 1200 − 40 Active Speed 38 40 1200 − Cold, 30, 40 Rapid 15 Cold 1200 − Cold, 30 Bedding Cold 700 − Cold, 30 Delicates 30 500 − Cold, 30, 40		₹ Tub Clean	40	1200	Speed	40
Cotton 40 1400 — Cold, 30, 40, 60 Baby Care 40 1400 — Cold, 30, 40, 60 Allergy 90 1200 — 60, 90 Collar/Sleeve 40 1200 — 40 Tub Clean 40 1200 — 40 Active Speed 38 40 1200 — Cold, 30, 40 Rapid 15 Cold 1200 — Cold Bedding Cold 700 — Cold, 30 Delicates 30 500 — Cold, 30, 40		Daily Wash	40	1200	_	Cold, 30, 40, 60
## Baby Care	WASH	○ Normal	40	1200	_	Cold, 30, 40, 60
WASH Allergy 90 1200 — 60, 90 Collar/Sleeve 40 1200 — 40 Tub Clean 40 1200 — 40 Active Speed 38 40 1200 — Cold, 30, 40 Rapid 15 Cold 1200 — Cold Bedding Cold 700 — Cold, 30 Delicates 30 500 — Cold, 30, 40		Cotton	40	1400	_	Cold, 30, 40, 60
WASH Collar/Sleeve 40 1200 - 40 Tub Clean 40 1200 - 40 (⅓) Active Speed 38 40 1200 - Cold, 30, 40 Rapid 15 Cold 1200 - Cold Bedding Cold 700 - Cold, 30 Delicates 30 500 - Cold, 30, 40		Baby Care	40	1400	_	Cold, 30, 40, 60
WASH ☐ Tub Clean ☐ 40 1200 - 40 ☐ Cold, 30, 40 ☐ Rapid 15 ☐ Cold 1200 - Cold ☐ Bedding ☐ Cold 700 - Cold, 30 ☐ Delicates ☐ Cold, 30 - Cold, 30, 40 ☐ Cold, 30 - Cold, 30 - Cold, 30		Ϋ́Ε Allergy	90	1200	_	60, 90
G38 Active Speed 38 40 1200 — Cold, 30, 40 Cold Cold 1200 — Cold Bedding Cold 700 — Cold, 30 Delicates 30 500 — Cold, 30, 40		Collar/Sleeve	40	1200	-	40
Cold 1200 − Cold Bedding Cold 700 − Cold, 30 Delicates 30 500 − Cold, 30, 40		₹ Tub Clean	40	1200	-	40
Bedding Cold 700 — Cold, 30 Delicates 30 500 — Cold, 30, 40		(j ₃₈) Active Speed 38	40	1200	_	Cold, 30, 40
Delicates 30 500 - Cold, 30, 40		Rapid 15	Cold	1200	-	Cold
		Bedding	Cold	700	_	Cold, 30
Mud 40 1200 – 40		⊘ Delicates	30	500	_	Cold, 30, 40
		₩ Mud	40	1200	_	40
※ Oily Sauce 40 1200 − 40		※ Oily Sauce	40	1200	_	40
DRY Dry Only − ✓ *1 Gentle −	DRY	Dry Only	_	√ *1	Gentle	_

NOTE)

For normally soiled laundry at the rated capacity, we recommend using the "Cotton, 60 °C, 1400 r/min" which is tested in accordance with IEC 60456 for the energy and water efficiency aspects.

Actual water temperature may differ from the declared cycle temperature.

These results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling, utilized detergent, fluctuations in the main electricity supply and chosen additional options.

	Setting range				otional	function		
	Spin (r/min)	Dry Mode	Wash Mode	Dry Mode	Timer	Rinse+	Blue Ag+	Auto Tub Care
	1200, 1400	Gentle, Speed, Time	✓	✓	✓	\checkmark	✓	✓
	1200, 1400	Gentle, Speed, Time	✓	✓	✓	\checkmark	✓	✓
	1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
	1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
	1200	Gentle, Speed, Time	_	✓	✓	✓	_	✓
	1200, 1400	Gentle, Speed, Time	✓	✓	✓	✓	✓	✓
	1200	Speed	_	✓	_	_	_	_
	Ø, 500, 700, 1200, 1400	-	✓	_	✓	✓	✓	✓
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	Ø, 500, 700, 1200	_	_	_	✓	✓	_	✓
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	1200	_	_	_	_	_	_	_
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	_	✓	✓
	Ø, 500, 700, 1200	_	_	_	✓	_	_	_
	Ø, 500, 700	_	✓	_	✓	✓	✓	_
	Ø, 500	_	✓	_	_	✓	✓	_
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	Ø, 500, 700, 1200, 1400	_	✓	_	✓	✓	✓	✓
	_	Gentle, Speed, Time	_	✓	_	_	_	_
_			_	_		_	_	_

[•] Setting time for Time Dry: 30, 60, 90, 120, 180, 210 min.

 
^{*1} In case of "Gentle Dry" or "Speed Dry" mode,
If the weight of clothes is heavy, spin is performed: 1200
If the weight of clothes is light, spin is not performed:

Washing & Drying Tips


Bedding

■ Washable items

- 🗃 🙀 (Wash) 🖼 (Handwash)
- 100 % cotton or 100 % synthetic





■ Not washable items

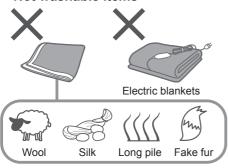



■ Putting blankets into the drum

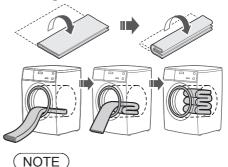

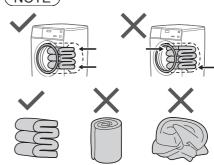

Delicates

■ When washing

 To rinse fully, use the "Rinse+" function. (P. 25)



■ After operation ends



Dry Only

You can select dry mode according to your preference.





Hold 3 sec. (for Dry Only)

3 Select Dry Mode.



4 Start

Dry Mode	Description
Gentle Dry	For heat-sensitive clothes (Max. 6.0 kg).
Speed Dry	For clothes not easy to be wrinkled (Max. 6.0 kg).
Time Dry 30	For clothes easy to be wrinkled. Thinner plain woven and crepe texture etc. For small amount laundry (Max. 0.5 kg). *Time: 30 min. *After drying: Take out immediately For half-dry clothes. *Time: 30 min. and more



Open the tap even in drying.



 The door is locked during drying.



Changing Program Settings

■ Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)




Select a program. (P. 16)

Smart Sider

Or

StainMaster+

Change the program's settings.

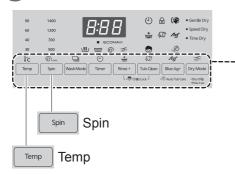

- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.






Change the washing temperature.




■ Setting guide

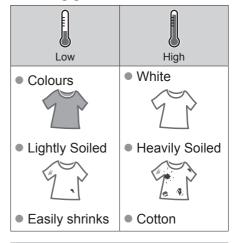




⊚r/min Spin

 Change the spin speed.



■ Setting guide

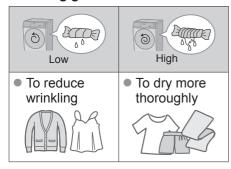




■ To change the setting while washing



Pause

2 © min Spin

3 Start

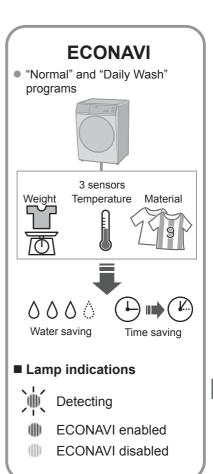

Changing Program Settings (continued)

Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)



Select a program. (P. 16)



Change the program's settings.



- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.

4



Wash Mode

Select a combination of wash, rinse and spin.





\ *1	Wash
*2	Rinse
⑥ *2	Spin
山豐	Wash and rinse
山の	Wash and spin
₩ 6 *2	Rinse and spin

- *1 Water is drained after wash process.
- *2 Drains first if there is water in the drum.

 
Select a combination of processes.





(i) Timer

Set how many hours later to finish operation. (Up to 24 hours)






Add an extra rinse.





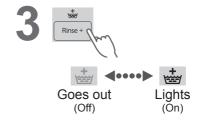


■ To check a preset time



 ■ To cancel settings






Not available: P. 19

■ To change the setting while washing



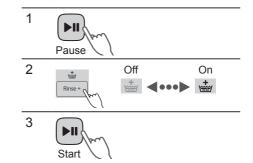

Changing Program Settings (continued)

■ Preparing

- Sort the laundry and put it into the drum. (P. 8)
- Add the detergent. (P. 12)





2 Select a program. (P. 16)



Change the program's settings.



- Available options and setting ranges are different depending on the program. (P. 18)
- An alarm sounds if you select an option that is unavailable.

4



Auto Tub Care

Add tub cleaning process.








(NOTE)

The setting is memorized.

/∮ Blue Ag+

Bacteria elimination function (Max. 3.0 kg).



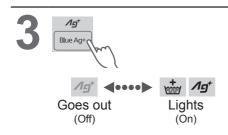

■ Service life for Ag+ case

- "Blue Ag+" works for about 300 to 350 times (for about 7 years if used once a week).
- Replace the case when the contents are decreased.





- Replace
- (P. 31)

Wash without "Ag+"



NOTE

 Do not use the water for other purposes.




- The kind of clothes, detergent, softener, and water hardness may affect the result.
- Stop use if itchy, etc.






Changing Appliance Settings


Setting the Child Lock

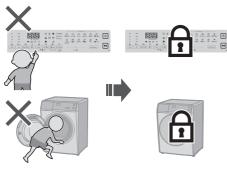



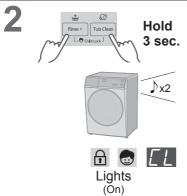


■ To cancel:

 


Goes out

Cancelling the buzzer

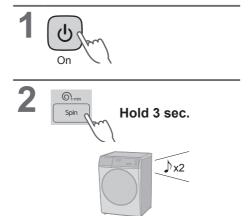

■ To reset:

 



Maintenance

Water supply filter

  If water does not flow smoothly



 


 




 
















Maintenance (continued)

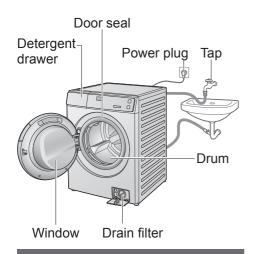


Appliance

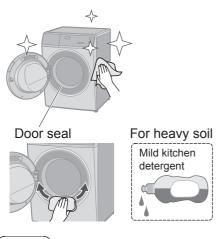




 Do not use gritty cleaners or thinners, or products containing alcohol or paraffin oil.

 
Detergent drawer

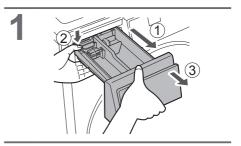






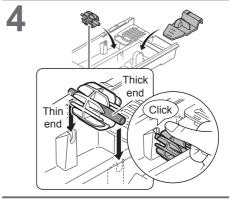




If the contents are decreased

■ Change Ag+ case

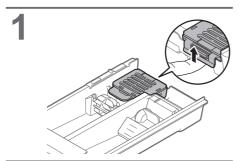

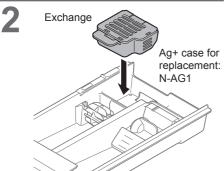

NOTE

You cannot open Ag+ case.

Drum

Once a month or if flashes <Tub Clean>

1





• for Wash

Tub Clean



NOTE


 If the "Tub Clean" program is not run, the indicator goes off when other program is run 3 times.

Maintenance (continued)

Drain filter


Once a month

Be sure to drain water in the drum before this procedure.

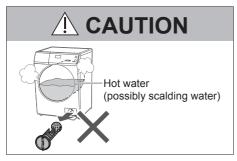







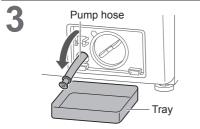






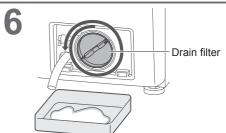

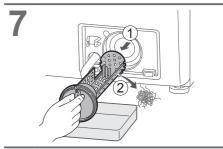


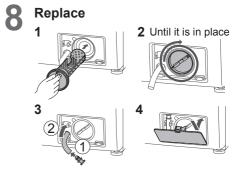


For Better Results


Symptoms	Tips for nice finish
Shrunken clothes	If cotton products have shrunk by drying Moisten and stretch.
9	Moisier and stretch.
	Reduce clothing amount.
Hand feeling changes by wrinkles	• Select dry mode. (P. 21)
Willikies	
5	Depending on clothes
ASS	• After drying
	Take out immediately
	Reduce clothing amount.
 Drying is insufficient Drying is uneven 	
	• Turn on.
Feel rough	When towels feel rough after washing
	Fabric softener If still feel rough Dry
Lint is attached	• "Rinse+" or "Tub Clean"
	Rinse + Or Tub Clean (P. 25) (P. 31)


Troubleshooting

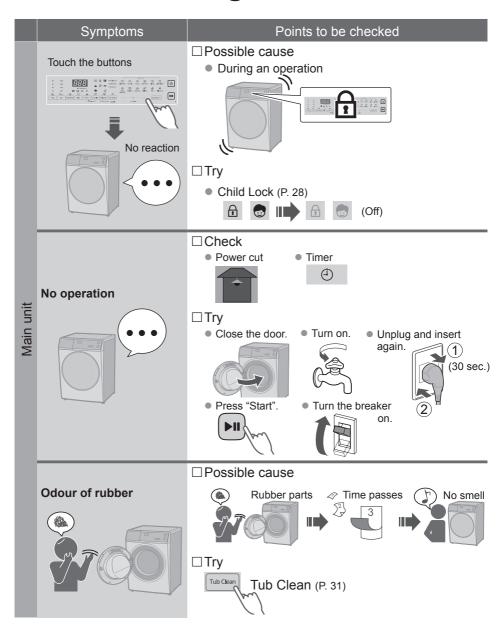

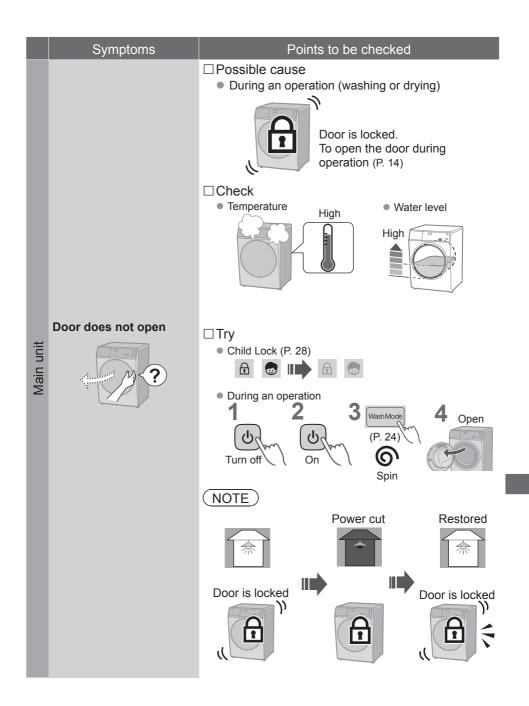



Troubleshooting (continued)

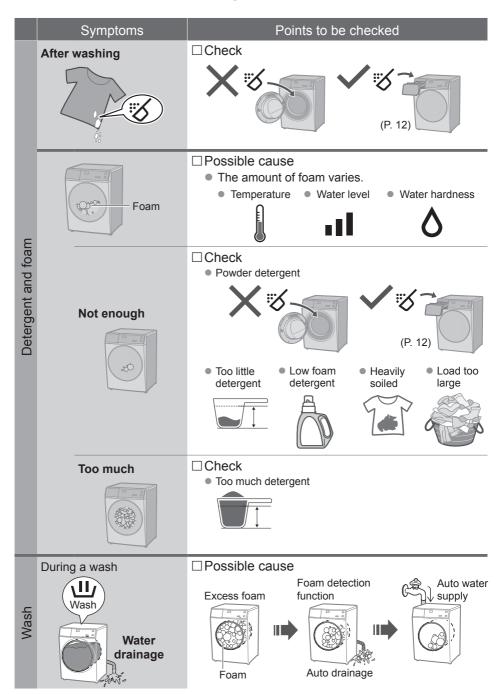

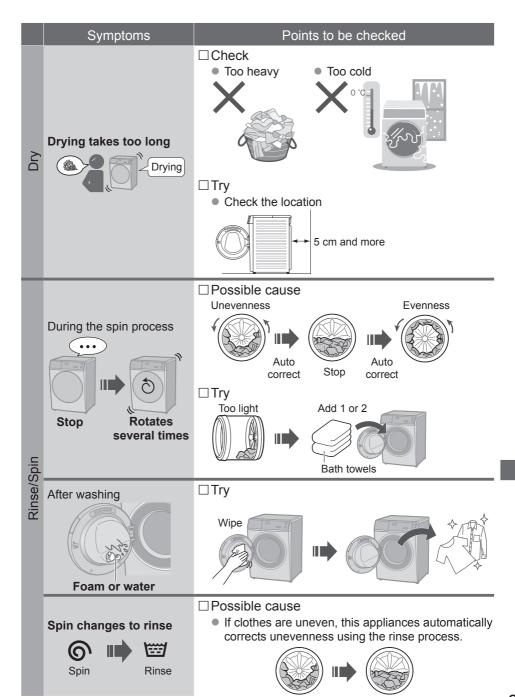



Troubleshooting (continued)

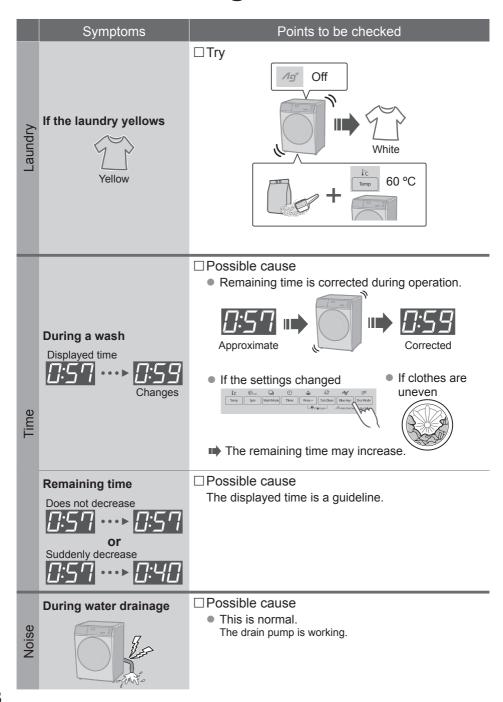

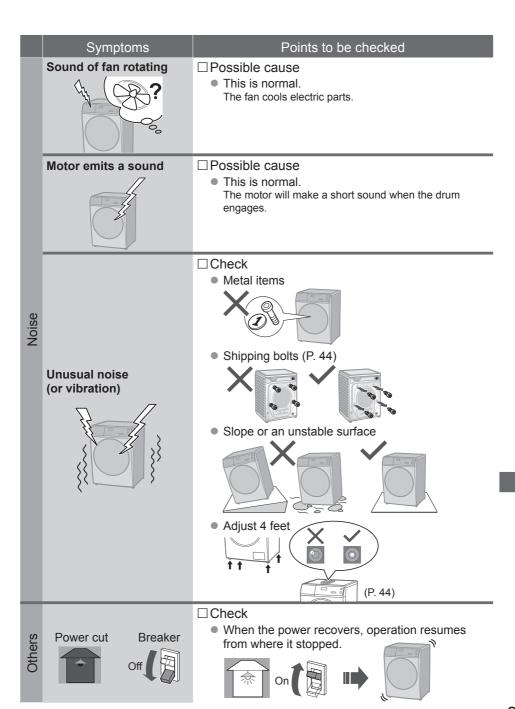


Error Display

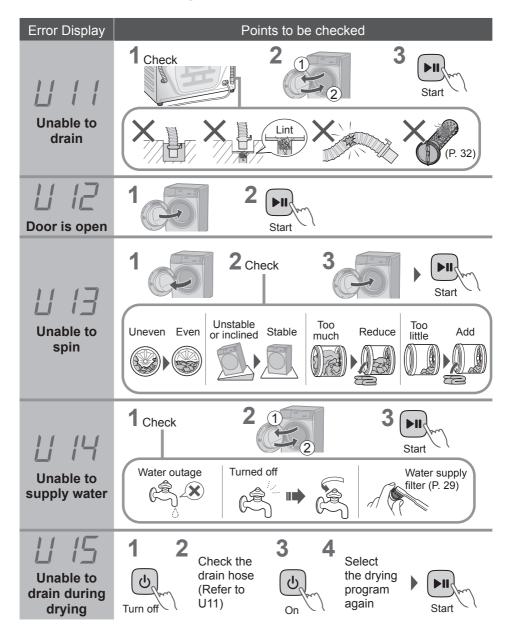

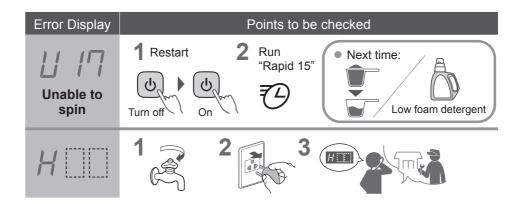

■ Information

 


Installation Choosing the Right Location




Make sure to ask a service person for installation.


- Do not install the appliance by yourself.
- Follow this installation method. If you do not, Panasonic will not be liable for any accidents or damages.

 Appliance dimensions




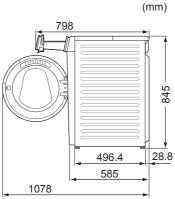

■ Set-in installation

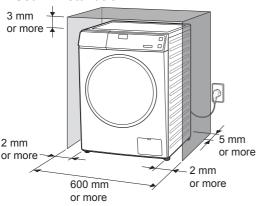

 Do not let the metallic portions of the appliance come into contact with metal sinks or other appliances.

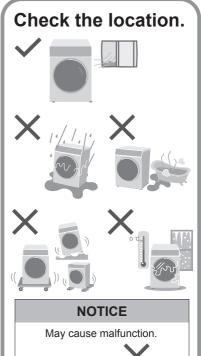

Do not install the appliance near the equipment that generates electromagnetic waves, such as

an IH rice cooker.


Installation Moving and Installing

Carrying the appliance

Do not do it alone.






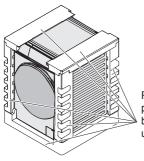

Remove all packing cusions before starting to use the appliance.

Installation of bottom cover




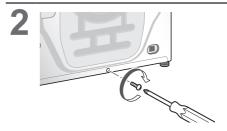



Installation Moving and Installing (continued)

Removing the shipping bolts

   Shipping bolts (4)












■ Moving the appliance again




   
Levelling the appliance

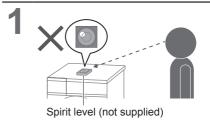



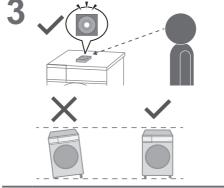






Installation Connecting the Hoses

Connect the hoses properly to prevent water leaks.

Maximum connection distances for hoses and the power cord

Power cord 90 Water supply hose 90 Sink Height of drain hose (0 - 100) Drain hole 90 Left side connection (cm)

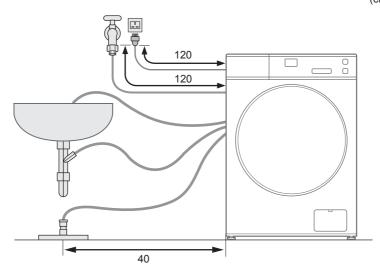


Installation Connecting the Hoses (continued)


Water supply hose


■ Connecting the water supply hose

! CAUTION

- Tighten the nut firmly.
- Do not twist, squash, modify or cut the hose.

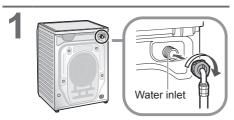


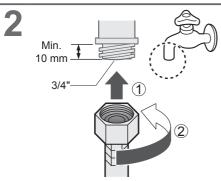

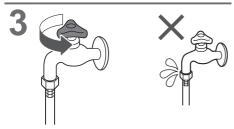

Drain hose


■ Draining to a sink or wash basin

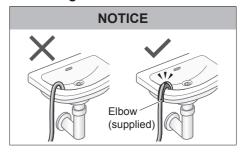

■ Draining to a stand pipe




■ Draining to a drain hole

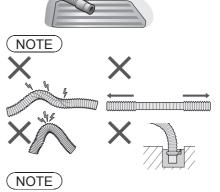


 Do not cut/remove this belt. Otherwise the machine will display U14. (P. 40)



Installation Test Run

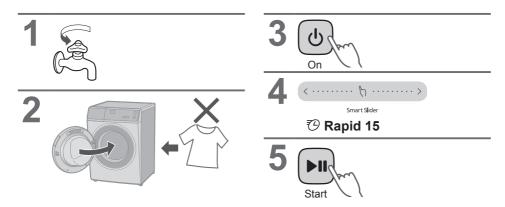

Checking after test run

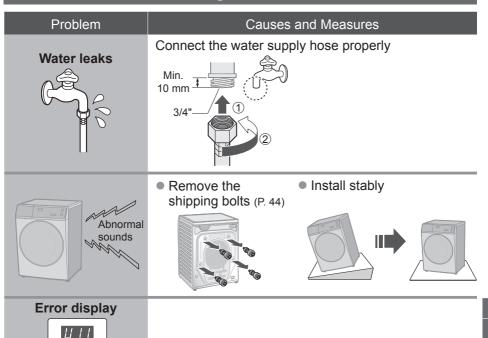

See P. 40.

Specifications

		NA-S106FR2
Rated voltage (V)		220 - 240
Rated frequency (Hz)		50
Maximum energy rated power input (W)		1600 - 1900
Heating energy rates power	For washing	1445 - 1710
input (W)	For drying	905 - 1090
Maximum spin speed (r/min)		1400
Product dimensions (W x D x H) (mm)		596 × 585 × 845
Product weight (kg)		70
Maximum mass of dry cloth (Wash) (kg)		10.0
Maximum mass of dry cloth (Dry) (kg)		6.0
Pressure of tap water (MPa)		0.01 - 1.0