


Installation Instruction

Air conditioner

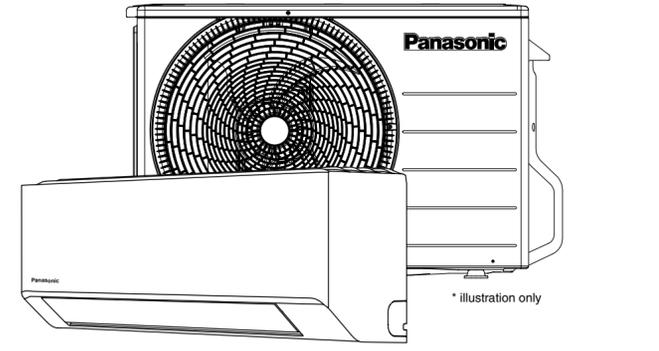

MODEL NO: CS/CU-RZ9*** (1.0HP)
CS/CU-RZ12*** (1.5HP)

CAUTION

R32 REFRIGERANT

This Air Conditioner contains and operates with refrigerant R32.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.

Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.

Explanation of symbols displayed on the indoor unit or outdoor unit.

	WARNING	This symbol shows that this equipment uses a mildly flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Installation Manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

Panasonic will not be responsible for any incident or damage due to improper installation in anyway not described in the detailed manuals. Malfunction caused by incorrect installation is also not covered in product warranty.

SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the equipment.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

	This indication shows the possibility of causing death or serious injury.	The items to be followed are classified by symbols:	Symbol with white background denotes item that is PROHIBITED.
	This indication shows the possibility of causing injury or damage to properties only.		Symbol with dark background denotes item that must be carried out.

Carry out test running to confirm that the abnormally occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

If the equipment is transferred to a new user or delivered to a recycling plant, be sure also to hand over the manual.

WARNING

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unit method or using incompatible material may cause product damage, burst and serious injury.
- Do not install outdoor unit rear handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to the unit and cause injury.
- Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
- Do not tie up the power supply cord into a bundle by hand.
- Abnormal temperature rise on power supply cord may happen.
- Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
- Do not sit or step on the unit, you may fall down accidentally.
- Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.
- When installing air conditioning unit, refer to the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.
- Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

CAUTION

- For R32/R410A model, use piping, flare nut and tools which is specified for R32/R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.
- For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.
- Since the working pressure for R32/R410A is higher than that of refrigerant R22 model, replacing conventional piping and flare nuts on the outdoor unit side are recommended.
- If reuse piping is unavoidable, refer to instruction "IN CASE OF REUSING EXISTING REFRIGERANT PIPING"
- Thickness of copper pipes used with R32/R410A must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.
- It is desirable that the amount of residual oil less than 40 mg/10 m.
- Engage authorized dealer or specialist for installation.
- If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.
- For refrigeration system work, install piping according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
- Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
- Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
- For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.
- Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction ⑤ **CONNECT THE CABLE TO THE INDOOR UNIT** and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.
- Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
- This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30 mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
- During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
- After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
- Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
- Be aware that refrigerants may not contain an odour.

This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

CAUTION

- Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
- Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.
- Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts.
- Take care of the liquid refrigerant, it may cause frostbite.
- Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
- Do not touch the sharp aluminium fin, sharp parts may cause injury.

- Carry out drainage piping as mentioned in installation instructions.
- If drainage is not perfect, water may enter the room and damage the furniture.
- Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.
- For electrical work, follow the national regulation and legislation.
- Power supply connection to the room air conditioner.
- Use power supply cord 3 x 1.5 mm² type designation 60245 IEC 57 or heavier cord.
- Connect the power supply cord of the air conditioner to the mains using one of the following method.
- Power supply point should be in easily accessible place for power disconnection in case of emergency.
- In some countries, permanent connection of this air conditioner to the power supply is prohibited.

 - Power supply connection to the receptacle using power plug.
 - Use an approved 15/16 A power plug with earth pin for the connection to the socket.
 - Use power supply connection to a circuit breaker for the permanent connection.
 - Use an approved 16 A circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.

- Installation work. It may need two people to carry out the installation work.
- Keep any required ventilation openings clear of obstruction.

PRECAUTION FOR USING R32 REFRIGERANT

Pay careful attention to the following points and the installation work procedures.

WARNING

- The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than A_{in} (m²) [refer Table A] and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.
- The mixing of different refrigerants within a system is prohibited. Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety.
- A logbook shall be maintained. The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch.).
- Ensure that foreign matter (oil, water, etc.) does not enter the piping.
- Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)
- Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.
- Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.
- The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.
- A logbook shall be maintained. The results of these checks shall be recorded in the logbook.
- In case of ventilations in occupied spaces shall be checked to confirm no obstruction.
- Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the procedures and handling of the refrigerant used.
- The general requirement of trained and certified personnel are indicated as below:
 - Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,
 - Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,
 - Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,
 - Continuously undergo regular and further training to maintain this expertise.
- Air-conditioner piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.
- Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.
- Ensure protection devices, refrigerating piping and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).
- Expansion and contraction of long runs piping in refrigerating systems shall be designed and installed securely (mounted and guarded) to minimize the likelihood of hydraulic shock damaging the system.
- Protect the refrigerating system from accidental rupture due to moving furniture or reconstruction activities.
- To ensure no leaking, field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (≤ 1.04 MPa, max 4.15 MPa). No leak shall be detected.

2-10. Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- Initial safety checks shall include but not limited to:-
 - That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking.
 - That there is no live electrical components and wiring are exposed while charging, recovering or purging the system.
 - That there is continuity of earth bonding.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily repaired with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- The owner of the equipment must be informed or reported so all parties are advised thereafter.

3. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
- Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: - The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment.
- Inherently safe components do not have to be isolated prior to working on them.

4. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
- The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.

5. Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
- The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

6. Detection of refrigerant leaks

- Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.
- A handle torch (or any other detector using a naked flame) shall not be used.
- The following leak detection methods are deemed acceptable for all refrigerant systems.
 - No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (≥ 1.04 MPa, max 4.15 MPa) for example, a universal sniffer.
 - Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
 - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
 - Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
 - If a leak is suspected, all naked flames shall be removed/extinguished.
 - If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. The precautions in #7 must be followed to remove the refrigerant.

7. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
 - Remove refrigerant -> • purge the circuit with inert gas -> • evacuate -> • purge with inert gas -> • open (by cutting or brazing)
- The refrigerant charge shall be recovered into the correct recovery cylinders.
- The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas)
- This process may need to be repeated several times.
- Compressed air or oxygen shall not be used for this task.
- Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.
- This process shall be repeated until no refrigerant is within the system.
- When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- This operation is absolutely vital if brazing operations on the pipe work are to take place.
- Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.

8. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
 - Ensure that contamination of different refrigerants does not occur when using charging equipment.
 - Hoses or lines shall be used to minimize the amount of refrigerant contained in them.
 - Cylinders shall be kept in an appropriate position according to the instructions.
 - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
 - Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to overfill the refrigerating system.
- Prior to recharging the system it shall be pressure tested with OFN (refer to #7).
- The system shall be leak tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site.
- Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant.
- To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

9. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
 - Become familiar with the equipment and its operation.
 - Isolate system electrically.
 - Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.

10. Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- The recovery cylinders shall be evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerant.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
- Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

Required tools for Installation Works					
1	Phillips screw driver	6	Pipe cutter	11	Thermometer
2	Level gauge	7	Reamer	12	Megameter
3	Electric drill, hole core drill (Ø70 mm)	8	Knife	13	Multimeter
4	Hexagonal wrench (4 mm)	9	Gas leak detector	14	Vacuum pump
5	Spanner	10	Measuring tape	15	Gauge manifold

No.	Accessories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	6	Remote control holder fixing screw	2
2	Installation plate fixing screw	5	7	Drain elbow	1
3	Remote Control	1	8	Air purifier filter	1
4	Battery	2			
5	Remote control holder	1			

Piping size		
Applicable piping kit	Gas	Liquid
CZ-3F5, 7BP	9.52 mm (3/8")	6.35 mm (1/4")
CZ-4F5, 7, 10BP	12.7 mm (1/2")	6.35 mm (1/4")
CZ-5F5, 7, 10BP	15.88 mm (5/8")	6.35 mm (1/4")

SELECT THE BEST LOCATION

INDOOR UNIT	OUTDOOR UNIT
<ul style="list-style-type: none"> Do not install the unit in excessive oil fume area such as kitchen, workshop and etc. There should not be any heat source or steam near the unit. There should not be any obstacles blocking the air circulation. A place where air circulation is not good. A place where drainage can be easily done. A place where noise prevention is taken into consideration. Do not install the unit near the door way. Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles. Indoor unit of this air conditioner shall be installed in a height of at least 1.8 m. 	<ul style="list-style-type: none"> If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed. There should not be any animal or plant which could be affected by hot air discharged. Keep the spaces indicated by arrows from the wall, ceiling, fence or other obstacles. Do not place any obstacles which may cause a short circuit, or discharge of air. If the piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the (Table A).

Example: For RZ9***
If the unit is installed at 10 m distance, the quantity of additional refrigerant should be > 10 m (distance) - 7.5 m (piping length for additional gas) => 2.5 m
> 2.5 m x 10 g/m (additional Refrigerant) => 25 g

$$A_{min} = (m_r / (2.5 \times (LFL)^{0.66} \times h_o))^2$$


** not less than safety factor margin

A_{min} = Required minimum room area, in m²
m_r = Refrigerant charge in appliance, in kg
LFL = Lower flammability limit (0.307 kg/m³)
h_o = Installation height of the appliance: (1.8 m for wall mounted)
SF = Safety factor with a value of 0.75

The required minimum room area, shall also be governed by the safety factor margin formula below:

$$A_{min} = m_r / (SF \times LFL \times h_o)$$

The higher value shall be taken when determining the room area.

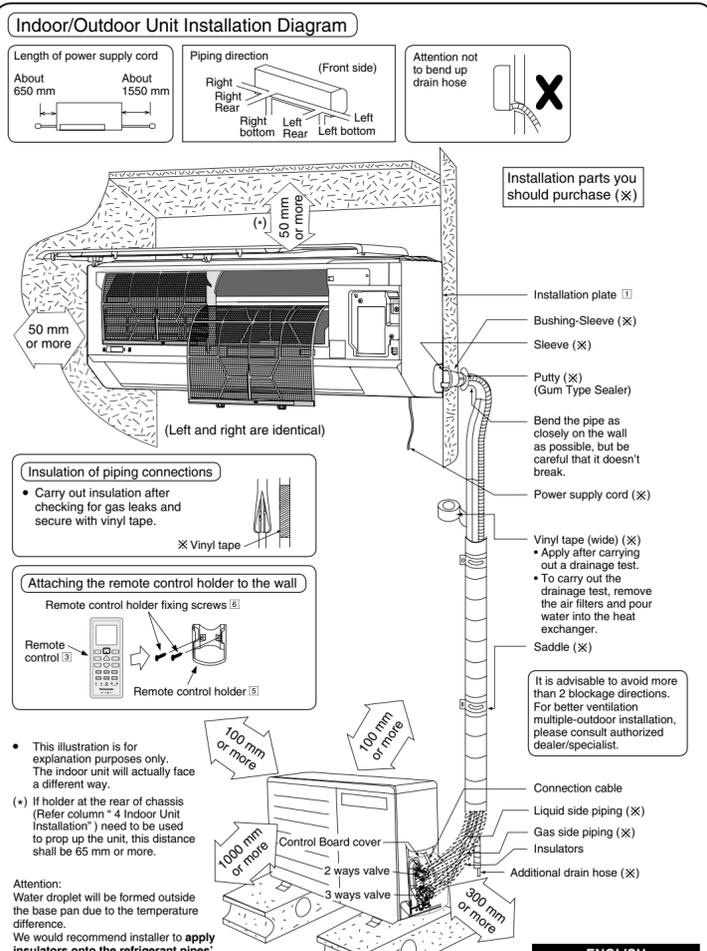

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 HOW TO FIX INSTALLATION PLATE

The mounting wall shall be strong and solid enough to prevent it from vibration.

Dimension					
①	②	③	④	⑤	⑥
465 mm	68 mm (+)	350 mm	415 mm	71 mm	120 mm

- The center of installation plate should be at more than ① at right and left of the wall.
- The distance from installation plate edge to ceiling should more than ②.
- From installation plate center to unit's left side is ③.
- From installation plate center to unit's right side is ④.
- For left side piping, piping connection for liquid should be about ⑤ from this line.
- For left side piping, piping connection for gas should be about ⑥ from this line.
- Alternatively, liquid and gas piping connection location reference is marked on installation plate.

3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

- Insert the piping sleeve to the hole.
- Fix the bushing to the sleeve.
- Cut the sleeve until it extrudes about 15 mm from the wall.

CAUTION

When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable.

4 INDOOR UNIT INSTALLATION

- FOR THE RIGHT REAR PIPING**
 - Step-1 Pull out the Indoor piping
 - Step-2 Install the Indoor Unit
 - Step-3 Secure the Indoor Unit
 - Step-4 Insert the connection cable
- FOR THE RIGHT AND RIGHT BOTTOM PIPING**
 - Step-1 Pull out the Indoor piping
 - Step-2 Install the Indoor Unit
 - Step-3 Insert the connection cable
 - Step-4 Secure the Indoor Unit

Secure the Indoor Unit

- Power supply cord arrangement
- Press the lower left and right side of the unit against the installation plate until hooks engages with their slot (sound click).

Insert the connection cable

Connect the connection cable to the terminal board and control board.

3. FOR THE EMBEDDED PIPING

- Change the drain hose position
- Bend the embedded piping
- Pull the connection cable into Indoor Unit
- Cut and flare the embedded piping
- Install the Indoor Unit
- Connect the piping
- Insulate and finish the piping
- Secure the Indoor Unit

Change the drain hose position

Adjust the piping slightly downwards.

How to pull the piping and drain hose out, in case of the embedded piping.

Apply putty or caulking material to seal the wall opening.

4 AIR TIGHTNESS TEST ON THE REFRIGERATING SYSTEM

AIR PURGING METHOD IS PROHIBITED FOR R32 SYSTEM

- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
- There is no extra refrigerant in the outdoor unit for air purging.

Before system is charged with refrigerant and before the refrigerating system is put into operation, below site test procedure and acceptance criteria shall be verified by the certified technicians, and/or the installer.

Be sure to check whole system for gas leakage.

- Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve. During extremely cold winter, material contraction might happened, try to further tighten the 2-way, 3-way valve to ensure they are fully closed.
- Attach the gauge manifold set correctly and tightly. Make sure that both valves of the manifold gauge (low pressure and high pressure) is in close position.
- Connect the center hose of the manifold gauge to a vacuum pump.
- Turn on the power switch of the vacuum pump, then turn open the low side manifold gauge valve and make sure that the needle in the gauge moves from 0cmHg (0 MPa) to -76 cmHg (-0.1 MPa) or vacuum until 500 microns is achieved. This process continues for approximately ten minutes.
- Then close the low side manifold gauge valve.
- Remove the vacuum pump from the centre hose and connect the center hose to cylinder of any applicable inert gas as test gas.
- Charge test gas into the system and wait until the pressure within the system to reach the min. 1.04 MPa (10.4bar).
- Wait and monitor the pressure reading on the gauges. Check if there is any pressure drop. Waiting time depends on the size of the system.
- If there is any pressure drop, perform step 9-12. If there is no pressure drop, perform step 13.
- Use Gas Leak Detector to check for leaks. Must use the detection equipment with a sensitivity of 5 grams per year of test gas or better.
- Move the probe along the air conditioning system to check for leaks, and mark for repair.
- Any leak detected and marked shall be repaired.
- After repair, repeat evacuation steps 3-4 and tightness test steps 5-7. Check the pressure drop as in step 8.
- If no leak, Recover the test gas. Perform evacuation of steps 3-4. Then proceed to step 14.
- Disconnect the charging hose from the service port of the 3-way valve.
- Tighten the service port caps of the 3-way valve at a torque of 18 Nm with a torque wrench.
- Remove the valve caps of both of the 2-way valve and 3-way valve.
- Open both of the valves, using a hexagonal wrench (4 mm). It is recommended to allow refrigerant slowly flow into the refrigerant system to prevent refrigerant freezing. Slightly open 2-way valve for 5 seconds then close the valve. Repeat this action for 3 cycles then fully open the valve.
- Mount back the valve caps onto the 2-way valve and the 3-way valve to complete this process.

WIRE STRIPPING, CONNECTING REQUIREMENT

RISK OF FIRE JOINING OF WIRES MAY CAUSE OVERHEATING AND FIRE.

Do not joint wires.

Use complete wire without joining.

Use approved socket and plug with earth pin.

Wire connection in this area must follow to national wiring rules.

5 CONNECT THE CABLE TO THE INDOOR UNIT

The indoor and outdoor unit connection cable can be connected without removing the front grille.

- Install the indoor unit on the installing holder that mounted on the wall.
- Open the front panel and grille door by loosening the screw.
- Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed, 4 x 1.5 mm² flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short. Follow the national regulation and legislation for electrical work.
- Bind all the indoor and outdoor Connection cable with tape and route the connection cable via the right side escapement.
- Remove the tapes and connect the connection cable between indoor unit and outdoor unit according to the diagram below.

Terminals on the indoor unit	1	2	3
Colour of wires (connection cable)	White	Blue	Red
Terminals on the outdoor unit	1	2	3

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 INSTALL THE OUTDOOR UNIT

After selecting the best location, start installation to Indoor/Outdoor Unit Installation Diagram.

- Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut (φ10 mm). Make sure unit install in balance level to ensure that water flow out from unit drainage hole.
- When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt, screws or nails.

Model	A	B	C	D
1.0HP, 1.5HP	570 mm	105 mm	18.5 mm	320 mm

3 CONNECT THE PIPING

Connecting The Piping to Indoor

Please make flare after inserting (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Additional Precautions For R32 Models when connecting by flaring at indoor side

- Ensure to do re-flaring of pipes before connecting to units to avoid leaking

Seal sufficiently the flare nut (both gas and liquid sides) with neutral cure (Alkoxy type) & ammonia-free silicone sealant and insulation material to avoid the gas leak caused by freezing.

Apply neutral cure (Alkoxy type) and ammonia-free silicone sealant along the circumference.

Neutral cure (Alkoxy type) & ammonia-free silicone sealant is only to be applied after pressure testing and cleaning up by following instructions of sealant, only to the outside of the connection. The aim is to prevent moisture from entering the connection joint and possible occurrence of freezing. Curing sealant will take some time. Make sure sealant will not peel off when wrapping the insulation.

Connecting The Piping to Outdoor

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge.

Make flare after inserting the flare nut (locate at valve) onto the copper pipe.

Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table.

Piping size	Torque
6.35 mm (1/4")	118 N·m (1.8 kgf·m)
9.52 mm (3/8")	142 N·m (4.3 kgf·m)
12.7 mm (1/2")	55 N·m (5.6 kgf·m)
15.88 mm (5/8")	65 N·m (6.6 kgf·m)
19.05 mm (3/4")	100 N·m (10.2 kgf·m)

Do not overtighten, overtightening may cause gas leakage.

5 CONNECT THE CABLE TO THE OUTDOOR UNIT

- Remove the control board cover from the unit by loosening the screw.
- Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm² flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short. Follow the national regulation and legislation for electrical work.
- Secure the cable onto the control board with the holder (clamping).
- Attach the control board cover back to the original position with screw.

Terminals on the outdoor unit	1	2	3
Colour of wires	White	Blue	Red
Terminals on the indoor unit	1	2	3

Earth wire longer than others AC wires for safety reason

WARNING

This equipment must be properly earthed.

6 PIPING INSULATION

- Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
- If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-ET FOAM with thickness 6 mm or above.

4 AIR TIGHTNESS TEST ON THE REFRIGERATING SYSTEM

AIR PURGING METHOD IS PROHIBITED FOR R32 SYSTEM

- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
- There is no extra refrigerant in the outdoor unit for air purging.

Before system is charged with refrigerant and before the refrigerating system is put into operation, below site test procedure and acceptance criteria shall be verified by the certified technicians, and/or the installer.

Be sure to check whole system for gas leakage.

- Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve. During extremely cold winter, material contraction might happened, try to further tighten the 2-way, 3-way valve to ensure they are fully closed.
- Attach the gauge manifold set correctly and tightly. Make sure that both valves of the manifold gauge (low pressure and high pressure) is in close position.
- Connect the center hose of the manifold gauge to a vacuum pump.
- Turn on the power switch of the vacuum pump, then turn open the low side manifold gauge valve and make sure that the needle in the gauge moves from 0cmHg (0 MPa) to -76 cmHg (-0.1 MPa) or vacuum until 500 microns is achieved. This process continues for approximately ten minutes.
- Then close the low side manifold gauge valve.
- Remove the vacuum pump from the centre hose and connect the center hose to cylinder of any applicable inert gas as test gas.
- Charge test gas into the system and wait until the pressure within the system to reach the min. 1.04 MPa (10.4bar).
- Wait and monitor the pressure reading on the gauges. Check if there is any pressure drop. Waiting time depends on the size of the system.
- If there is any pressure drop, perform step 9-12. If there is no pressure drop, perform step 13.
- Use Gas Leak Detector to check for leaks. Must use the detection equipment with a sensitivity of 5 grams per year of test gas or better.
- Move the probe along the air conditioning system to check for leaks, and mark for repair.
- Any leak detected and marked shall be repaired.
- After repair, repeat evacuation steps 3-4 and tightness test steps 5-7. Check the pressure drop as in step 8.
- If no leak, Recover the test gas. Perform evacuation of steps 3-4. Then proceed to step 14.
- Disconnect the charging hose from the service port of the 3-way valve.
- Tighten the service port caps of the 3-way valve at a torque of 18 Nm with a torque wrench.
- Remove the valve caps of both of the 2-way valve and 3-way valve.
- Open both of the valves, using a hexagonal wrench (4 mm). It is recommended to allow refrigerant slowly flow into the refrigerant system to prevent refrigerant freezing. Slightly open 2-way valve for 5 seconds then close the valve. Repeat this action for 3 cycles then fully open the valve.
- Mount back the valve caps onto the 2-way valve and the 3-way valve to complete this process.

CUTTING AND FLARING THE PIPING

- Please cut using pipe cutter and then remove the burrs.
- Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
- Please make flare after inserting the flare nut onto the copper pipes.

Improper flaring

Included Surface, Cracked, Uneven thickness

When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

HOW TO TAKE OUT FRONT GRILLE

Please follow the steps below to take out front grille if necessary such as when installing or servicing.

- Set the vertical airflow vane to slightly downward.
- Slide the 2 knobs on the upside of front grille away from the center to release them.
- Open front panel.
- Remove the 1 screw on the front grille as shown in the illustration.

When reinstalling the front grille, carry out above steps in the reverse order.

After sliders are slide to lock position, please confirm front grille is securely fixed by pulling the front grille towards you.

DISPOSAL OF OUTDOOR UNIT DRAIN WATER

If a drain elbow is used, the unit should be placed on a stand which is taller than 5 cm.

If the unit is used in an area where temperature falls below 0°C for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

CHECK THE DRAINAGE

- Open front panel and remove air filters.
- Drainage checking can be carried out without removing the front grille.
- Pour a glass of water into the drain tray-styrofoam.
- Ensure that water flows out from drain hose of the indoor unit.

EVALUATION OF THE PERFORMANCE

- Operate the unit at cooling/heating operation mode for fifteen minutes or more.
- Measure the temperature of the intake and discharge air.
- Ensure the difference between the intake temperature and the discharge is more than 8°C during Cooling operation or more than 14°C during Heating operation.

INSTALLATION OF FILTER

- Open the front panel.
- Remove the air filters.
- Put the air purifier filter into place as shown in illustration at right.

IN CASE OF REUSING EXISTING REFRIGERANT PIPING

Observe the followings to decide reusing the existing refrigerant piping.

- Poor refrigerant piping could result in product failure.
- In the circumstances listed below, do not reuse any refrigerant piping. Instead, make sure to install a new piping.
 - Heat insulation is not provided for either liquid-side or gas-side piping or both.
 - The existing refrigerant pipe has been left in an open condition.
 - The diameter and thickness of the existing refrigerant piping does not meet the requirement.
 - The piping length and elevation does not meet the requirement.
- Perform proper pump down before reuse piping.
- In the circumstances listed below, clean it thoroughly before reuse.
 - Pump down operation cannot be performed for the existing air-conditioner.
 - The compressor has a failure history.
 - Oil color is darken. (ASTM 4.0 and above)
 - The existing air-conditioner is gas/oil heat pump type.
- Do not reuse the flare to prevent gas leak. Make sure to install a new flare.
- If there is a welded part on the existing refrigerant piping, conduct a gas leak check on the welded part.
- Replace deteriorated heat insulating material with a new one.
- Heat insulating material is required for both liquid-side and gas-side piping.

Insulating Pump Down Method

- Operate air conditioner at cooling mode for 10 ~ 15 minutes.
- After 10 ~ 15 minutes of pre operation, close 2-way valve. After 3 minutes, close 3-way valve.
- Take out air conditioner unit.
- Install New Refrigerant air conditioner.

Most Important Process: To make the oil & refrigerant mix together. They are in separate condition when air conditioner is stopped.

Mixed refrigerant & oil will be collected into outdoor unit.

Only very small amount of oil remain inside piping, which is acceptable.

CHECKING ITEMS

<input type="checkbox"/> Is there any gas leakage at flare nut connections?	<input type="checkbox"/> Is the cooling/heating operation normal?
<input type="checkbox"/> Has the installation been carried out at flare nut connection?	<input type="checkbox"/> Is the thermostat operation normal?
<input type="checkbox"/> Is the connection cable being fixed to terminal board firmly?	<input type="checkbox"/> Is the remote control's LCD operation normal?
<input type="checkbox"/> Is the connection cable being clamped firmly?	
<input type="checkbox"/> Is the drainage ok? (Refer to "Check the drainage" section)	
<input type="checkbox"/> Is the indoor unit connection properly done?	
<input type="checkbox"/> Is the earth wire properly hooked to the installation plate?	
<input type="checkbox"/> Is the power supply voltage complied with rated value?	
<input type="checkbox"/> Is there any abnormal sound?	

ENGLISH

ACXF60-5110

PRINTED IN MALAYSIA

SCREW CHASSIS TO INSTALLATION PLATE

Fasten the chassis to the installation plate with screws (Self purchase, Screw size: M4, max. length 10 mm) to provide a neat appearance of indoor unit.


Please refer column "How to take out front grille" to remove the front grille.

AUTO SWITCH OPERATION

The below operations will be performed by pressing the "AUTO" switch.

- AUTO OPERATION MODE**
The Auto operation will be activated immediately once the Auto Switch is pressed and release within 5 sec.
- TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)**
The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec.
A "peep" sound will occur at the fifth sec., in order to identify the starting of Test Run operation.
- HEATING TRIAL OPERATION**
Press the "AUTO" switch continuously for more than 8 sec. to below 11 sec. and release when a "peep" sound is occurred at eight sec. (However, a "peep" sound is occurred at fifth sec.)
The "AC Reset" button once.
Remote controller signal will activate operation to force heating mode.
- REMOTE CONTROLLER RECEIVING SOUND OFF**
The ON/OFF of Remote controller receiving sound can be change over by the following steps:
a) Press "AUTO" switch continuously for more than 16 sec. to below 21 sec.
A "peep", "peep", "peep" sound will occur at the sixteenth sec.
b) Press the "AC Reset" button once, "peep" sound will occur indicates that Remote controller receiving sound setting mode is activated.
c) Press "AUTO" switch again, Everytime "AUTO" switch is pressed (within 60 sec. interval), Remote controller receiving sound status will be reversed between ON and OFF.
Long "peep" sound indicates that Remote controller receiving sound is ON.
Short "peep" sound indicates that Remote controller receiving sound is OFF.

安裝說明 空調器

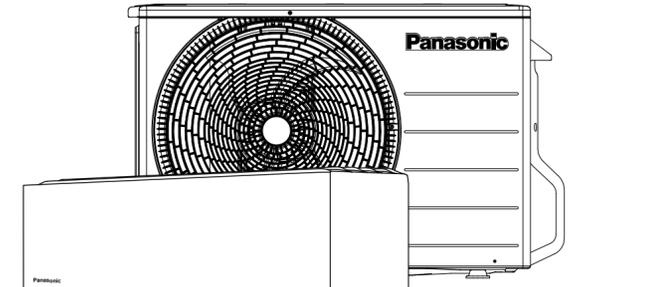

型號：CS/CU-RZ9*** (1.0HP) CS/CU-RZ12*** (1.5HP)

注意 R32 冷媒 此空氣調節機包含 R32 冷劑進行安裝或維修。須由具備資質的人員對此產品進行安裝或維修。對於此產品進行安裝、保養或維修之前，請參閱國家、州、地區和地方法律、條例、法規、安裝和維修手冊。

對於因詳細手冊中未描述的任何不當安裝而導致的任何事故或損壞，Panasonic 概不負責。由不正確的安装引起的故障也不在產品保修範圍內。

室內機或室外機顯示的符號說明。警告：這行號顯示這個設備使用了一種極易燃的冷劑。如果冷劑與外部點火源一起洩漏，則有可能引起。注意：這行號表示應該仔細閱讀安裝手冊。注意：此符號表示檢修人員應參照“安裝手冊”處理此設備。注意：此行號表示操作手冊和/或安裝手冊中包含了信息。

使用 R32 冷劑注意事項

請密切注意以下幾點和安裝工作程序。

警告 本設備應儲存、安裝并工作於通風良好的空間內，室內面積大於 A_min (m²) 並且不存在任何連續操作的點火源。遠離明火。任何工作中的燃氣設備或任何工作中的電熱器，否則，可能發生爆炸，導致受傷或死亡。禁止在系統內混合不同的冷劑。為安全起見，使用 R32 和 R410A 冷劑的型號具有不同的充填端口螺紋直徑，以防錯誤充入 R32 冷劑。

2-10. 電氣設備檢查 電氣設備的維修和保養應包括初始安全檢查和部件檢查程序。初次安全檢查應包括但不限於：電容器已放電；應以安全方式完成放電，避免產生火花。

3. 密封部件維修 維修密封部件期間，在拆下密封蓋之前，應將待作業的設備斷開所有電源。如果在檢修期間必須為設備接通電源，則應在關鍵點進行持續洩漏偵測，為潛在的危險情況提供預警。

4. 本質安全部件維修 切勿為電路施加任何固定電感負載或電容負載，除非可確保負載不會超過所用設備的容許電壓和電流。當存在易燃空氣時，本質安全部件是唯一可以進行作業的類型。

5. 洩漏 檢查以確保電纜不會受到磨損、腐蝕、超壓、振動、線路或任何其他不良環境影響。此檢查還應考慮老化或者壓縮機或風扇等持續振動的影響。

6. 可燃性冷劑的偵測 探測或偵測冷劑洩漏時，在任何情況下，均不得使用潛在的點火源。不得使洩漏處（或使用明火的任何其他偵測器）。以下洩漏檢測方法適用於所有冷劑系統。

7. 排放和抽空 當介入冷劑迴路進行維修時或進行任何其他操作時，應遵循規程充步驟。而且，遵循最佳作業規範至關重要，因為可燃性是一個考慮因素。

8. 充填步驟 除常規充填步驟外，應遵循以下要求。使用充填設備時，確保不會出現不同冷劑的污染物。

9. 回收 執行此程式之前，技術人員須熟悉本設備及其全部詳情。建議選擇良好作業規範，所有冷劑均應安全回收。在執行此項任務之前，應獲取冷劑機和冷劑樣本，以防再用所回收的冷劑之前需要進行分析。

10. 添加標籤 應為設備添加標籤，說明設備已經停用並且冷劑已排空。標籤應當注明日期并簽名。

11. 回收 當出於檢修或停用設備之目的從系統排放冷劑時，建議選擇良好作業規範，所有冷劑均應安全排放。當將冷劑輸送至銅網中時，應確保其使用適當的冷劑回收設備。

安裝時所需的工具 1 螺絲起子 2 水平儀 3 電鑽，空芯鑽 (直徑 Ø70 mm) 4 六角扳手 (4 mm) 5 扳手 6 剪管器 7 擴孔器 8 刀 9 漏氣偵查器 10 帶尺 11 溫度計 12 高阻表 13 萬用電表 14 真空泵 15 真空規管 16 扭力扳手 18 N·m (1.8 kg·m) 42 N·m (4.3 kg·m) 55 N·m (5.6 kg·m) 65 N·m (6.6 kg·m) 100 N·m (10.2 kg·m)

選擇最佳位置 室內機 切勿將機組安裝到油煙過多的區域，如：廚房、車間等。機組附近應沒有任何熱源和蒸氣。不應有任何阻礙空氣流通的障礙物。

安全措施 安裝之前請仔細閱讀此“安全措施”。電氣工作必須由授權技工安裝。請務必使用有正確額定電壓的插頭與主電路。請務必遵照所述注意事項，因為其重要內容與您的安全息息相關。

1. 一般 必須確保管件的安裝應保持在最低限度。避免使用凹進的管道，不容許存在銳角彎曲。必須確保管件免受實質損傷。必須遵循國家法規、州市政規定和法律。

2. 檢修 2-1. 工作人員資格 參與冷劑迴路工作介入冷劑迴路的任何具備資質的人員均應持有由行業認可之評估機構頒發的當前有效證書，該評估機構授權他們有能力依照業內公認的評估規範安全操作冷劑。

2-2. 檢查該區域 開始在包含可燃性冷劑的系統上作業之前，必須進行安全檢查，以確保將引燃之風險降至最低。對製冷系統進行維修時，開始在系統上作業之前，必須遵循第 2-3 部分至第 2-7 部分的注意事項。

2-3. 作業程序 應按照可控的程式進行作業，以便將工作期間存在可燃氣體或蒸汽的風險降至最低。

2-4. 一般作業區域 應將所進行作業之性質告知在該區域內作業的所有護人員和其他人員并予以監督。避免在局限空間內作業，務必確保距離額頭至少 2 米的安全距離，或半徑至少半徑 2 米的自由空間區域。

2-5. 檢查是否存在冷劑 在作業之前及作業過程中，應使用適當的冷劑偵測器檢測該區域，確保技術人員知曉潛在的易燃空氣。確保所使用的洩漏偵測設備適用於可燃性冷劑，即，無火花、充分密封或本質安全。

2-6. 備有滅火器 若要在製冷設備或任何相關零件上進行任何高溫作業，應確保適當的滅火設備隨時可供使用。充填區域附近應配置乾粉滅火器或 CO₂ 滅火器。

2-7. 無點火源 應務必小心不要過度充填製冷系統。再充系統時，應使用無氣測試系統之壓力 (參閱第 7 部分)。充完成時，應在試運轉之前進行漏氣檢查。

2-8. 通風區域 介入系統或進行任何高溫作業時，應確保該區域寬敞或充分通風。進行作業期間應保持一定的通風。通風應當能夠安全分散任何洩漏的冷劑，最好將其驅散至外部環境中。

2-9. 製冷設備檢查 更換電氣部件時，該電氣部件應符合預期用途并具備正確的規格。始終應遵循製造商的保養和檢修規範。

2-10. 回收 當出於檢修或停用設備之目的從系統排放冷劑時，建議選擇良好作業規範，所有冷劑均應安全排放。當將冷劑輸送至銅網中時，應確保其使用適當的冷劑回收設備。


室內/室外裝機圖 電源電線長度 約 650 mm 約 1550 mm 導管方向 右 (正面) 右後 左後 左下 左 右 右前 右後 左前 左下

將遙控器支架固定到牆面上 遙控器支架固定螺絲 (A) 遙控器 (B) 遙控器支架 (C) 遙控器 (D) 遙控器支架 (E)

室內機

1 選擇最佳位置 (請參閱“選擇最佳位置”)


2 如何固定安裝板

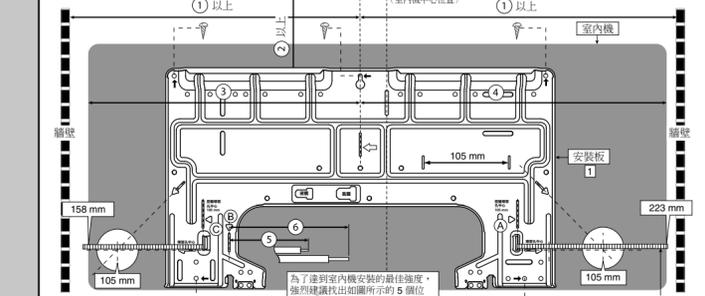

尺寸	1	2	3	4	5	6
尺寸	465 mm	68 mm (+)	350 mm	415 mm	71 mm	120 mm

- 安裝板的中心點到左及右邊牆的距離應大於 ①。
- 從安裝板邊緣到天花板的距離應大於 ②。
- 從安裝板中心到本機的左側為 ③。
- 從安裝板中心到本機的右側為 ④。

3 在牆上鑽孔及安裝導管

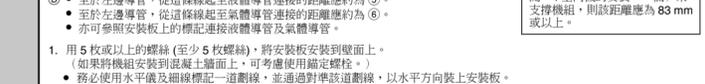

1. 將導管套管插入孔中。
2. 為套管裝上襯套。
3. 切斷套管，讓牆外側留約 15 mm 長的套管。

注意
當牆壁為空心結構時，務請使用管套管，以防止老舊吸塵連接電線而導致的危險。


4. 最後，用油灰或填縫膠封住套管。

4 室內機的安裝

1. 右後導管的安裝



2. 右邊和右下部導管的安裝

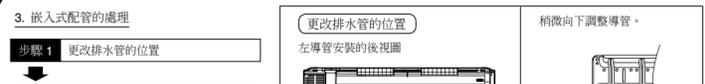

3. 固定室內機



4. 電源電纜整理



5. 取出機組



6. 插入連接電纜



3 嵌入式配管的處理

- 步驟 1 更改排水管的位



- 步驟 2 將嵌入式導管弄彎



- 步驟 3 引導連接電纜進入室內機




- 步驟 4 切割和擴大嵌入式導管




- 步驟 5 安裝室內機



- 步驟 6 連接管子

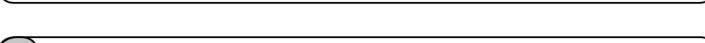

- 步驟 7 為導管進行隔熱及成型處理

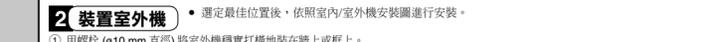

- 步驟 8 固定室內機

(這適用於左右導管。)

5 將電纜連接到室內機

室內和室外機連接電纜可以在不拆除前格柵的情況下進行連接。

1. 將室內機安裝在牆壁上的安裝支架。
2. 鬆開螺絲後打開前面板。格柵門。
3. 室內和室外的連接電纜應採用符合規格的 4 x 1.5 mm² 軟線，類型標明為 60245 IEC 57 或更重的電纜。切勿使用接線連接電纜。若現有 (隱藏配線或其他) 電纜太短，請更換之。應遵循有關電氣工作的國家法規和法律。
4. 用膠帶標起所有室內機和室外機的連接電纜，並將連接電纜連至左邊出口。
5. 如下圖所示，移除膠帶及連接室內機和室外機之間的連接電纜。



室內機組上的端子	1	2	3
電纜的顏色 (連接電纜)	藍色	綠色/黃色	紅色
室外機組上的端子	1	2	3

4 製冷系統氣密測試

1. 切勿使用冷媒劑排除系統內的空氣，而應使用真空泵為裝置抽真空。
2. 室外機內不存在額外冷劑劑用於排除空氣。

- 在為系統充填冷劑劑之前以及製冷系統投入工作之前，應由認證的技術人員和/或安裝工對下方現場測試程式和驗收原則予以核實。
- 請務必檢查整個系統是否存在氣密洩漏。



3. 若無洩漏，回收測試氣體。執行抽
4. 拆除連接至三向閥的維修端口的裝載導管。
5. 使用轉矩扳手施以 18 Nm 的轉矩將三向閥的維修端口蓋子緊壓。
6. 打開雙向閥和三向閥的閘蓋。
7. 使用六角扳手 (4mm) 打開這兩個閘蓋。建議讓冷劑劑緩慢流入冷劑劑系統，以防止冷劑劑凍結。稍微打開雙向閥 5 分鐘，然後關閉閘蓋。重複此操作 3 次，以確保完全打開閘蓋。
8. 將閘蓋安裝回雙向閥和三向閥，完成此過程。



5 將電纜連接到室外機

1. 旋轉螺絲釘以取下控制板蓋。
2. 室內和室外的連接電纜應採用符合規格的 4 x 1.5 mm² 聚氯乙稀絕緣電纜 (編號 60245 IEC 57)，或負荷更高的電纜。切勿使用接線連接電纜。若現有 (隱藏配線或其他) 電纜太短，請更換之。應遵循有關電氣工作的國家法規和法律。




室外機組上的端子	1	2	3
電纜的顏色	藍色	綠色/黃色	紅色
室內機組上的端子	1	2	3

3. 用固零件 (夾扣) 把電纜牢固定在控制板上。
4. 以螺絲釘將控制板蓋安裝回原來的位。
5. 欲瞭解線路和連接要求，請參閱安裝說明。

6 喉管隔絕

1. 請如室內室外機安裝圖所示在配管連接部分進行絕緣。請將已絕緣的管子末端包好，以防止水滲進管子內。
2. 如果排水管或連接配管位於室內 (露滴將形成)，請使用厚度至少 6 mm 或以上的聚乙烯泡沫增加絕緣。

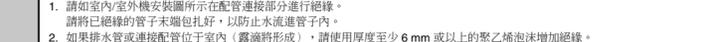

如何取出前格柵

若有必要，如進行安裝或維修服務，請跟從以下步驟取出前格柵。

1. 將蓋片滑至稍向下。
2. 將格柵上方的 2 個旋鈕從中心向兩側滑動以解鎖。
3. 打開前板。
4. 如圖所示，將前格柵的 1 個螺絲卸下。



5. 將前格柵的 2 個旋鈕滑動至解鎖位置。
6. 將前格柵朝自己方向拉出，以取出前格柵。

當重新安裝前格柵時，按相反的顺序執行上述步驟。

滑軌移動到鎖止位置後，請將前格柵向身體方向輕輕拉扯，確認前格柵已牢固鎖止。

用螺絲將機箱安裝在安裝板上

用螺絲將機箱固定在安裝板上 (需要自備，螺絲尺寸 M4，最大長度為 10 mm)，以保持室內機外觀整潔。




請參閱“如何取出前格柵”以取出前格柵。

自動開關操作

1. 自動開關操作

1. 自動開關操作：一旦按下“自動開關”開關並在 5 秒內鬆開，自動操作將立即生效。
2. 遙控器接收器 (用於抽氣機修訂)：如果持續按自動按鍵 5 至 8 秒鐘，試運轉操作將被激活。“噠”聲在第 5 秒時將會響起，以顯示測試已開始操作。
3. 制熱測試操作：持續按“AUTO”按鍵 8 至 11 秒鐘，然後在第八秒鐘聽到“噠”聲時響聲 (請注意在第五秒鐘時會發出“噠”聲)。然後按遙控器“AC Reset”按鍵一次。遙控器接收器將開始制熱測試操作。
4. 遙控器接收器的開關：按下列步驟更改：
 - a) 持續按“AUTO”按鍵 16 至 21 秒鐘。在第十六秒時會發出“噠”、“噠”、“噠”聲。
 - b) 按下“AC Reset”按鍵一次，您將會聽到“噠”聲，表示遙控器接收器設定模式已被關閉。

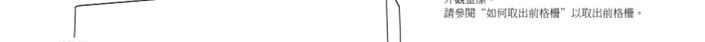

如何處理室外機排出的水

- 若使用排水管，本機應該被放置在高度 5 cm 的架子上。
- 若本機使用地點的溫度會連續 2 至 3 天降低至 0°C 以下，我們建議您不要使用排水管，因為排水水將會凝結並導致風扇停止轉動。

檢查排水

1. 打開前面板，然後取下空氣過濾器。
2. 排水檢查可在不卸下前格柵的情況下進行。
3. 往排水托盤或接水盤倒一杯水。
4. 確保水從室內機的排水管流出。



性能評估

- 在製冷/暖操作模式下運轉機組十五分鐘或更長的時間。
- 測量進氣和排氣溫度。
- 確保進氣和排氣之間的溫差在制熱操作模式下超過 8°C，而在制暖操作模式下則是超過 14°C。

備註：
● 在冬季，請在測試運行前打開電源並至少等待 15 分鐘。
● 預留足夠的時間預熱冷劑劑並防止斷路器誤動作。

安裝過濾器

1. 打開前面板。
2. 取下空氣過濾器。
3. 將空氣淨化過濾器置入如右圖所示的位置。



在重新使用現有冷劑配管的情況下

- 當決定重新使用現有冷劑配管時，請遵從以下事項。
- 不良的冷劑配管可能導致洩漏。
- 在下列情況下，請勿迴圈再用任何冷劑配管，反之請確保安裝新的配管。
 - 沒有配備熱絕緣於液體側或氣體側配管或兩者。
 - 現有冷劑配管處於打開狀態。
 - 現有冷劑配管的直徑和厚度不符合要求。
 - 配管長度有較高百分比的要求。

- 在重新使用配管之前，請進行正確的抽氣。
- 在以下情況下，請在重新使用前徹底清潔。
 - 現有配管的抽氣操作無法進行。
 - 配管有腐蝕。
 - 配管機油顏色變深 (ASTM 4.0 及以上版本)。
 - 現有配管是變質油熱熱型。
- 請勿迴圈再用開口以避免漏氣。請確保在安裝新的配管。
- 如果現有冷劑配管有被焊接的部分，在被焊接後進行通氣檢查。
- 更換冷劑配管。
- 熱絕緣必需用於液體側和氣體側配管。

正確的抽氣方法

1. 在製冷模式下運轉空調 10 - 15 分鐘。
2. 操作 10 - 15 分鐘後，關閉雙向閥。
3. 取出空氣調節器機組。
4. 安裝新的冷劑劑。

目的過程
● 使機油和冷劑劑混合在一起。當空調器停止此過程時，它們將處於此狀態。

- 只有極少量的油留在機組內。這是可以接受的。

檢查項目

- 機口螺絲連接是否有任何氣體洩漏?
- 機口螺絲連接是否已進行了隔熱處理?
- 連接電纜是否已穩固地接到端子上?
- 連接電纜的尾端是否已適當封好?
- 排水是否良好? (請參閱“檢查排水”章節)
- 地線是否已正確地接到安裝板?
- 電源電線是否符合額定值?
- 是否有任何異聲?

- 製冷/暖操作是否正常?
- 溫器操作是否正常?
- 遙控器的 LCD 操作是否正常?

